

Kit Instructions

Integrated Customer Scanner

7879-K151
Issue B



The product described in this book is a licensed product of NCR Corporation.

NCR is a registered trademark of NCR Corporation. NCR RealPOS is a trademark of NCR Corporation in the United States and/or other countries. Other product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Where creation of derivative works, modifications or copies of this NCR copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR, NCR's copyright notice must be included.

It is the policy of NCR Corporation (NCR) to improve products as new technology, components, software, and firmware become available. NCR, therefore, reserves the right to change specifications without prior notice.

All features, functions, and operations described herein may not be marketed by NCR in all parts of the world. In some instances, photographs are of equipment prototypes. Therefore, before using this document, consult with your NCR representative or NCR office for information that is applicable and current.

To maintain the quality of our publications, we need your comments on the accuracy, clarity, organization, and value of this book. Please use the link below to send your comments.

Email: FD230036@ncr.com

Copyright © 2015, 2016
By NCR Corporation
Duluth, GA U.S.A.
All Rights Reserved


Revision Record

Issue	Date	Remarks
A	May 2015	First Issue
B	Aug 2016	Updated Programming Worksheets illustrations

Integrated Customer Scanner

The Integrated Customer Scanner (ICS) is located on the back of the Tower Cabinet (Cosmetic Cover) and can be used by the customer to scan items such as coupons. This includes printed coupons and coupons displayed on an electronic device such as a Smart Phone.

Components

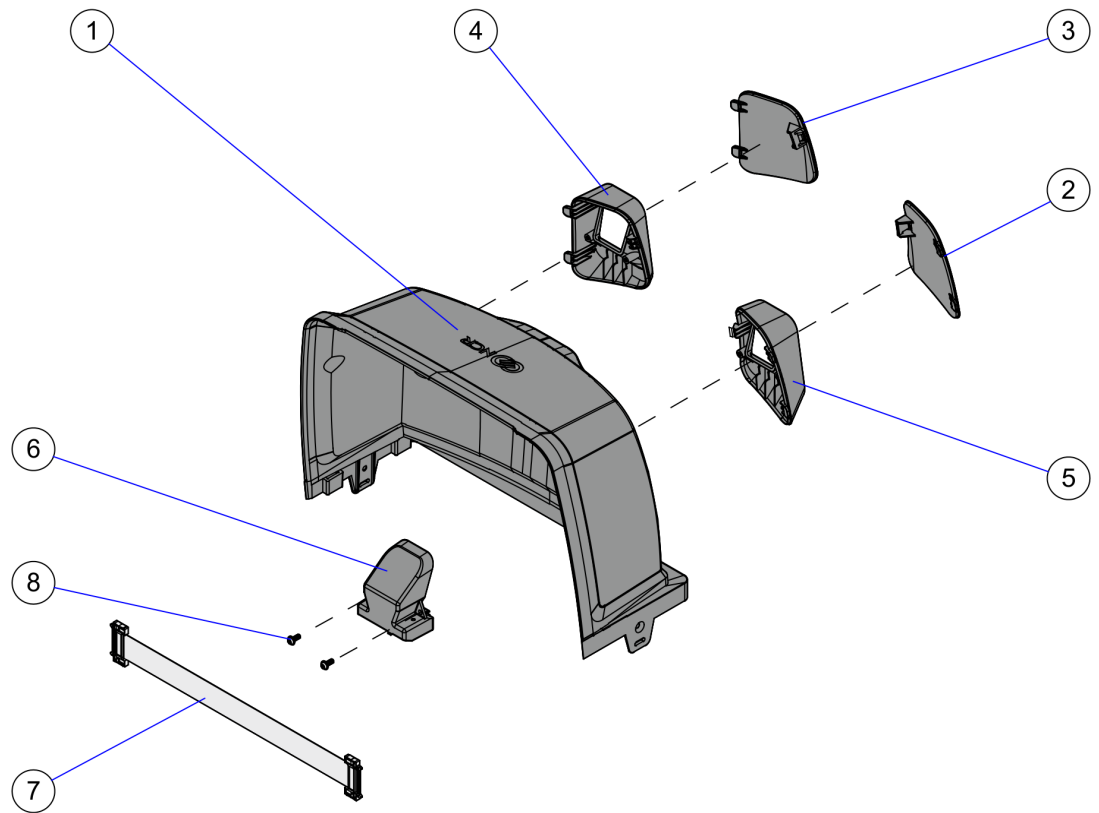


CCP-60137

Item	Part Number	Description
1	497-0504975	Cosmetic Tower
2	497-0501285	Cosmetic Cover, Blank, Right
3	497-0501286	Cosmetic Cover, Blank, Left
4	497-0501287	Customer Camera Shroud, Right
5	497-0501288	Customer Camera Shroud, Left
6	497-0501858	Rear Camera Assembly
7	497-0502200	Harness, Latching, Shielded, 41 Pins, 0.5mm, 26cm Length
8	006-8624571	Screw, WN1411 K30 X 8 Phillips OVL HD PT SCR Steel Zinc


Tool Required

- #1 Phillips screwdriver

Installation Procedure

 **Caution:** Before performing the procedures indicated below, remove power from the NCR 7879.

Remove the Top Plate

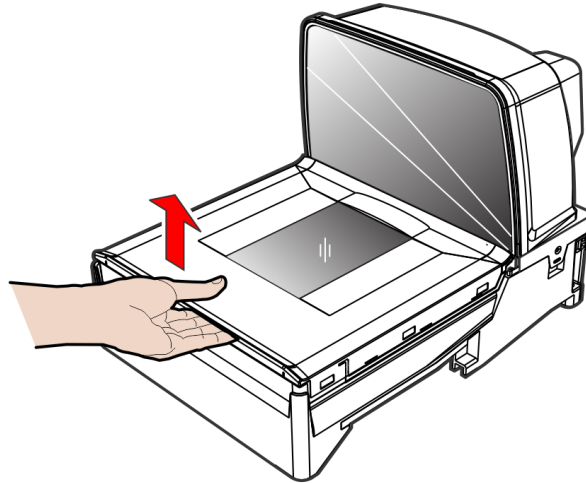

32656


1. Hold the front edge of the Top Plate between your fingers.
2. Lift the Top Plate to remove it from the NCR 7879.

Remove the NCR 7879 from Checkstand



Note: This procedure is for NCR 7879 scanners that are installed in a Checkstand. If a Checkstand is not used, skip to "Remove the Old Tower Cabinet" section.

1. Holding the handles on the back of the Tower Cabinet and the front of the Debris Guard, slowly lift the NCR 7879 out of the Checkstand.

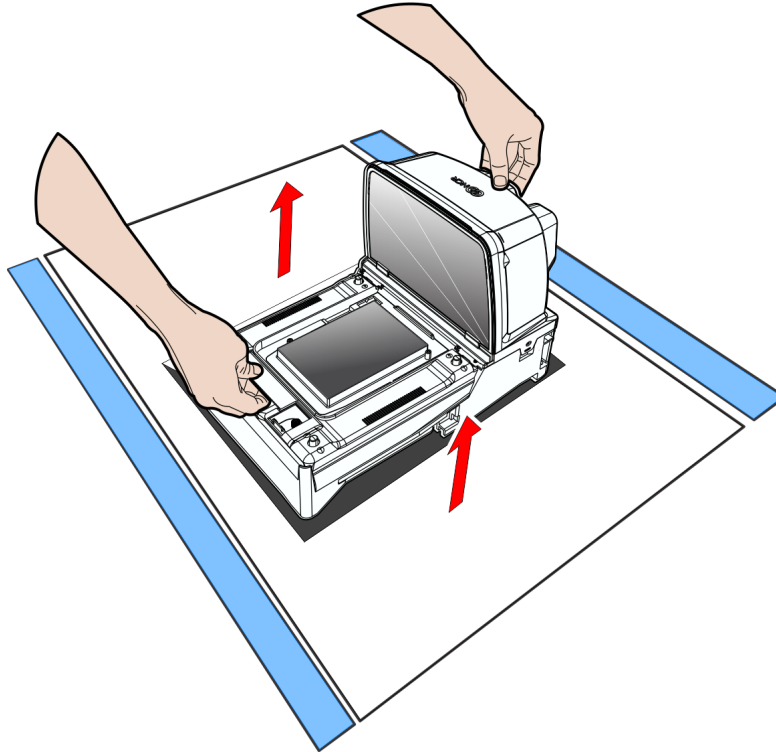

CCP-60171

2. Place the NCR 7879 on a flat surface.




Note: If cables prevent the unit from sitting on a flat surface, disconnect the cables.

3. Proceed to the "Remove the Old Tower Cabinet" section..

Remove the Old Tower Cabinet


The Tower Cabinet is secured with two Latches, one on each side.

1. The Latches may be secured with a Screw; however, Screws are not installed during manufacturing. If Screws are being used, remove them so that the Latches are permitted to move out and release from the Horizontal Base Assembly.

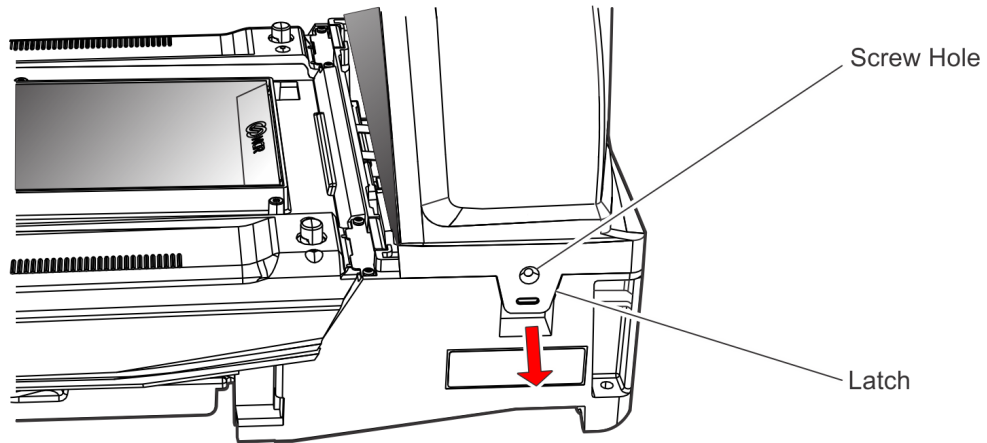

33154

2. Move the two Latches toward the outside of the scanner to release them.

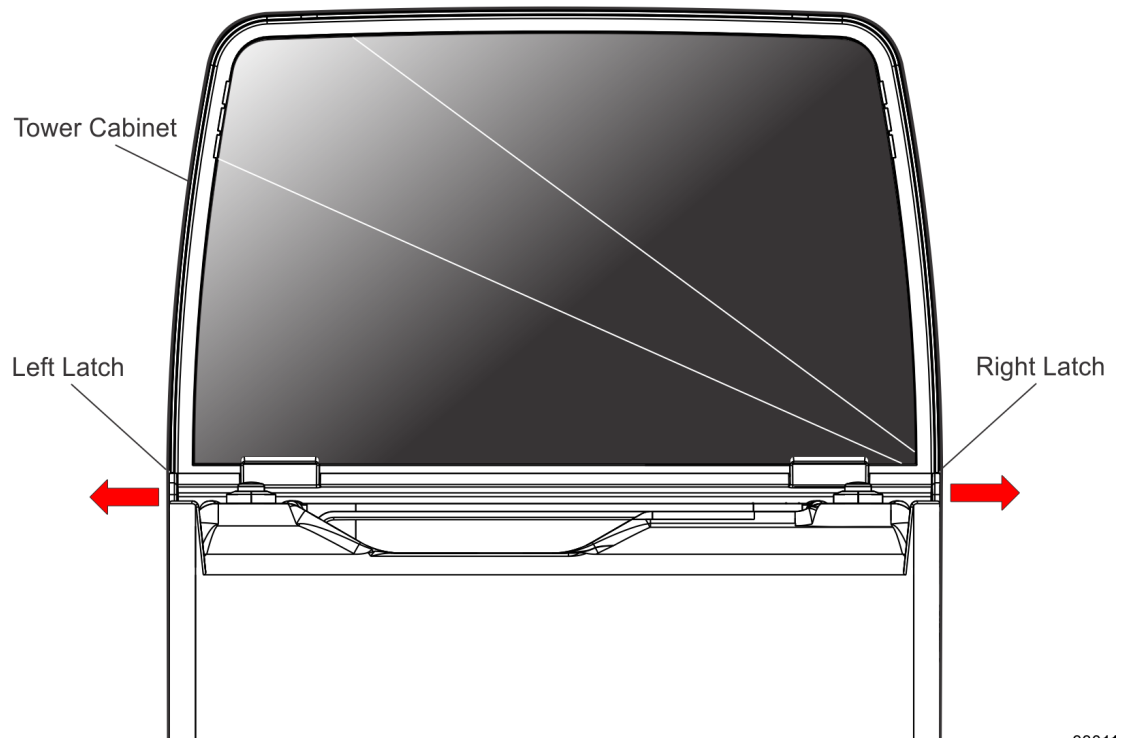


33011

3. While holding the Latches out, lift the old Tower Cabinet up and off the NCR 7879.



Note: The old Tower Cabinet may be discarded.

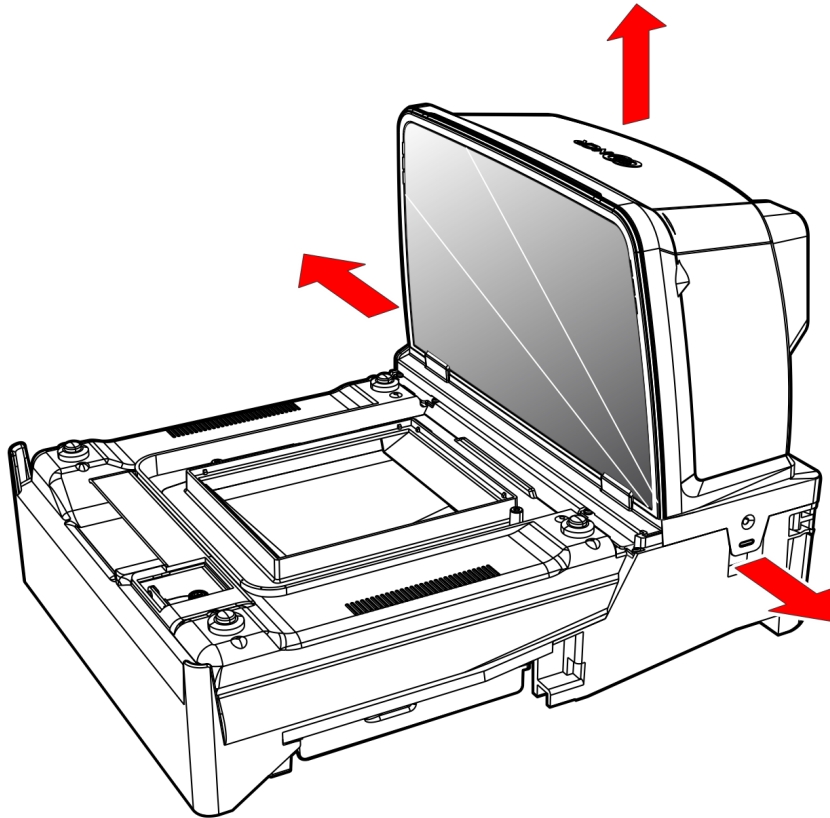

Install the Integrated Customer Scanner




Caution: Do not remove the ESD Protection Pads (gaskets) from the K151 Tower Cabinet.

The Tower Cabinet that comes with the ICS kit has two holes on the back, and the ICS can be mounted on either side of the Tower Cabinet. The side without the ICS is fitted with a Blank Cosmetic Cover.


1. Attach the Rear Camera Assembly to a Customer Camera Shroud and secure using two Mounting Screws.



Note: To avoid damage to the ICS parts, be careful not to overtighten the screws.

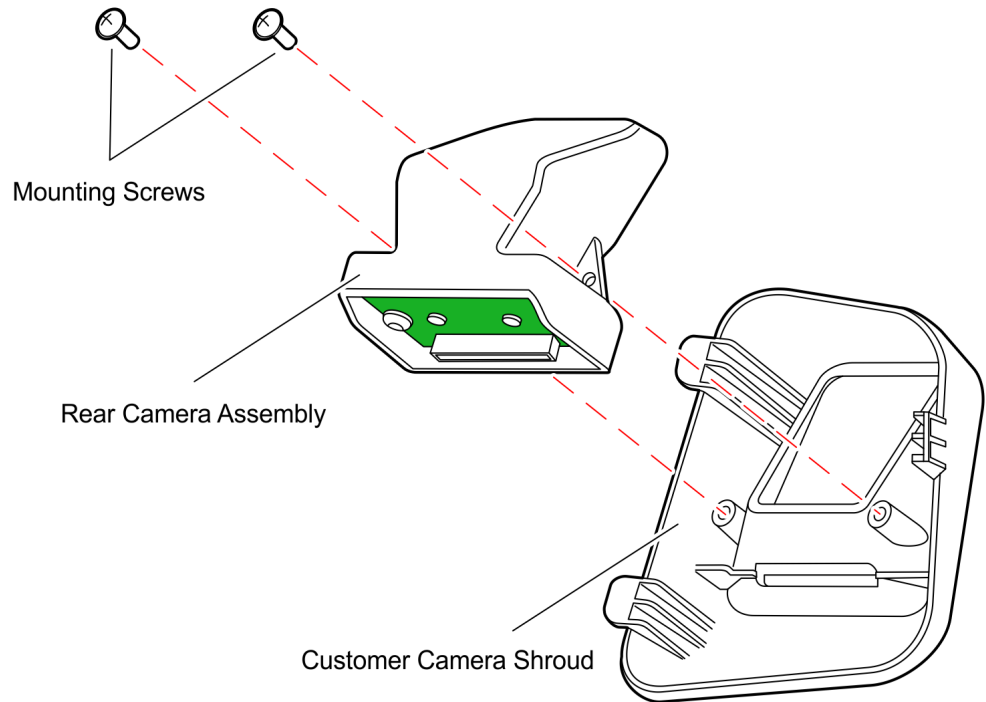

2. Mount the Customer Camera Shroud with Rear Camera Assembly through the corresponding hole and secure with three latches.

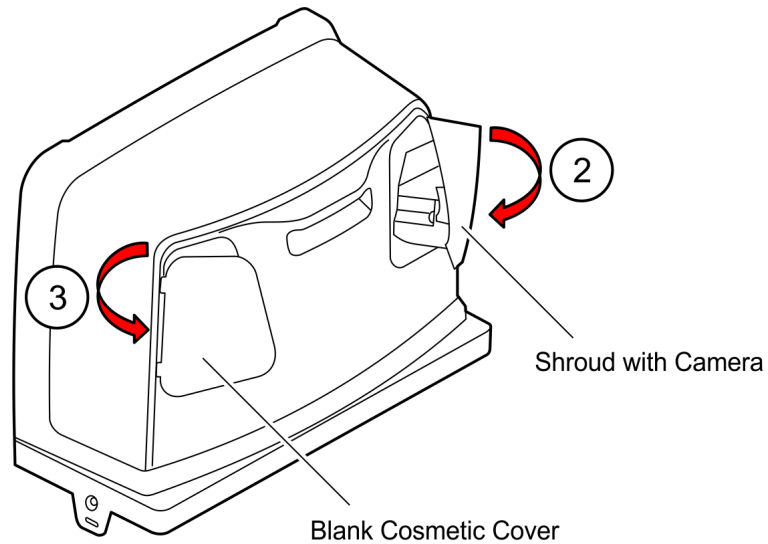


CCP-60174

3. Mount a Blank Cosmetic Cover through the other hole of the K151 Tower Cabinet and secure with three latches.
4. Connect one end of the Customer Camera Cable to the Rear Camera Assembly (**A**) and the other end to the NCR 7879 Digital Board (**B**) found at the back of the unit. Follow the proper cable routing for Right-hand (**C1**) and Left-hand (**C2**) setup.




Note: Ensure that the Customer Camera Cable is **not** creased.

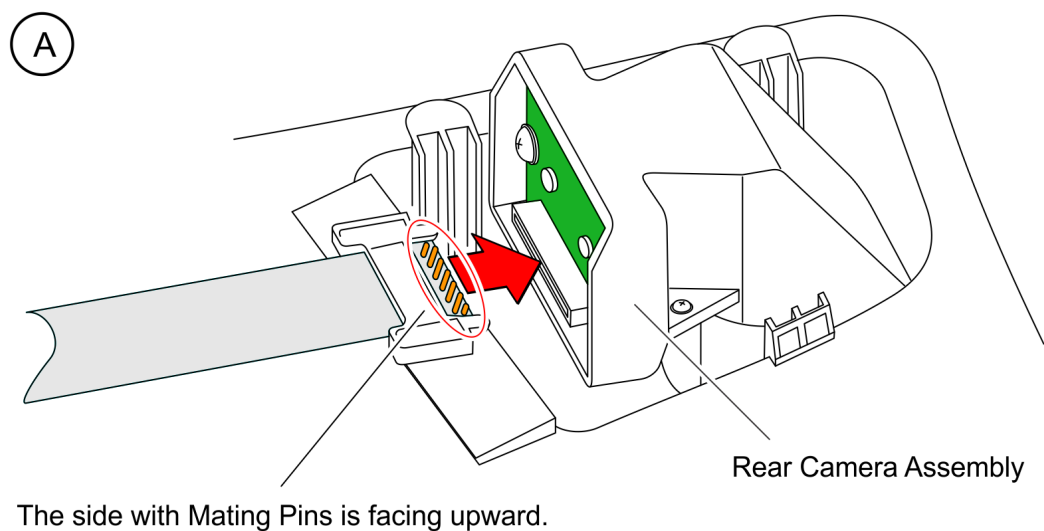

CCP-60175


(B)

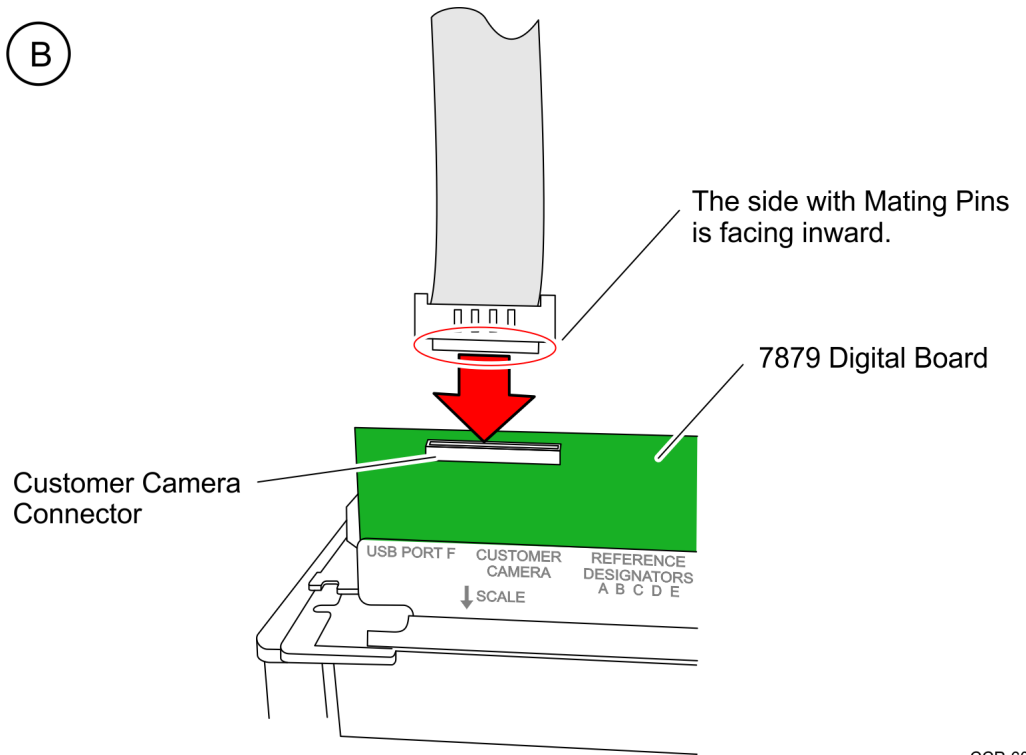

CCP-60176


(C1)

Customer Camera Cable routed from Right-hand Rear Camera Assembly to 7879 Digital Board

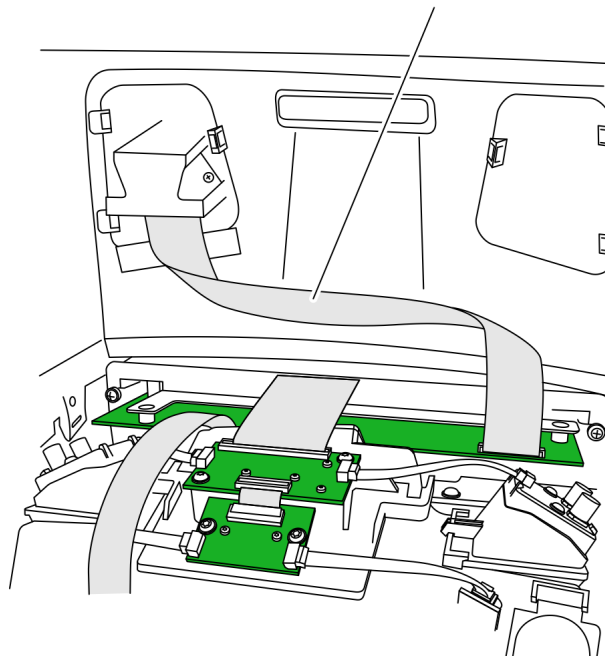

CCP-60177


C2

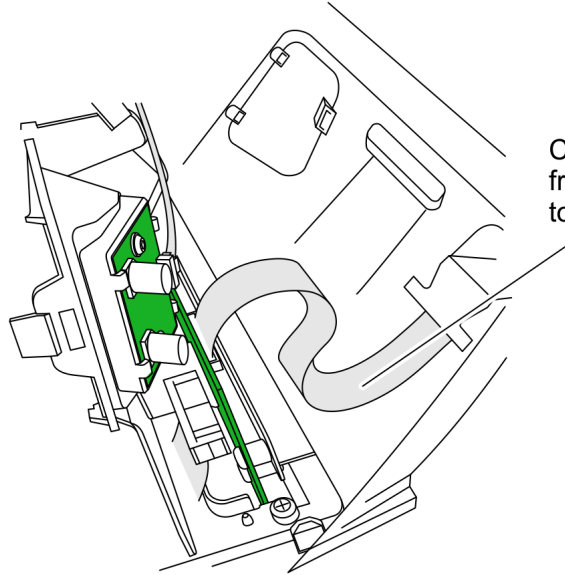

Customer Camera Cable routed from Left-hand Rear Camera Assembly to 7879 Digital Board

Install the K151 Tower Cabinet

1. Carefully position the K151 Tower Cabinet down over the Tower Assembly. Make sure it is properly positioned on the NCR 7879 so that the Side Latches can engage.
2. Slide the K151 Tower Cabinet down to engage the latches.
3. Slightly push the Latches toward the center of the scanner to make sure they are engaged.

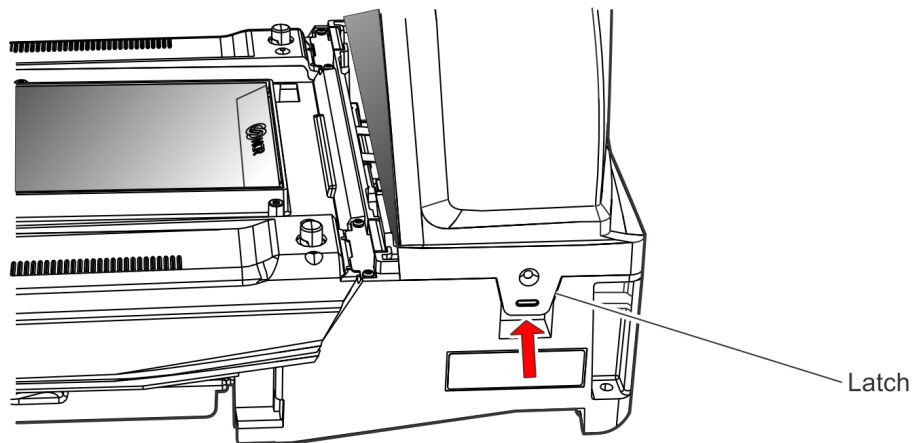

33155


4. If Screws were used in the Latches, install and tighten the Screws.

Install the NCR 7879 in Checkstand



Note: This procedure is for NCR 7879 scanners that are installed in a checkstand. If a checkstand is not used, skip to "Install the Top Plate" section.

1. If cables were removed, reconnect them to the NCR 7879.
2. Holding the handles on the back of the Tower Cabinet and the front of the Debris Guard, slowly lower the NCR 7879 into the checkstand cutout. It should sit on the designated supports.

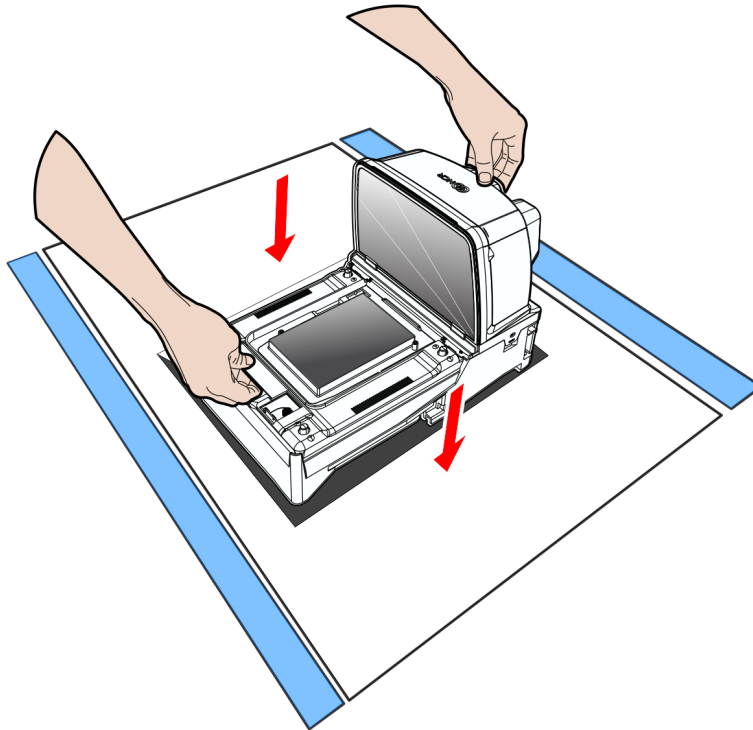

32645

3. Proceed to the "Install the Top Plate" section.

Install the Top Plate

1. Position the Top Plate over the front of the NCR 7879.
2. Lower the Top Plate until it is supported by the Supporting Studs. The Top Plate should be properly aligned with the NCR 7879 and should not move in a horizontal direction.



Note: After installing the Top Plate, restore power to the NCR 7879.

Programming Instructions



Note: The customer-side and cashier-side images are programmed independently; however, the Integrated Customer Scanner (ICS) will NOT independently enumerate with OPOS.

The ICS comes with three LEDs, which have no independent behavior from each other (they work together). This camera is defaulted to Autodetect mode but can be turned off (deactivated) with programming.

When the camera is detected by the 7879, the ICS LEDs turn blue, indicating that the camera is active but, by default, no ICS symbologies are enabled. When one or more ICS symbologies are enabled, the ICS LEDs turn from blue to green.

Also, when the camera is detected, the default beep frequency of the ICS is three positions higher in the frequency list from the default 7879 beep frequency.



Note: For proper functionality, the ICS requires the latest firmware **497-0506421** or higher.


Programming the NCR 7879 for ICS

To program the NCR 7879 for the ICS, perform these steps:

1. Power up the NCR 7879. The ICS is automatically detected by the NCR 7879, and the ICS LEDs turn blue.
2. Allow the pass-through of 1D and 2D data to the POS.
 - a. Enable any of the 1D or 2D tags. For the programming sequences, refer to the "Programming Worksheets" section.
 - b. Enable 1D and 2D pass-through function of the enabled barcode types by scanning the **Save and Reset** tag. For the programming tags, refer to the "Programming Tags" section.
 - c. Test the ICS to validate its functionality. Refer to the "Testing the Integrated Customer Scanner" section.

Testing the Integrated Customer Scanner

To confirm if the ICS is properly set up, apply a program sequence to enable one of the ICS symbologies (for example, PDF417) and scan a corresponding barcode at the ICS rear-facing window. If the barcode is successfully read, a beep should then be heard.

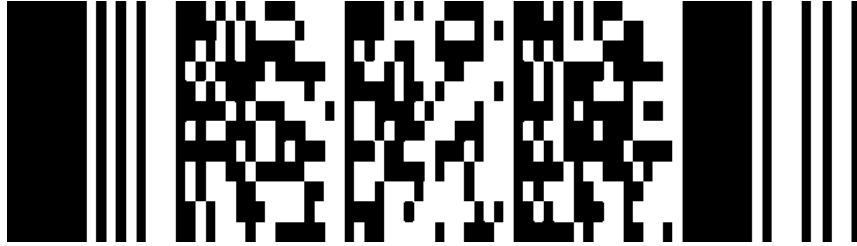

1234

Sample PDF417 Barcode

Programming Worksheets

Your Program

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	0		
Integrated Customer Scanner	Detection	Unique Tone	

Program Parameters

Detection

<input checked="" type="checkbox"/>	<input type="checkbox"/>
0	1
Autodetect	Force off

Note: Direct Entry Only.

Unique Tone

<input checked="" type="checkbox"/>	<input type="checkbox"/>
8	9
Unique Beep	No Beep

CCP-60076

Detection

By default, the Autodetect mode is turned on. To disable, scan the **Hex 1** tag.

Unique Tone

By default, the Unique Tone is enabled and thus, a unique beep is heard when items are scanned with the ICS. To disable, scan the **Hex 9** tag.

Integrated Customer Scanner (ICS) Symbology Enable 1

Your Program

<input type="checkbox" value="9"/>	<input type="checkbox" value="2"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
ICS Enable 1	UPC-A, UPC-E, EAN-8, EAN-13	P2 Periodical	P5 Periodical	Code 128	Interleaved 2 of 5	Code 39	GSI Databar-14 (RSS-14)	
<input type="checkbox"/>								
GSI Databar Expanded (RSS-E)								

Program Parameters

UPC-A, UPC-E, EAN-8, EAN-13	<input type="checkbox" value="0"/>	<input type="checkbox" value="1"/>
	Disable	Enable
P2 Periodical	<input type="checkbox" value="2"/>	<input type="checkbox" value="3"/>
	Disable	Enable
P5 Periodical	<input type="checkbox" value="4"/>	<input type="checkbox" value="5"/>
	Disable	Enable
Code 128	<input type="checkbox" value="6"/>	<input type="checkbox" value="7"/>
	Disable	Enable
Interleaved 2 of 5	<input type="checkbox" value="8"/>	<input type="checkbox" value="9"/>
	Disable	Enable
Code 39	<input type="checkbox" value="A"/>	<input type="checkbox" value="B"/>
	Disable	Enable
GSI Databar-14 (RSS-14)	<input type="checkbox" value="C"/>	<input type="checkbox" value="D"/>
	Disable	Enable
GSI Databar Expanded (RSS-E)	<input type="checkbox" value="E"/>	<input type="checkbox" value="F"/>
	Disable	Enable

Note: Direct Entry Only. All symbologies are OFF by default.

UPC-A, UPC-E, EAN-8, EAN-13

The UPC/EAN parameter controls reading of UPC/EAN bar codes by the ICS. Disable reading UPC/EAN bar codes by scanning the **Hex 0** tag and enable reading by scanning the **Hex 1** tag.

UPC-A and UPC-E are the most common bar code types in the US, while EAN-8 and EAN-13 are the most common types in Europe.

P2 Periodical

The P2 Periodical parameter controls reading of 2-digit periodical bar codes by the ICS. Disable reading 2-digit periodical bar codes by scanning the **Hex 2** tag and enable reading by scanning the **Hex 3** tag.

This type of bar code is commonly seen next to a UPC or EAN bar code on newspapers and magazines.

P5 Periodical

The P5 Periodical parameter controls reading of 5-digit periodical bar codes by the ICS. Disable reading 5-digit periodical bar codes by scanning the **Hex 4** tag and enable reading by scanning the **Hex 5** tag.

This type of bar code is commonly seen next to a UPC or EAN bar code on greeting cards and some magazines.

Code 128

The Code 128 parameter controls reading of Code 128 bar codes by the ICS. Disable reading Code 128 bar codes by scanning the **Hex 6** tag and enable reading by scanning the **Hex 7** tag.

Interleaved 2 of 5

The Interleaved 2 of 5 parameter controls reading Interleaved 2 of 5 bar codes by the ICS. Disable reading Interleaved 2 of 5 bar codes by scanning the **Hex 8** tag and enable reading by scanning the **Hex 9** tag.

Code 39

The Code 39 parameter controls reading of Code 39 bar codes by the ICS. Disable reading Code 39 bar codes by scanning the **Hex A** tag and enable reading by scanning the **Hex B** tag. If reading Code 39 bar codes is disabled, there are no other entries permitted for this parameter.

GS1 Databar-14 (RSS-14)

GS1 DataBar-14 is a linear symbology that encodes 14 UCC/EAN digits. This structure provides four segments that can be scanned and decoded separately, then reconstructed. The total symbol contains 96 modules combined into 46 elements (bars and spaces).

This symbology is commonly seen on produce items.



0100012345678905

33105

GS1 Databar Expanded (RSS-E)

GS1 DataBar-Expanded is a variable length linear symbology. It can encode 74 numeric or 41 alpha characters. GS1 DataBar-Expanded can be scanned and decoded in up to 22 segments and then reconstructed.

This symbology is commonly seen on coupons and some deli items.



9987 6543 2101 2345 6789 8888

33107

Integrated Customer Scanner (ICS) Symbology Enable 2

Your Program

<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
ICS Enable 2	Codabar	Italian Pharmacode	PDF417 (also enables MICROPDF)	Aztec	Data Matrix	QR Code (also enables MICRO QR)	OCR	MaxiCode

Program Parameters

Codabar	<input checked="" type="checkbox"/> 0	<input type="checkbox"/> 1
	Disable	Enable
Italian Pharmacode	<input checked="" type="checkbox"/> 2	<input type="checkbox"/> 3
	Disable	Enable
PDF417	<input checked="" type="checkbox"/> 4	<input type="checkbox"/> 5
	Disable	Enable
Aztec	<input checked="" type="checkbox"/> 6	<input type="checkbox"/> 7
	Disable	Enable
Data Matrix	<input checked="" type="checkbox"/> 8	<input type="checkbox"/> 9
	Disable	Enable
QR Code	<input checked="" type="checkbox"/> A	<input type="checkbox"/> B
	Disable	Enable
OCR	<input checked="" type="checkbox"/> C	<input type="checkbox"/> D
	Disable	Enable
MaxiCode	<input checked="" type="checkbox"/> E	<input type="checkbox"/> F
	Disable	Enable

Note: Direct Entry Only. All symbologies are OFF by default.

Note: Also enables MICROPDF.

Note: Also enables MICRO QR.

CCP-60079

Codabar

The Codabar Decoding parameter controls reading Codabar bar codes by the ICS. Disable reading Codabar bar codes by scanning the **Hex 0** tag, enable reading by scanning the **Hex 1** tag.

Italian Pharmacode

The Italian Pharmacode Decoding parameter controls reading Italian Pharmacode bar codes by the ICS. Disable reading Italian Pharmacode bar codes by scanning the **Hex 2** tag, enable reading by scanning the **Hex 3** tag.

PDF417

The PDF417 Decoding parameter controls reading PDF417 bar codes by the ICS. Disable reading PDF417 bar codes by scanning the **Hex 4** tag, enable reading by scanning the **Hex 5** tag.

Aztec

The Aztec Decoding parameter controls reading Aztec bar codes by the ICS. Disable reading Aztec bar codes by scanning the **Hex 6** tag, enable reading by scanning the **Hex 7** tag.

Data Matrix

The Data Matrix Decoding parameter controls reading Data Matrix bar codes by the ICS. Disable reading Data Matrix bar codes by scanning the **Hex 8** tag, enable reading by scanning the **Hex 9** tag.

QR Code

The QR Code Decoding parameter controls reading QR Code bar codes by the ICS. Disable reading QR Code bar codes by scanning the **Hex A** tag, enable reading by scanning the **Hex B** tag.

OCR

The OCR Decoding parameter controls reading OCR bar codes by the ICS. Disable reading OCR bar codes by scanning the **Hex C** tag, enable reading by scanning the **Hex D** tag.

MaxiCode

The MaxiCode Decoding parameter controls reading MaxiCode bar codes by the ICS. Disable reading MaxiCode bar codes by scanning the **Hex E** tag, enable reading by scanning the **Hex F** tag.

Integrated Customer Scanner (ICS) Tone Frequency

Your Program

<input type="text" value="9"/>	<input type="text" value="8"/>	<input type="text"/>
ICS Tone Frequency		Frequency

Program Parameters

Frequency	<input type="text" value="0"/>	<input type="text" value="1"/>	<input type="text" value="2"/>	<input type="text" value="3"/>	<input type="text" value="4"/>	<input type="text" value="5"/>	<input type="text" value="6"/>	<input type="text" value="7"/>
	702 Hz	781 Hz	868 Hz	961 Hz	1071 Hz	1187 Hz	570 Hz	633 Hz

Note: Direct Entry Only.

CCP-60080

Tone Frequency (Hertz)

The Tone Frequency parameter sets the frequency (tone) for the ICS. By default, the tone frequency is set to 961 Hz.

Integrated Customer Scanner (ICS) Tone Length

Your Program

<input type="text" value="9"/>	<input type="text" value="8"/>	<input type="text"/>
ICS Tone Length		Length

Program Parameters

Length	<input type="text" value="8"/>	<input type="text" value="9"/>	<input type="text" value="A"/>	<input type="text" value="B"/>	<input type="text" value="C"/>	<input type="text" value="D"/>	<input type="text" value="E"/>	<input type="text" value="F"/>
	45 ms	65 ms	90 ms	120 ms	150 ms	190 ms	230 ms	25 ms

Note: Direct Entry Only.


CCP-60081

Tone Length (Milliseconds)

The Tone Length parameter sets the length of the tone for the ICS. By default, the tone length is set to 45 ms.


Programming Tags

Programming Mode

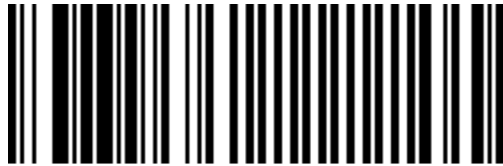

33122

Save and Reset

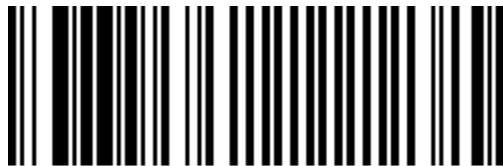

33124

Hex 0



33133

Hex 1



33134

Hex 2



33135

Hex 3



33136

Hex 4



33137

Hex 5



33138

Hex 6



33139

Hex 7




33140

Hex 8



33141

Hex 9

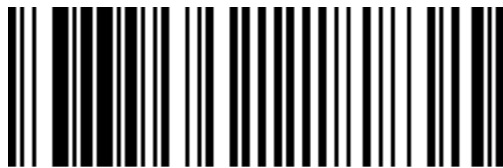

33142

Hex A



33143

Hex B



33144

Hex C



33145

Hex D



33146

Hex E



33147

Hex F



33148