
Kit Instructions

MP600 Wall Mount Bracket

Release 1.0

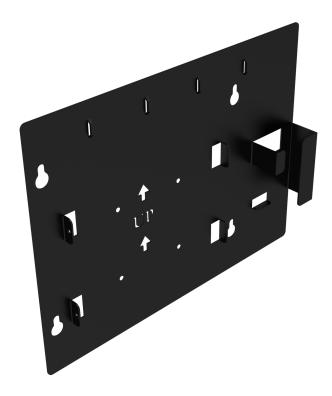

1930-K001 Issue A The product described in this document is a licensed product of NCR Corporation.

NCR is a registered trademark of NCR Corporation. Product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Where creation of derivative works, modifications or copies of this NCR copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR, NCR's copyright notice must be included.

It is the policy of NCR Corporation (NCR) to improve products as new technology, components, software, and firmware become available. NCR, therefore, reserves the right to change specifications without prior notice.

All features, functions, and operations described herein may not be marketed by NCR in all parts of the world. In some instances, photographs are of equipment prototypes. Therefore, before using this document, consult with your NCR representative or NCR office for information that is applicable and current.

To maintain the quality of our publications, we need your comments on the accuracy, clarity, organization, and value of this book. Please use the link below to send your comments.

Email: FD230036@ncr.com

Copyright © 2018 By NCR Corporation Atlanta, GA U.S.A. All Rights Reserved

Table of Contents

MP600 Wall Mount Bracket

Introduction	. 1
Kit Components	1
Required Tools	. 1
Dimensions	. 2
Installation Procedures	. 3
Installing the Bolts	4
Mounting the Media Player onto the Wall Bracket	. 5
Mounting the Assembly onto the Wall	. 6
Connecting the Cables	. 7

Revision Record

lssue	Date	Remarks
А	Jun 2018	First Issue

MP600 Wall Mount Bracket

Introduction

The Wall Mount Bracket kit provides a solution for mounting the NCR MP600 Media Player to a wall.

Before installing this kit, consider the following:

- The wall bracket is designed to be mounted using four 1/4–20 toggle bolts or similar, depending on mounting substrate.
- The wall bracket is designed to hold the weight of the MP600 Media Player, its external power supply, and other supporting I/O cables. No additional components or peripherals should be mounted to the wall bracket unless prior approval is given by NCR engineering.
- The mounting surface should be rigid and be able to securely hold the weight of the bracket and the medial player.
- The installer should ensure that the mounting area is clear of all electrical, gas, and water/sewer lines for safety purposes.


Kit Components

Part Number	Description
497-0499182	Wall Bracket
006-8617801	(4) M4x8 Flat Head Steel Black Oxide RoHS

Required Tools

- Phillips screwdriver
- Pencil or marker
- (4) ¹/₄-20 toggle bolts or similar, depending on mounting substrate supplied by customers
- Cable ties as needed

Dimensions

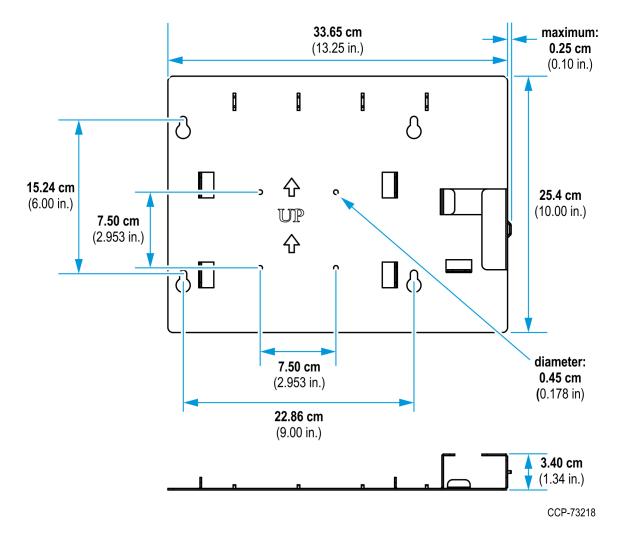


Installation Procedures

Installing the Wall Mount Bracket includes the following procedures:

- 1. Mark the screw holes and install the bolts.
- 2. Mount the MP600 Media Player to the wall bracket.
- 3. Mount the assembly onto the wall.
- 4. Connect the cables.

Installing the Bolts

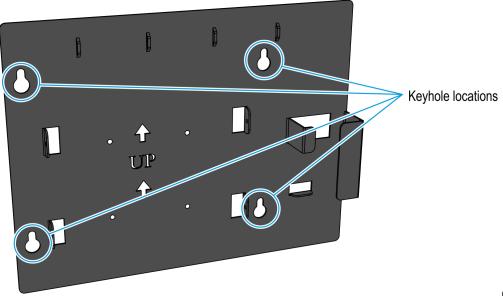

CCP-74116

- 1. Mark the screw holes.
 - a. Using the bracket as a template, hold it against the wall and mark the four holes. Take note of the "up" arrow indicating the correct orientation of the wall bracket.
 - b. Remove the bracket and drill a hole at every marked location.
- 2. Install a toggle bolt in each hole.
- **Note:** Leave each bolt loose to allow the wall bracket to slide between the bolt and the wall.

Mounting the Media Player onto the Wall Bracket

The MP600 Media Player may be installed with the power button facing up or down (with respect to the ground).

- 1. Place the MP600 Media Player upside down on a smooth and flat surface.
- 2. Position the wall bracket as shown in the image below.
- **Note:** The image shows the position of the MP600 if it would be installed with the power button facing down.



- 3. Align the four holes on the wall bracket with the four holes on the bottom of the MP600 Media Player.
- 4. Install and tighten the four screws.

Mounting the Assembly onto the Wall



Note: The image below shows the MP600 Media Player mounted with its power button facing down.



CCP-74117

 
1. Position the assembly (Media Player and wall bracket) on the four loose bolts.


Note: Ensure that proper orientation of the wall bracket is observed.

2. When the position is confirmed, tighten the four bolts to secure the assembly to the wall.

Connecting the Cables

- 1. Connect the display and communication cables.
- 2. Connect one end of the power supply to the MP600 and the other end to the AC power source.



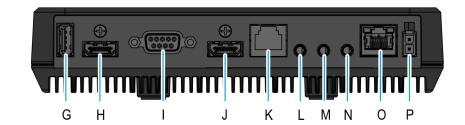

CCP-74114

Definition		
USB 2.0 Port		
HDMI Output 1		
Serial Port, DB9 Female		
HDMI Output 2		
Ethernet 10/100, RJ45		
IR Input, 3.5–mm Jack		
IR Output, 3.5–mm Jack		
RGB Sensor Input, 3.5–mm Jack		
Ethernet 10/100 PoE, RJ45 Input		
2–pin DC Power Input (12 V)		