

Kit Instructions

Key Tips and Key Lenses

5954-K829, 6932-K829 to K833
Issue B



The product described in this document is a licensed product of NCR Corporation.

NCR is a registered trademark of NCR Corporation. NCR RealPOS is a trademark of NCR Corporation in the United States and/or other countries. Other product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Where creation of derivative works, modifications or copies of this NCR copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR, NCR's copyright notice must be included.

It is the policy of NCR Corporation (NCR) to improve products as new technology, components, software, and firmware become available. NCR, therefore, reserves the right to change specifications without prior notice.

All features, functions, and operations described herein may not be marketed by NCR in all parts of the world. In some instances, photographs are of equipment prototypes. Therefore, before using this document, consult with your NCR representative or NCR office for information that is applicable and current.

To maintain the quality of our publications, we need your comments on the accuracy, clarity, organization, and value of this book. Please use the link below to send your comments.

Email: FD230036@ncr.com

Copyright © 2018
By NCR Corporation
Atlanta, GA U.S.A.
All Rights Reserved

Table of Contents

Key Tips and Key Lenses

Introduction	1
Kit Components	1
5954-K829	1
6932-K829	2
6932-K830	2
6932-K831	3
6932-K832	3
6932-K833	3
Key Tips	4
Installing a Key Tip	4
Removing a Key Tip	5
Key Lenses	6
Installing a Key Lens	6
Removing a Key Lens	6

Revision Record

Issue	Date	Remarks
A	Jul 2018	First Issue
B	Dec 2018	Added new kits 6932-K832/K833


Key Tips and Key Lenses

Introduction

This document provides procedures on how to install and remove the Key Tips and Key Lenses.

Kit Components

5954-K829

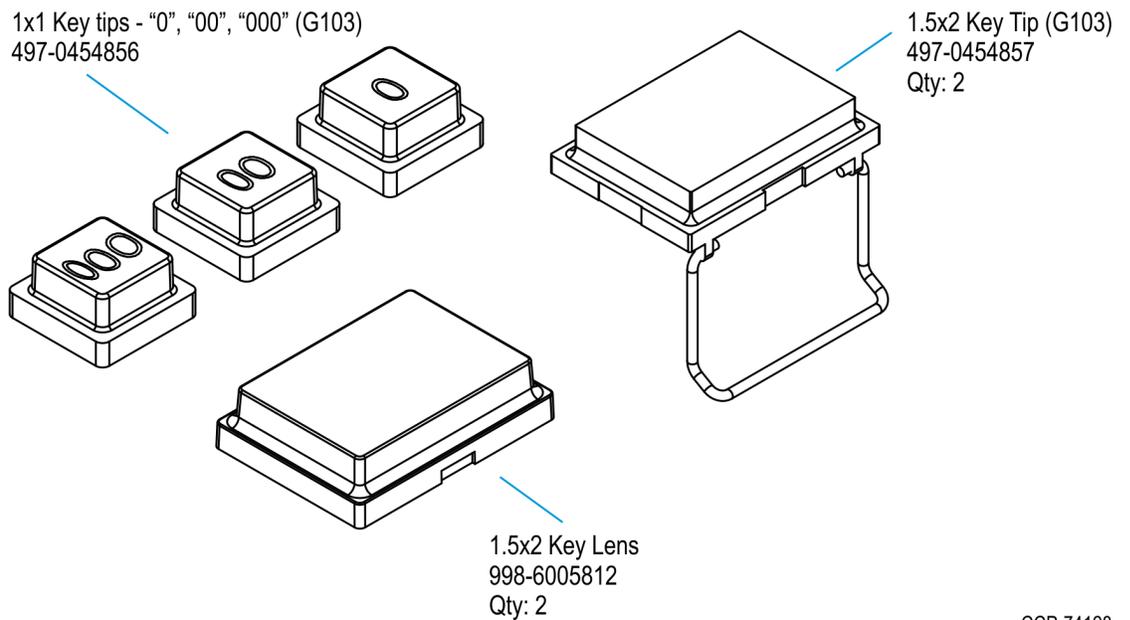


CCP-74128



Note: This kit is for Dynakeys **SN 56-53833924** or earlier.

6932-K829

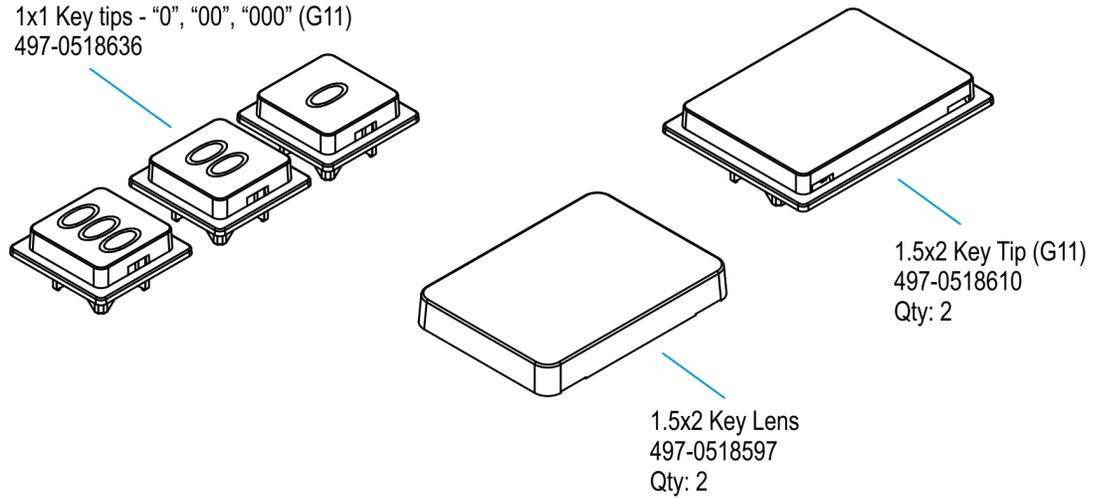


CCP-74129



Note: This kit is also used for 5954 Dynakeys **SN 56-5383925** or later and for 5968 Display or 7702 POS with F349 keypads.

6932-K830

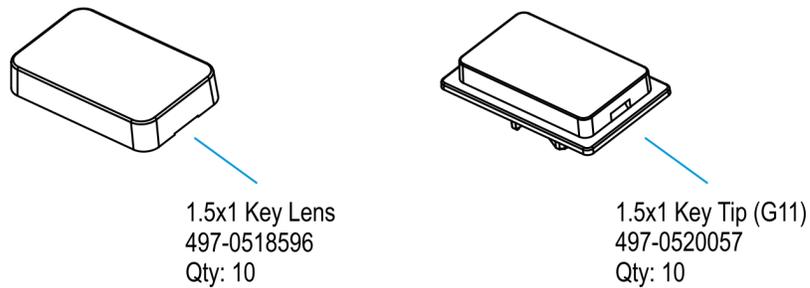


CCP-74127




Note: This kit is also used for 5954 Dynakeys **SN 56-5383925** or later and for 5968 Display or 7702 POS with F349 keypads.

6932-K831

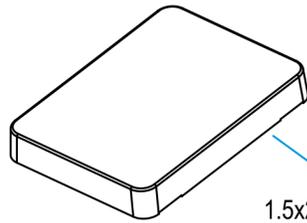

1.5x2 Key Lens
497-0518597
Qty: 10

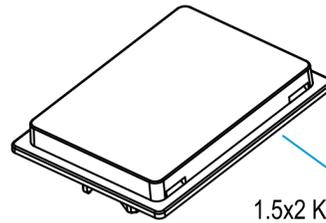


1.5x2 Key Tip (G11)
497-0518610
Qty: 10

CCP-74134



Note: This kit is also used for 5954 Dynakeys **SN 56-53833925** or later and for 5968 Display or 7702 POS with F349 keypads.

6932-K832

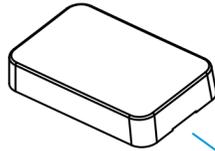

1.5x1 Key Lens
497-0518596
Qty: 10




1.5x1 Key Tip (Black)
497-0520056
Qty: 10

CCP-75600




Note: This kit is also used for 5954 Dynakeys **SN 56-53833925** or later and for 5968 Display or 7702 POS with F349 keypads.

6932-K833

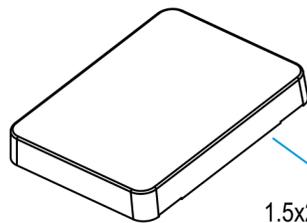

1.5x2 Key Lens
497-0518597
Qty: 10

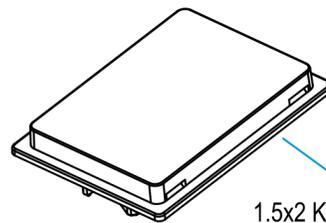

1.5x2 Key Tip (Black)
497-0518609
Qty: 10

CCP-75601



Note: This kit is also used for 5954 Dynakeys **SN 56-53833925** or later and for 5968 Display or 7702 POS with F349 keypads.


Key Tips

Installing a Key Tip

Place the Key Tip over its position on the keyboard and press the key until it snaps into place.




Note: For 1x1 key tips, ensure that the number is on the upright position.

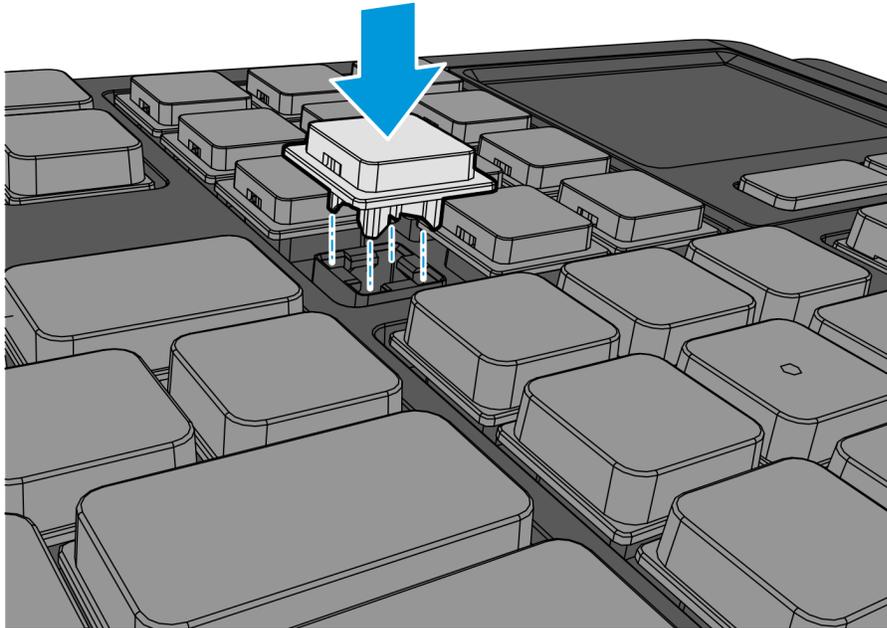

CCP-73204


Removing a Key Tip

Use a Key Removal Tool to remove a Key Tip from the keyboard.

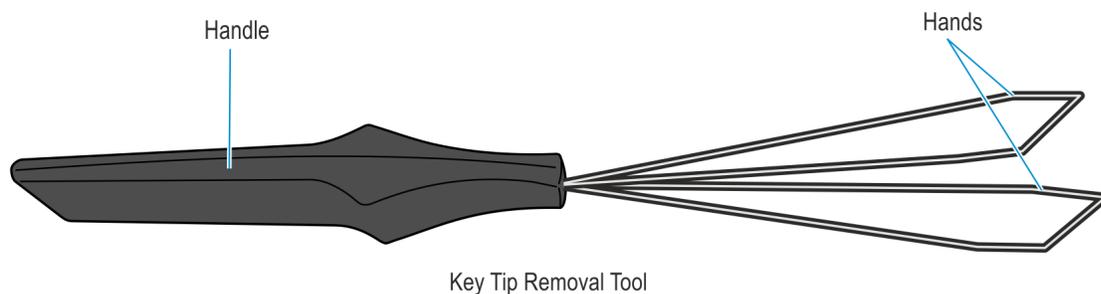

CCP-73158

Insert the hands of the removal tool under each side of the Key Tip and carefully pull the tool upward until the Key Tip pops off its retainer clips.

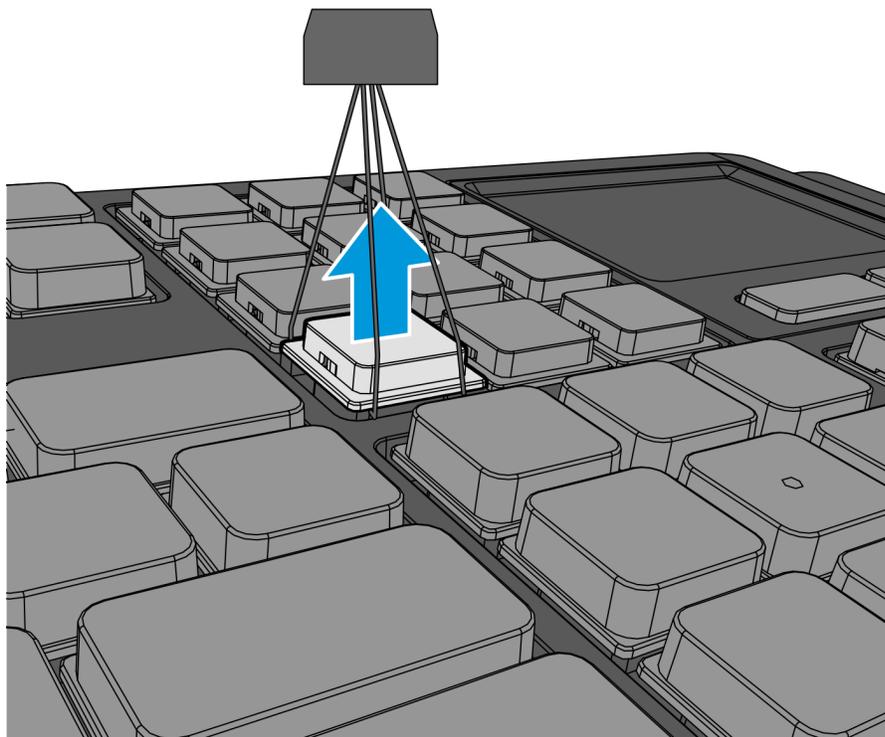

CCP-73205

Key Lenses


Key Lenses protect labels on key tips.

Installing a Key Lens

Position the Key Lens over the key tip, and then gently press the lens until it snaps and locks into place.




Note: The snaps on the lens must be aligned with the indentations on the key tip.

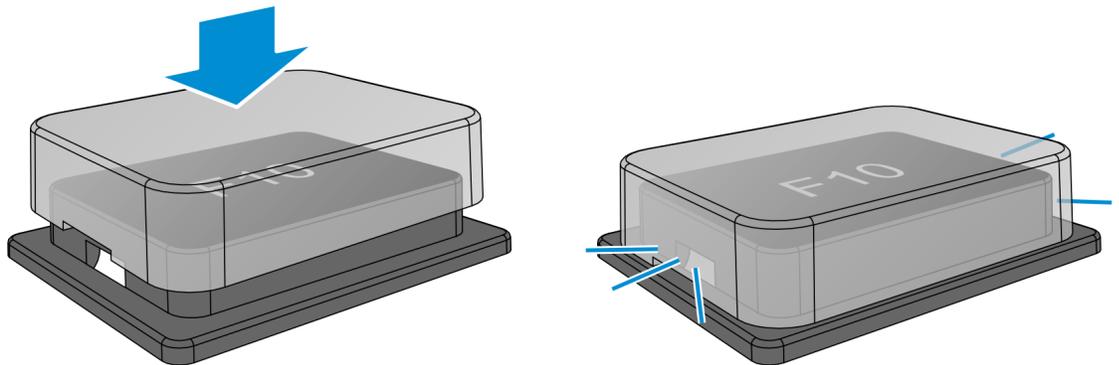

CCP-72831

Removing a Key Lens

Using your fingers, unsnap one side of the Key Lens from the key tip and then the other side.

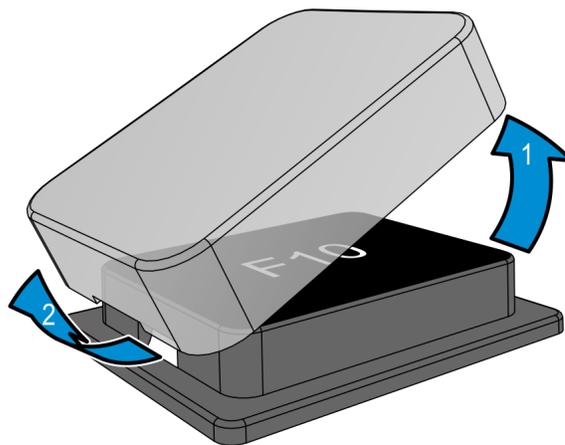

CCP-72098