

Kit Instructions

Wall Mount

7197-K100
Issue B



The product described in this document is a licensed product of NCR Corporation.

NCR is a registered trademark of NCR Corporation. NCR RealPOS is a trademark of NCR Corporation in the United States and/or other countries. Other product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Where creation of derivative works, modifications or copies of this NCR copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR, NCR's copyright notice must be included.

It is the policy of NCR Corporation (NCR) to improve products as new technology, components, software, and firmware become available. NCR, therefore, reserves the right to change specifications without prior notice.

All features, functions, and operations described herein may not be marketed by NCR in all parts of the world. In some instances, photographs are of equipment prototypes. Therefore, before using this document, consult with your NCR representative or NCR office for information that is applicable and current.

To maintain the quality of our publications, we need your comments on the accuracy, clarity, organization, and value of this book. Please use the link below to send your comments.

Email: FD230036@ncr.com

Copyright © 2018

By NCR Corporation

Atlanta, GA U.S.A.

All Rights Reserved

Revision Record

Issue	Date	Remarks
A	Mar 2018	First Issue
B	Oct 2020	Added printer orientation

WALL MOUNT (7197-K100) KIT INSTRUCTIONS

Introduction


This kit serves as wall bracket to attach the printer to a vertical surface.

Things Needed


- 1) Wall Mount Paper Guide (x1)
- 2) Mylar Sheet (x1)
- 3) Push Nut (x2)
- 4) Wall Mount Plate (x1)
- 5) M3x8 Screw (x4) or Wall Plug (x4)
- 6) M5x20 Screw (x4)

Installation Procedure


- 1) Slide the wall mount paper guide into the slot as shown in the picture below.

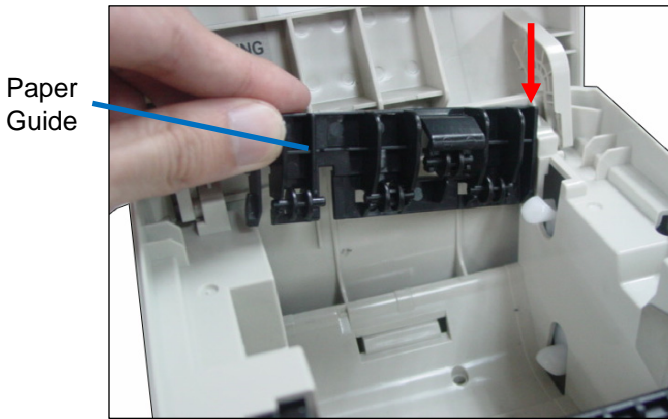

- 2) Push the paper guide towards the back frame. Apply force until you hear a snap sound. It means the guide is locked in place.

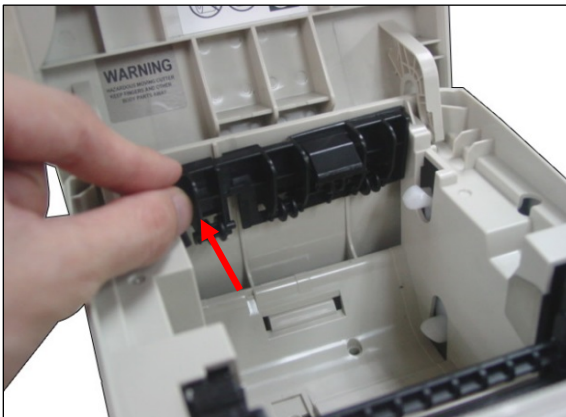


- 3) Attach the Mylar sheet to the printer top cover using push nuts as shown in the picture below.

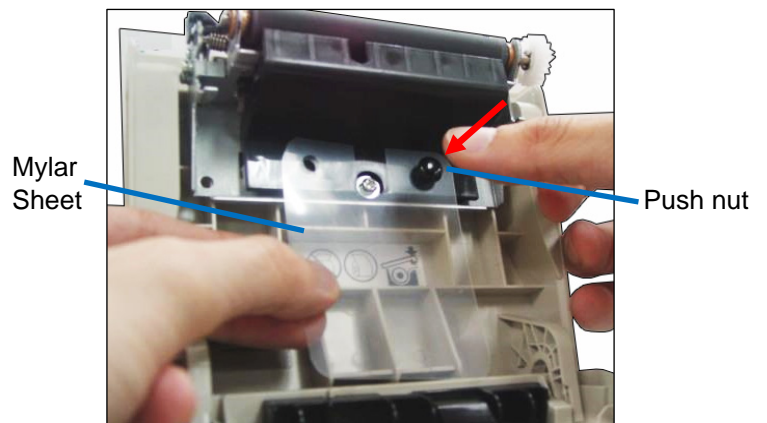

- 4) Position the wall mount plate parallel to the screw slots on the printer. Fasten the wall mount plate to the printer using M3x8 Screws.


Note: The picture below does not show the printer cables. Ensure cables are connected to their respective ports on the printer before fastening the wall mount plate. For more information, refer to Connecting the Cables on *NCR 7197 Thermal Receipt Printer Series II Owner's Manual (B005-0000-2068)*.

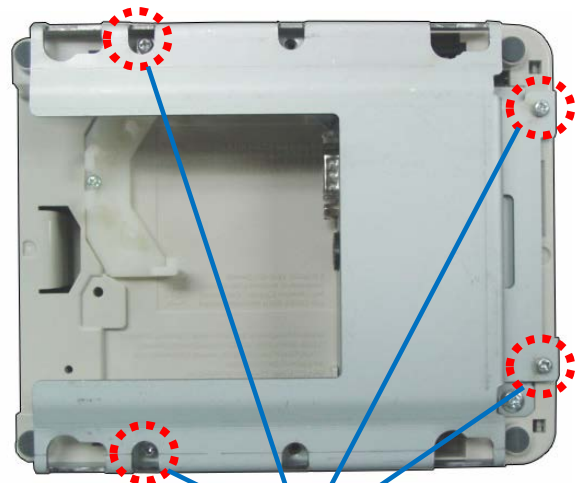

M3x8 screws

- 5) Prepare the installation site. Mount the M5x20 screws or wall plugs on the wall using the recommended dimensions shown on the sketch at the bottom. Properly fasten the screws or plugs to the wall stud.
- 6) Attach the printer to the wall. Ensure that the printer is properly attached by checking if the screws/plugs are properly inserted to the hook slots on the wall mount plate.

Note: When mounting the printer on the wall, the NCR logo must be upside-down.

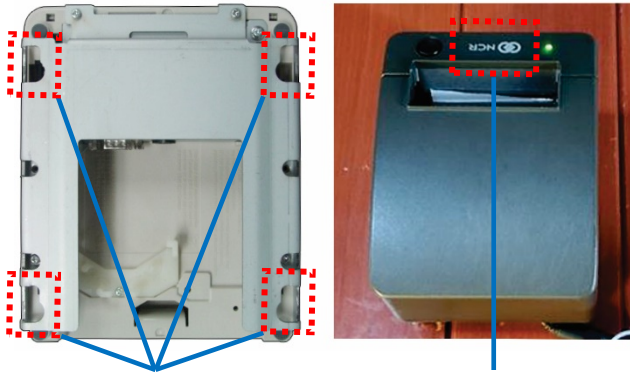

Hook slots

Upside-down NCR Logo

Removal Procedure

- 1) Reverse the installation procedure.

Note: When removing the wall mount paper guide, hold the tab and pull outward to detach.



Recommended Dimension:

