Kit Instructions

SCN85 Cash Acceptor Field Upgrade



7350-K112 Issue B The product described in this document is a licensed product of NCR Corporation.

NCR is a registered trademark of NCR Corporation. NCR SelfServTM Checkout is a trademark of NCR Corporation in the United States and/or other countries. Other product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Where creation of derivative works, modifications or copies of this NCR copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR, NCR's copyright notice must be included.

It is the policy of NCR Corporation (NCR) to improve products as new technology, components, software, and firmware become available. NCR, therefore, reserves the right to change specifications without prior notice.

All features, functions, and operations described herein may not be marketed by NCR in all parts of the world. In some instances, photographs are of equipment prototypes. Therefore, before using this document, consult with your NCR representative or NCR office for information that is applicable and current.

To maintain the quality of our publications, we need your comments on the accuracy, clarity, organization, and value of this book. Please use the link below to send your comments.

EMail: FD230036@ncr.com

Copyright © 2017 By NCR Corporation Duluth, GA U.S.A. All Rights Reserved


Revision Record

lssue	Date	Remarks
A	Jun 2017	First issue.
В	_	Modified the Reprogram the Note Acceptor RTU as SCN85 Device pro- cedure.

SCN85 Cash Acceptor Field Upgrade

This kit provides instructions on how to upgrade the SC83 Cash Acceptor RTU in the NCR SelfServ[™] Checkout (7350) with the SCN85 Cash Acceptor RTU.

Kit Contents

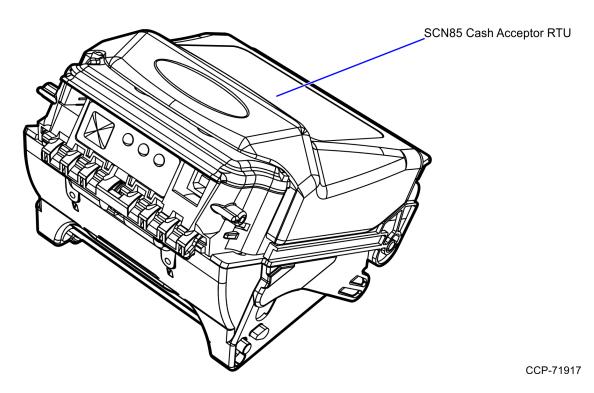

Part Number	Description
497-0518495	7350–K112 SCN85 Cash Acceptor Field Upgrade
497-0499387	SCN85 Cash Acceptor RTU
* 497-0504199	Carton Pack, 554 Series, 12" x 10" x 6", Corrugated with Convoluted Foam

* Items marked with an asterisk are not called out on the image.

Installation Procedures


Installing SCN85 Cash Acceptor involves the following procedures:

- 1. <u>*Remove the Note Acceptor*</u> on the facing page.
- 2. *Install SCN85 Cash Acceptor* on page 6.
- 3. <u>Reprogram the Note Acceptor RTU as SCN85 Device</u> on page 8.
- **Note:** Before you begin, shutdown and turn off the NCR SelfServ Checkout unit, then unlock and open the SelfServ Checkout door.

Remove the Note Acceptor


To remove the Note Acceptor from the Cash Acceptor Chassis, do the following:

1. Free the Acceptor Module from the Cash Acceptor Chassis by pushing up on the release lever.

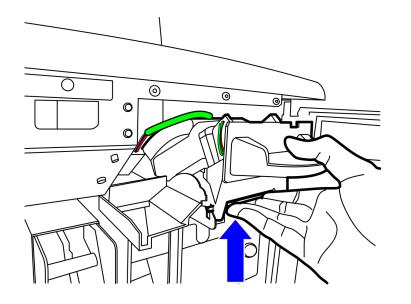


CCP-71565

2. Slide the Acceptor Module forward and out of the Cash Acceptor Chassis.

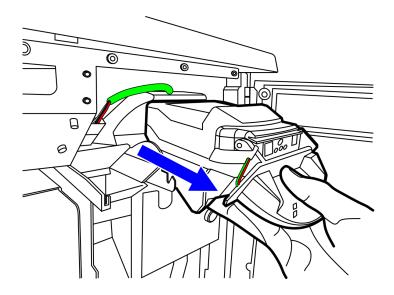


3. Remove the Bill Entry Guide by sliding a flat head screwdriver between the bill entry guide and the note acceptor module as shown below.

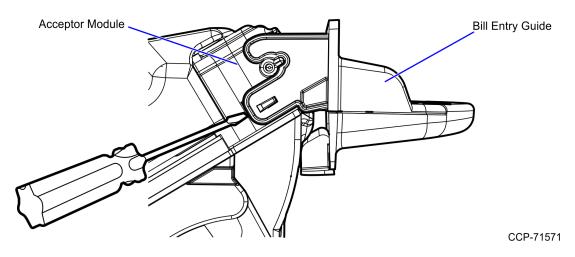



Note: The image below show two types of bill entry guides.

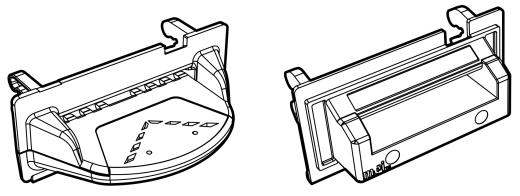



Platform Bill Entry Guide

Universal Bill Entry Guide

CCP-71568

a. If the bill entry guide has lights, disconnect the eight pin harness connector from the Acceptor Module, as shown image below. Use a tweezer to remove it.

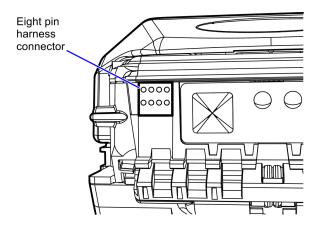

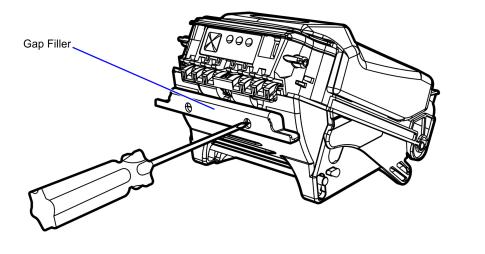


b. Remove the Gap Filler from the Note Acceptor using a Philips screwdriver.

Note: Save the screws. These will be reused to install on the new SCN85 head.


Install SCN85 Cash Acceptor

To install the SCN85 Cash Acceptor, do the following:


- 1. Remove the Note Acceptor from the Cash Acceptor Chassis. For more information, refer to <u>Remove the Note Acceptor</u> on page 3.
- 2. Install the Gap Filler on the new SCN85 head.
- **Note:** Reuse the two screws from the SC83 Gap Filler.

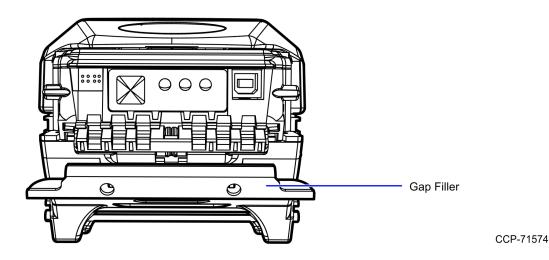

- 3. Install the Bill Entry Guide on the SCN85 head by doing the following:
 - a. Slide the bill entry guide into the Acceptor Module until it locks into place. No screws required.

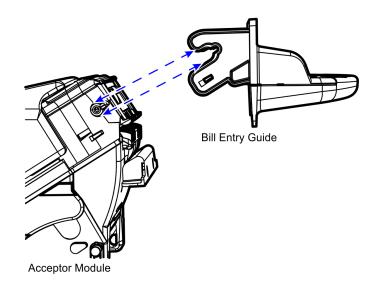


b. If the bill entry guide has lights, connect the eight pin harness connector to Acceptor Module, as shown below.

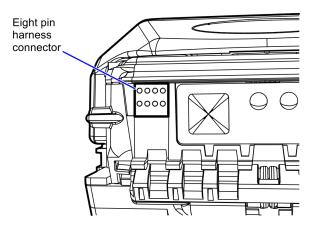

CCP-71572

- **Note:** Ensure that the bill entry guide is aligned so that the machine door closes properly.
- 4. Insert the SCN85 head into the Cash Acceptor Chassis until the release lever latches in place.

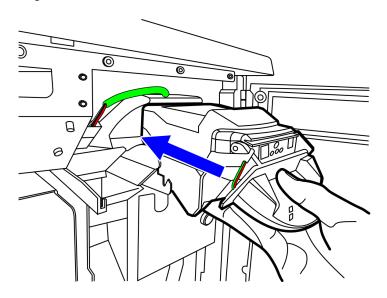


Reprogram the Note Acceptor RTU as SCN85 Device

To reprogram the Note Acceptor do the following:

- 1. Remove the Note Acceptor from the Cash Acceptor Chassis. For more information refer to <u>Remove the Note Acceptor</u> on page 3.
- 2. Install SCN85 Cash Acceptor to the Cash Acceptor Chassis. For more information refer to *Install SCN85 Cash Acceptor* on page 6.
- 3. Turn on the SelfServ Checkout.
- 4. Go to C:\scot\bin.

e Edit View Favorites Back - 🍙 - 🏤 🏒	Tools	arch 府 Folders 📊 -				
fress 🛅 C:\scot\bin	- 46.777				•	
		Name 🔶	Size	Туре	Date Modified	
File and Folder Tasks	*	C Misc		File Folder	5/16/2017 4:53 AM	
Rename this file		C Release		File Folder	5/16/2017 4:53 AM	
		🔊 7z.dll	586 KB	Application Extension	10/1/2013 10:13 AM	
😥 Move this file		Tza 7za	574 KB	Application	10/1/2013 10:13 AM	
Copy this file		Tz 7zFM	369 KB	Application	10/1/2013 10:13 AM	
Publish this file to the Web	5	🐻 770x_DualDisplay	19 KB	MS-DOS Batch File	5/8/2017 4:44 PM	
E-mail this file		T ADD	27 KB	MS-DOS Batch File	5/8/2017 4:44 PM	
X Delete this file		ADD.bat	12 KB	BAK File	12/2/2008 9:41 AM	
X Delete this file		ADD.bat.ADDSupport	37 KB	ADDSUPPORT File	2/24/2016 3:13 PM	
		ADD.exe	80 KB	BAK File	3/31/2009 10:00 PM	
Other Places	â	addCommonIPCLibrary.dll	79 KB	Application Extension	5/8/2017 4:44 PM	
ocher i laces		ADDLaneInfo_PreCADD	10 KB	PL File	5/8/2017 4:43 PM	
🚞 scot		APPConfig_PostCADD	268 KB	PL File	5/8/2017 4:43 PM	
My Documents		APPConfig_PreCADD	25 KB	PL File	5/8/2017 4:43 PM	
👿 My Computer		AppendDriverPath	2 KB	MS-DOS Batch File	10/8/2013 11:07 AM	
My Network Places		AutoPushDiagFiles	8 KB	MS-DOS Batch File	5/8/2017 4:44 PM	
S Phy Neuwork Places		BagScale_Emulator_Disable	13 KB	MS-DOS Batch File	5/8/2017 4:44 PM	
		BagScale Emulator Enable	14 KB	MS-DOS Batch File	5/8/2017 4:44 PM	
Details	×	BCRCoinResetUtility	74 KB	Application	5/8/2017 4:58 PM	
o c cuilo	1	Sit.dll	64 KB	Application Extension	5/19/2017 3:02 AM	
		BNRNoLoader Disable	11 KB	MS-DOS Batch File	5/8/2017 4:44 PM	
		BNRNoLoader Enable	11 KB	MS-DOS Batch File	5/8/2017 4:44 PM	
			734 KB	Application	5/8/2017 4:50 PM	
			70 KB	Application	5/8/2017 4:50 PM	
			3,565 KB	Application	5/8/2017 4:47 PM	
		CADDConfigureCmd	101 KB	Application	5/8/2017 4:51 PM	

5. Open the CADDConfigure application. The Hardware Type window is displayed.

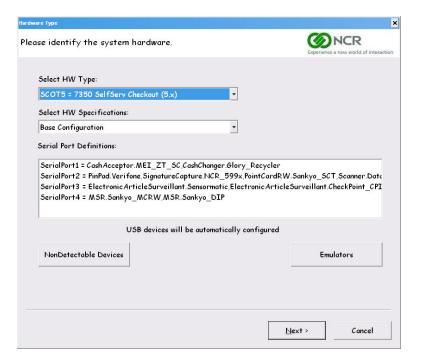

- From the Select HW Type drop-down list, select SCOT5 = 7350 SelfServ Checkout (5.x).
- 7. Select Next. The Language and Currency window is displayed.

×
Experience a new world of interaction
•
_
•
•
< <u>B</u> ack <u>N</u> ext > Cancel

8. From the Currency drop-down list, select EUR = Euro.

9. Select **Next**. The Note Acceptor and Note Dispenser HW Configuration window is displayed.

e select notes to accept and/or dis	pense: Experience a new world of interest
	urrency = EUR ecimal Places = 2
✓ Configure Note Acceptor	⊂ Configure Note Dispenser
	✓ Loader
	Enter number of bins per denomination and 0 as disable
Notes to accept:	Notes to dispense:
⊻500	1 500
☑1000	1 1000
☑2000	0 2000
☑ 5000	0 5000
☑10000	0 10000
≥20000	0 20000
≥50000	0 50000
Note: Some of the devices do not suppo	ort configuring notes (i.e BNR)
	< Back Next > Cancel

10. Select **Next**. The Coin Acceptor and Dispenser HW Configuration window is displayed.

in Acceptor and Dispenser HW Configuration lease select coins to accept and/or disj	pense: Experience a new world of interaction
C.	Currency = EUR
🔽 Configure Coin Acceptor	🗟 Configure Coin Dispenser
Coins to accept:	Coins to dispense:
✓1 ▲ ✓2 ↓ ✓5 ↓ ✓10 ↓ ✓20 ↓ ✓50 ↓ ✓100 ↓ Decima	21 ▲ 22 25 25 20 250 250 2100 2200 250 2100 2200 210
	< Back Next > Cancel

11. Select Next. The Device Specific Options window is displayed.


Device S	pecific Options						×
Selec	t Device s	specific optic	ons.				NCR a new world of interaction
	HWType:	5COT5			Language:	0409	•
	HWSpec:				Currency:	EUR	•
	Device:	56xx Note Di	spenser	•	Ini Model :	AnyModel	•
	Option		Value		Comment		
	•	т	here are no optio	ons to show	for this selecti	on.	
	Add	D	elete				
					<u>B</u> ack	<u>N</u> ext >	Cancel

12. Select Next. The Confirmation window is displayed.

tions are ready to be saved.	Experience a new world of interre
C:\scot\CONFIG\CADD.000	C:\scot\CONFIG\CADDOpts.000
	- [Hardware]
	HWType=SCOT5
	HWSpec=
	PrimaryLanguageCode=0409
	[Currency]
	CurrencyType=EUR
	[Note.EUR.Accept]
	500=YES
	1000=YE5
	2000=YE5
	5000=YES
	F (
Press Save to update file(s) or Cancel to ex	xit
,	

13. Select **Save** to update the files. The application will automatically close.

14. Go to C:\scot\bin and then open **ADD**. The application checks the devices configured with the SelfServ Checkout unit and checks/updates the corresponding firmware. The application is automatically closed when the process is complete.

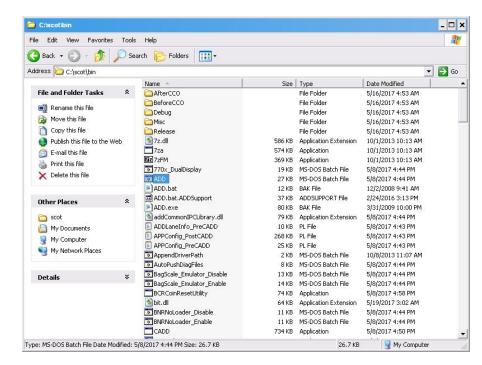

Caution: Do not interrupt the configuration to avoid damaging the device.

- 15. Perform a health check on the Note Acceptor by accessing the Profile Manager Lite (PML). To access the PML, do the following:
 - a. From the start menu, select Run and type :\scot\bin\elgnodon.bat. Then the PML screen is displayed.
 - b. Select CashAcceptor on top section of the PML screen.
 - c. Select **MEI_ZT_SC** on the bottom section of the PML screen. The Health Check: Bill Acceptor screen appears.

Δ

6 NCR ∨70 12 USB con	
USB con	000
USB con	000
USB con	000
USB con	070
USB con	070
USB con	000
USB con	000
	uuri.
Gen ID: 02	
-	<u>C</u> kHealth2
EUR 50.00	Audit
Accept	C=EUR
<u>R</u> eject	
del.(0)	
abled	
	Egit
	Aen ID: 02

d. Verify from the **Device** field that the device model has changed from SC to SCN.

16. Restart the 7350 unit.

Note: The system automatically runs ADD and update the Note Acceptor hardware profile.