

Kit Instructions

Notes Out Only Fascia and Motorized Card Reader (MCR) Blanking Plate



7350-K911
Issue B



The product described in this document is a licensed product of NCR Corporation.

NCR is a registered trademark of NCR Corporation. NCR SelfServ™ Checkout is a trademark of NCR Corporation in the United States and/or other countries. Other product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Where creation of derivative works, modifications or copies of this NCR copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR, NCR's copyright notice must be included.

It is the policy of NCR Corporation (NCR) to improve products as new technology, components, software, and firmware become available. NCR, therefore, reserves the right to change specifications without prior notice.

All features, functions, and operations described herein may not be marketed by NCR in all parts of the world. In some instances, photographs are of equipment prototypes. Software screen images are representative, and in some cases, may not match a customer's installed software exactly. Therefore, before using this document, consult with your NCR representative or NCR office for information that is applicable and current.

To maintain the quality of our publications, we need your comments on the accuracy, clarity, organization, and value of this book. Please use the link below to send your comments.

Email: FD230036@ncr.com

Copyright © 2012—2019

By NCR Corporation

Global Headquarters

864 Spring St. NW

Atlanta, GA 30308

United States

All Rights Reserved


Revision Record

Issue	Date	Remarks
A	Aug 2012	First Issue
B	Oct 2019	Added to IP Kit Repository site with HTML version.

Notes Out Only Fascia and Motorized Card Reader (MCR) Blanking Plate

This publication provides procedures for installing a Notes Out Only Fascia on the Core Door and a Motorized Card Reader (MCR) Blanking Plate on the Tower Cabinet of an NCR SelfServ™ Checkout (7350) unit.

Kit Contents

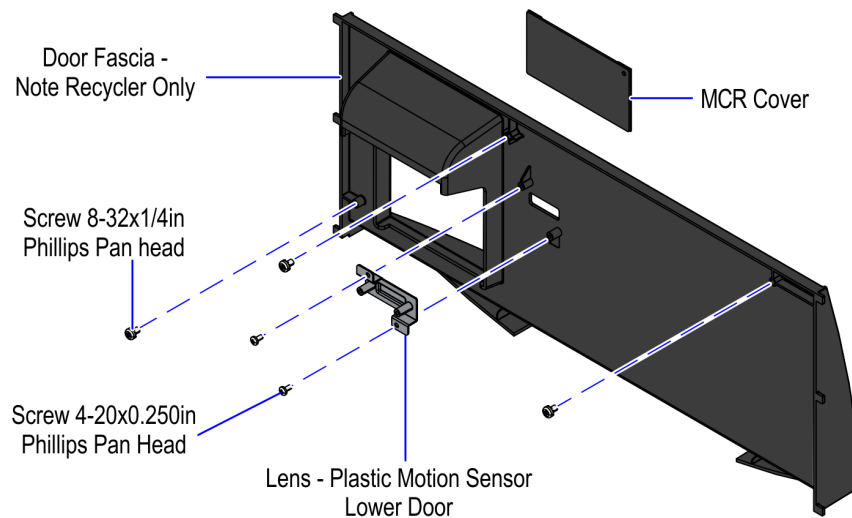

CCP-77200

Part Number	Description
497-0477276	Kit - Fascia, Notes Only and MCR Blank
497-0477187	Door Fascia - Note Recycling Only
497-0456066	Lens-Plastic-MotionSensor - Lower Door
006-8645069	Screw 8-32 x 1/4 in Phillips Pan Head SEMS, SST, 3 pcs
006-8611199	Screw 4-20 x 0.250 in Phillips Pan Head, Plastite, Blue Zinc, 2 pcs
497-0477173	Cover, MCR
* 497-0423108	Instructions Kit (Reference Sheet)

* Items marked with an asterisk are not called out on the image.

Required Tools

The following tools are required for installing the Notes Out Only Fascia and Motorized Card Reader (MCR) Blanking Plate.

- Phillips Screwdriver #2
- #8-32 Nut Driver



Note: Use a magnetized screwdriver to easily handle the screws.

Installation Procedures


Installing a Notes Out Only Fascia and a Motorized Card Reader (MCR) Blanking Plate on an NCR SelfServ™ Checkout (7350) unit involves the following procedures:

Notes Out Only Fascia	MCR Blanking Plate
<ul style="list-style-type: none">• <u>Removing Existing Fascia</u> on the next page.• <u>Installing Notes Out Only Fascia</u> on page 6.	<ul style="list-style-type: none">• <u>Removing Motorized Card Reader (MCR)</u> on page 8.• <u>Installing Motorized Card Reader (MCR) Blanking Plate</u> on page 10.


Removing Existing Fascia

To remove the existing Door Fascia, follow these steps:

1. Turn off the NCR SelfServ Checkout software and hardware systems.
2. Unlock and open the NCR SelfServ Checkout Door.
3. Disconnect the following cables from the MEI hub:
 - Coin-in LED cable
 - Coin-out LED cable
 - Coupon-in cable
 - Proximity sensor cable
4. Remove the nuts securing the cable clamps on the NCR SelfServ Checkout Door and then set aside the cable clamps.
5. Remove the cable ties securing the cables together and then discard the following LED indicator cables:
 - Coin-in LED cable
 - Coin-out LED cable
 - Coupon-in cable

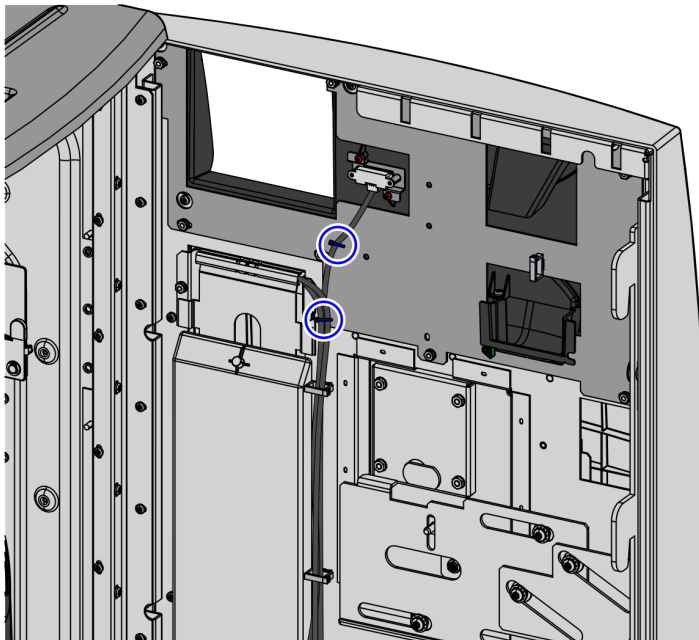


6. If the existing fascia is equipped with a proximity sensor, remove and set aside the proximity sensor for reinstallation on the new fascia.
7. Remove the ten (10) screws securing the plastic door fascia to the metal Core Door, as shown in the image below.

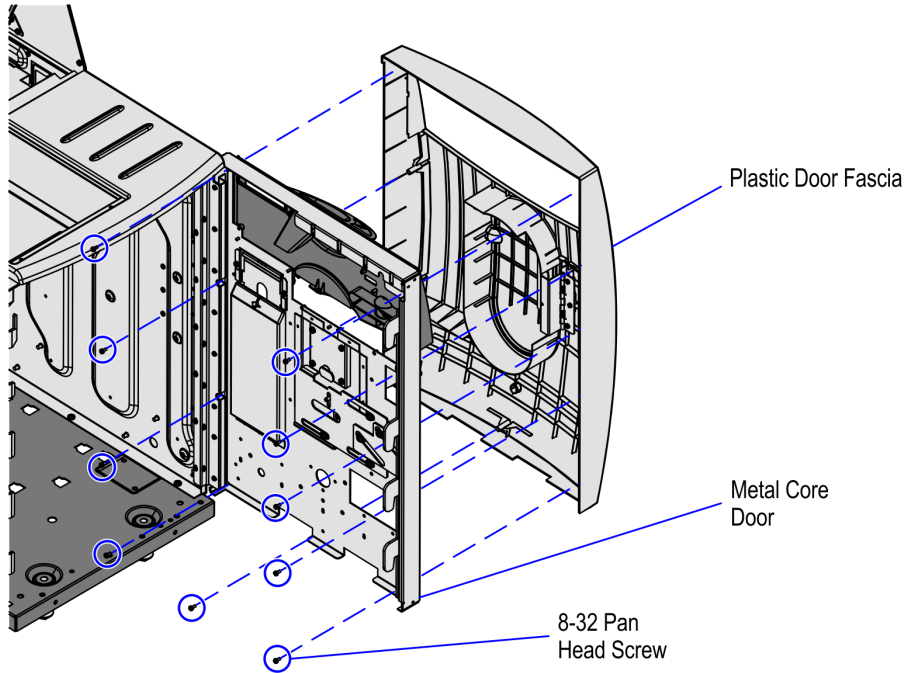

CCP-73241

8. Remove the three (3) screws securing the existing fascia to the Core Door, as shown in the image below.

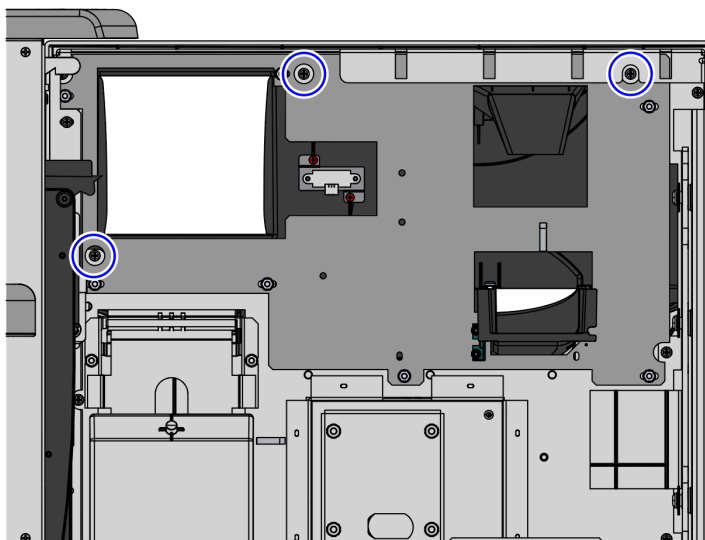


CCP-77203

9. Install the new fascia. For more information, refer to [Installing Notes Out Only Fascia](#) on the next page.

Installing Notes Out Only Fascia

To install the Notes Out Only Fascia on the SelfServ Checkout Core Door, follow these steps:

1. Secure the Plastic Motion Sensor Lens to the fascia using two (2) plastite screws, as shown in the image below.

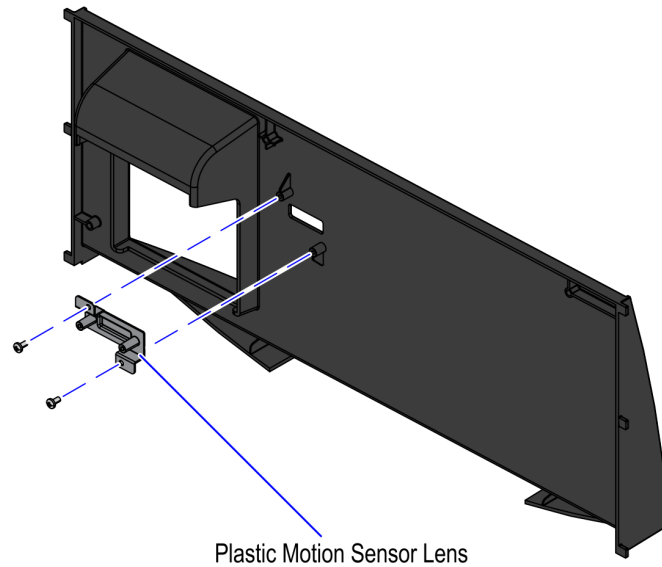


CCP-77204

2. Secure the Notes Out Only Fascia to the NCR SelfServ Checkout Core Door frame using three (3) screws.




Note: To avoid stripping the threads, **do not over tighten** the screws.

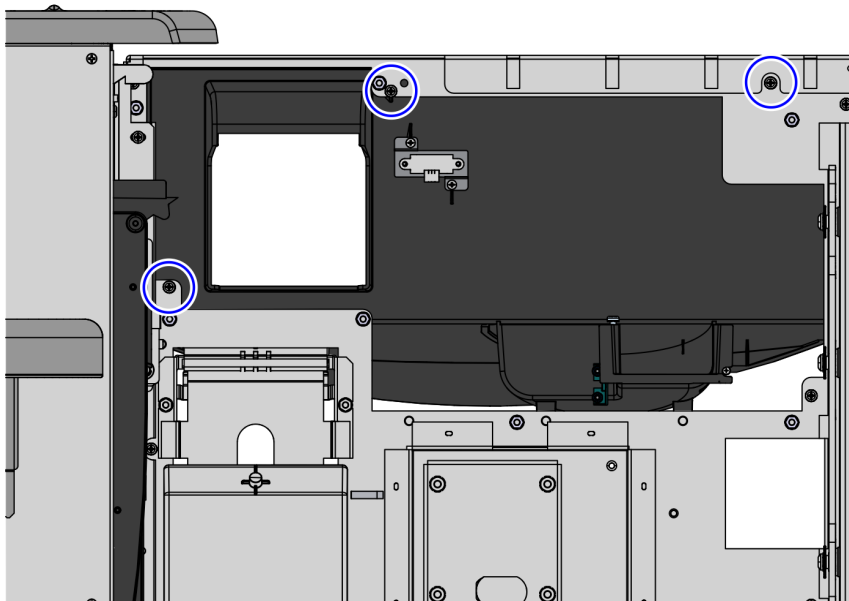

CCP-77280

3. Install the plastic door fascia to the SelfServ Checkout Core Door using ten (10) screws, as shown in the image below.

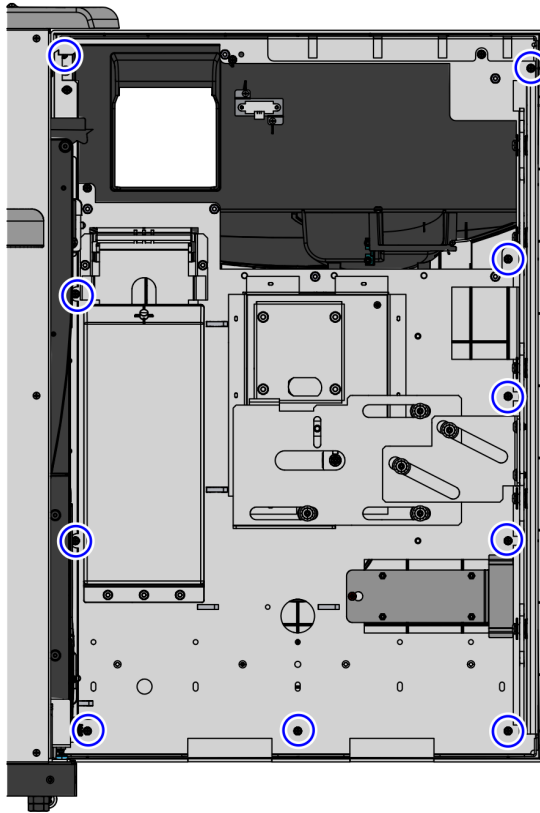

CCP-77281

4. Install the Proximity Sensor, if necessary.




Note: Reuse the cable clamps that were set aside to secure the sensor cable.


Removing Motorized Card Reader (MCR)

To remove an existing MCR, follow these steps:


1. Open the Upper Cabinet Door. For more information, refer to [Opening the Upper Cabinet Door](#) on page 12.
2. Remove and set aside the four (4) screws from the top and bottom part of the Suica assembly to remove the Suica cover.

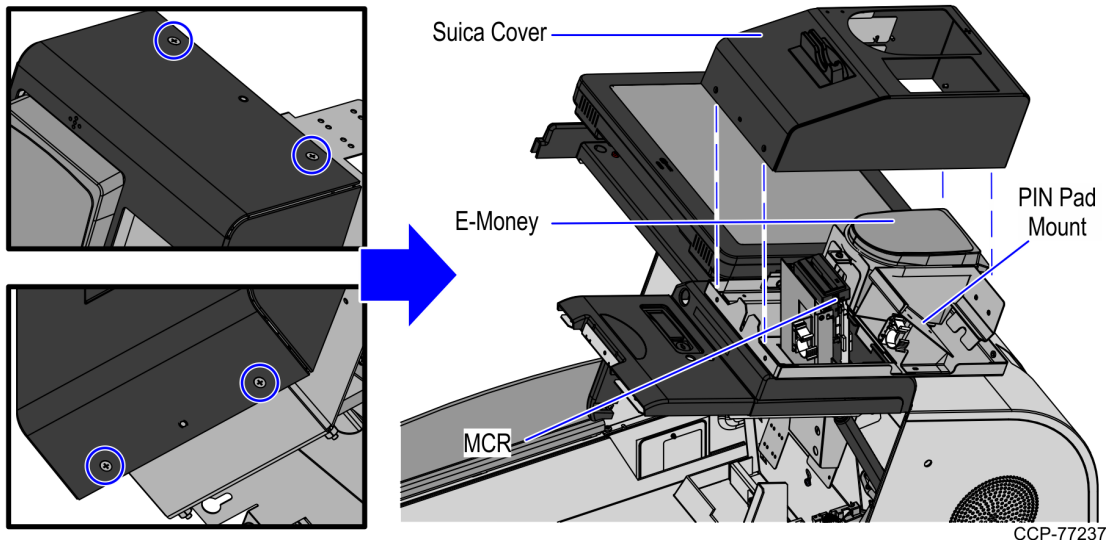


3. Detach the Motorized Card Reader Assembly from the bracket by removing four (4) screws. Set aside the screws.

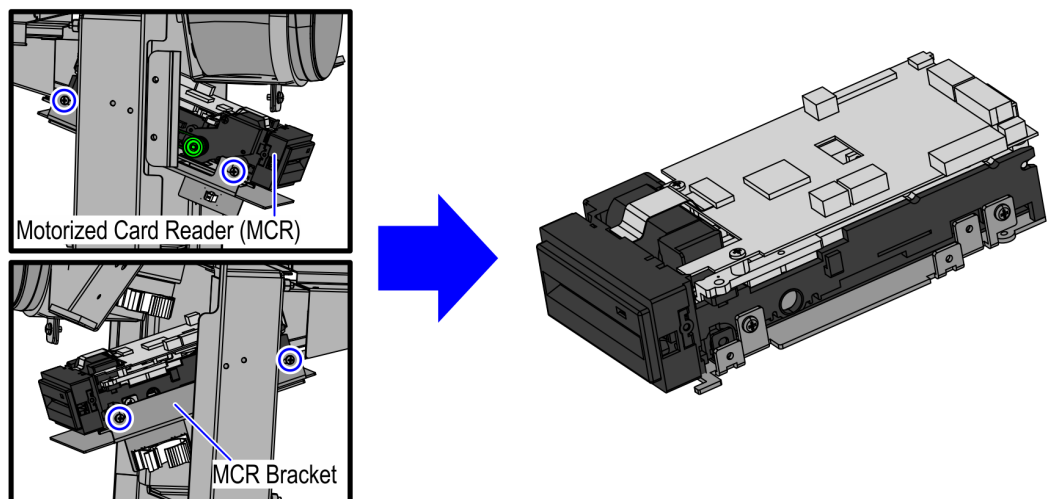


4. Detach the Motorized Card Reader from the base plate by removing three (3) screws, as shown in the image below.

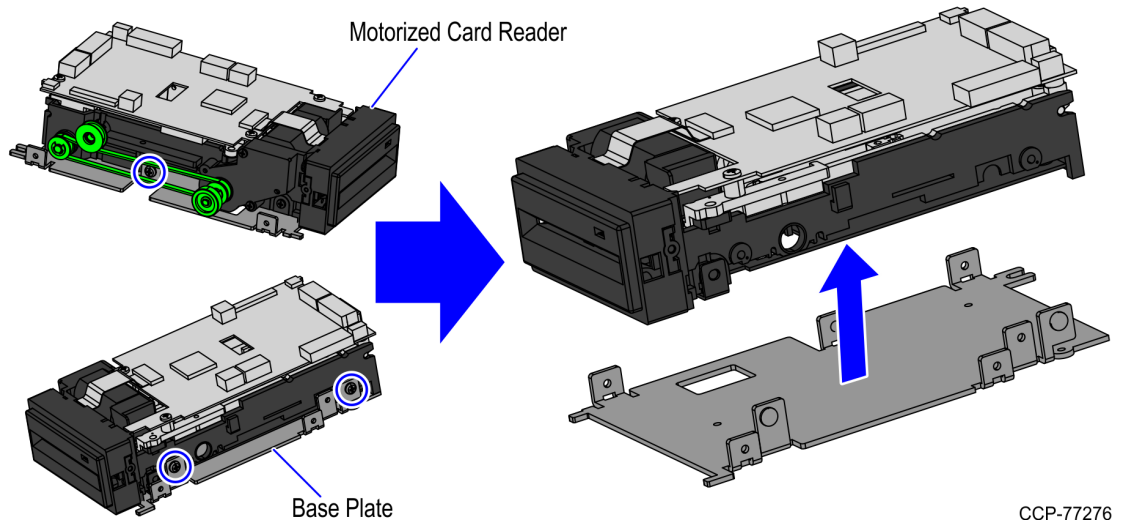

5. Install the base plate on the Motorized Card Reader bracket using the four (4) screws that were set aside.

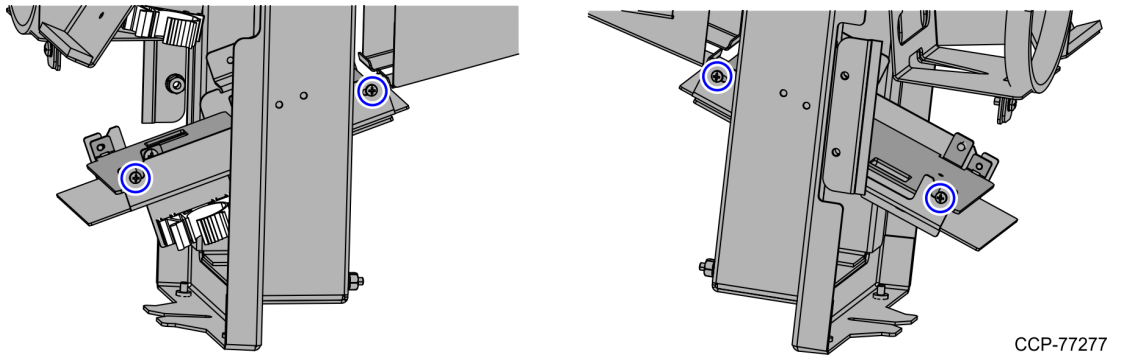

6. Push the MCR Bezel inward to remove from the Suica Cover.

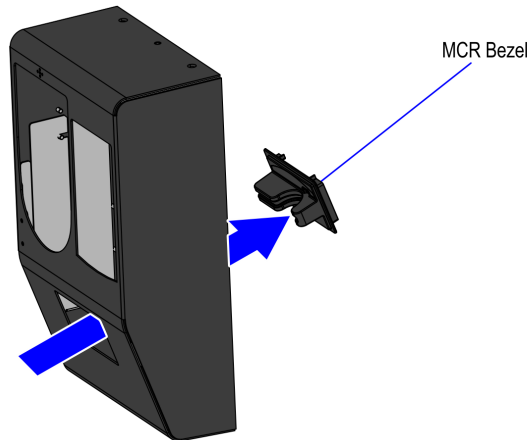


Installing Motorized Card Reader (MCR) Blanking Plate

To install the Motorized Card Reader (MCR) Blanking Plate on the Suica Assembly of the Tower Cabinet, follow these steps:


1. Remove the existing Motorized Card Reader, if necessary. For more information, refer to [Removing Motorized Card Reader \(MCR\)](#) on page 8.
2. Clean the inner surface of the Suica cover around the MCR chute cut-out.
3. Remove the protective film of the double-sided tape around the MCR Blanking Plate.
4. Position the MCR Blanking Plate on the MCR chute cut-out of the Suica cover.



Note: Ensure that the smaller piece of the Blanking Plate pushes through the cut-out.

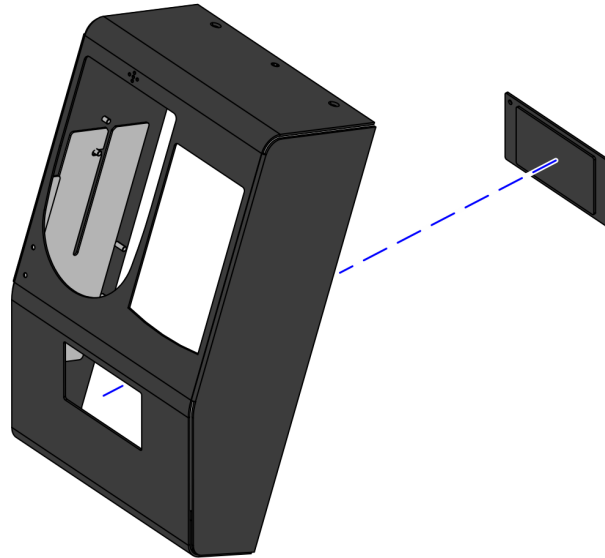

5. Install the Suica cover using the four (4) screws that were set aside during removal procedure.

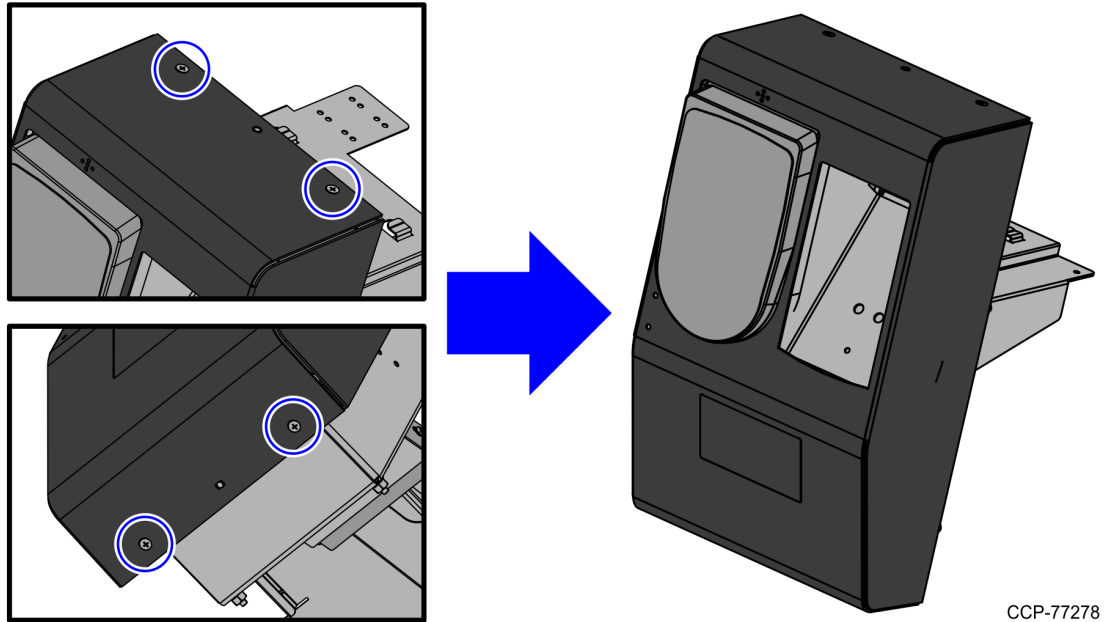


CCP-77278

Opening the Upper Cabinet Door

To open the Upper Cabinet Door, follow these steps:

1. Insert key into lock on door latch and turn key counterclockwise.

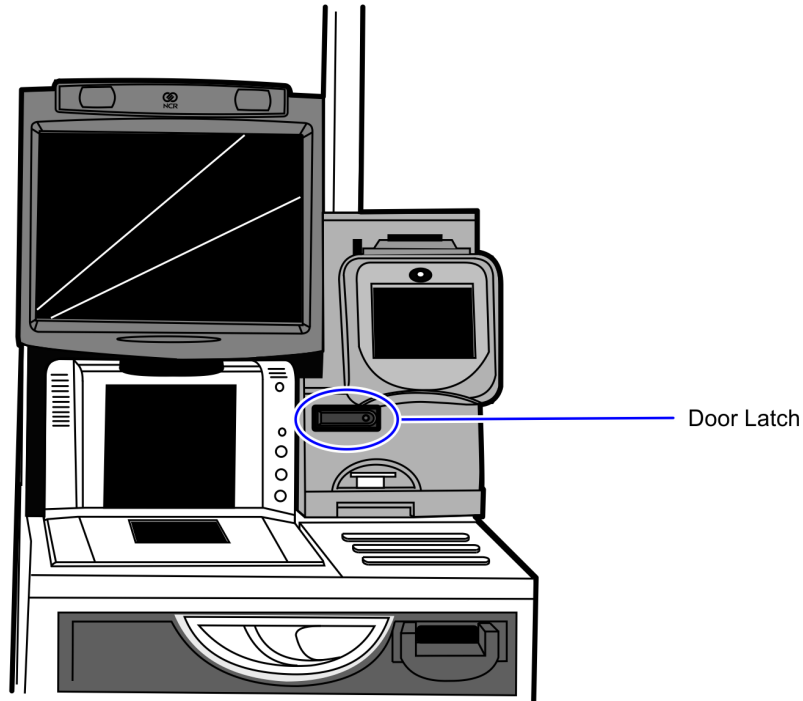


CCP-70311

2. Remove key and then press the keylock to unlatch the door.



Caution: Ensure that the door is pushed down while lock is pressed because the door will automatically open.

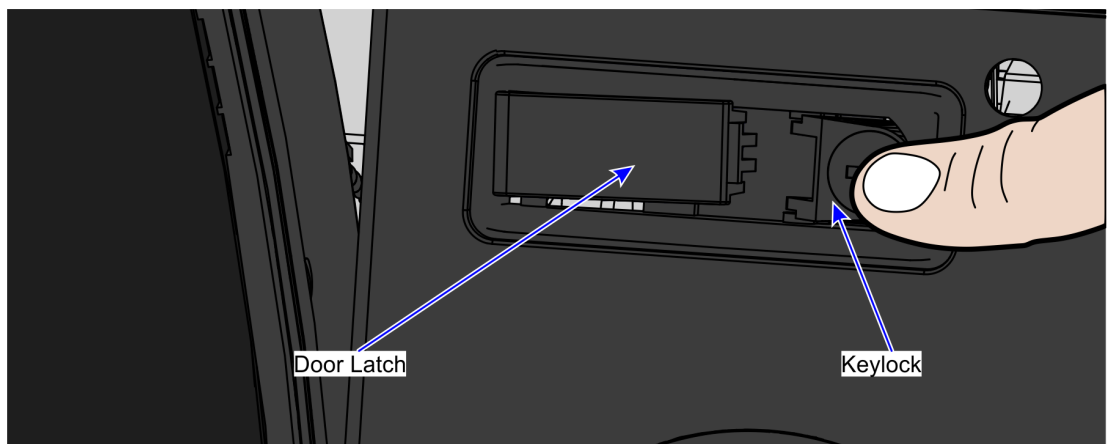

CCP-72718

3. Lift the door open.