
Kit Instructions

No Tri-Light/Lane Light Pole Blanking Plate

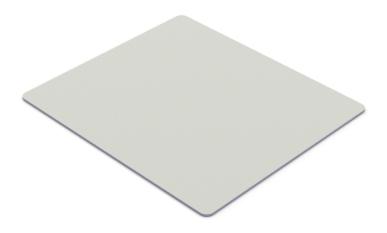



The product described in this document is a licensed product of NCR Corporation.

NCR is a registered trademark of NCR Corporation. NCR SelfServ™ Checkout is a trademark of NCR Corporation in the United States and/or other countries. Other product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Where creation of derivative works, modifications or copies of this NCR copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR, NCR's copyright notice must be included.

It is the policy of NCR Corporation (NCR) to improve products as new technology, components, software, and firmware become available. NCR, therefore, reserves the right to change specifications without prior notice.

All features, functions, and operations described herein may not be marketed by NCR in all parts of the world. In some instances, photographs are of equipment prototypes. Therefore, before using this document, consult with your NCR representative or NCR office for information that is applicable and current.

To maintain the quality of our publications, we need your comments on the accuracy, clarity, organization, and value of this book. Please use the link below to send your comments.

Email: FD230036@ncr.com

Copyright © 2020 By NCR Corporation 864 Spring St. NW Atlanta, GA 30308 United States All Rights Reserved


Revision Record

| Issue | Date | Remarks |
|-------|----------|-------------|
| А | Mar 2020 | First Issue |
| | | |
| | | |

No Tri-Light/Lane Light Pole Blanking Plate

This publication provides procedures for replacing the existing Tri–Light/Lane Light Pole of the NCR SelfServ™ Checkout (7707) unit with a Blanking Plate.

Kit Contents

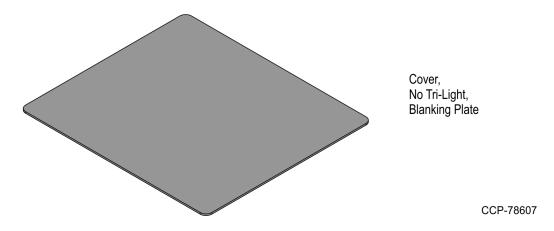


| Part Number | | Description |
|-------------|-------------|---|
| 497-0527876 | | No Tri-Light/Lane Light Pole Blanking Plate |
| | 497-0522835 | Cover - No Tri-Light, Blanking Plate |
| * | 497-0423108 | Instructions-Kit (Reference Sheet) |

^{*} Items marked with an asterisk are not called out on the image.


Installation Procedures

To install the Blanking Plate, follow these steps:

- 1. Do the following:
 - a. Remove the existing Tri–Light/Lane Light Assembly. For more information, refer to *Removing the Tri–Light/Lane Light Assembly* on page 4.
 - b. Remove the existing Tri–Light/Lane Light Pole. For more information, refer to *Removing Tri–Light/Lane Light Pole* on page 6.
- 2. Disconnect the Tri–Light/Lane Light adapter cable from the KIO Board.
- 3. Detach the cable from the P-loops starting from the Lower Core (Cabinet) Module to the Upper Enclosure, as shown in the image below.

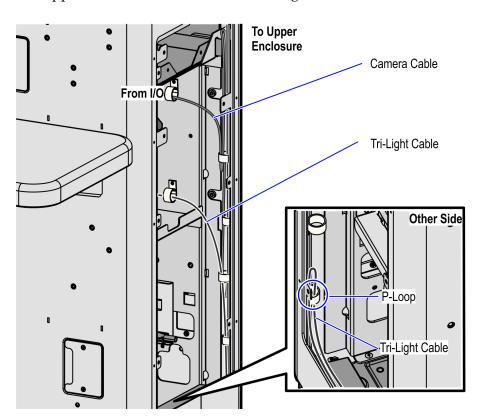


4. Install the back panels to the Tower frame using two (2) screws.

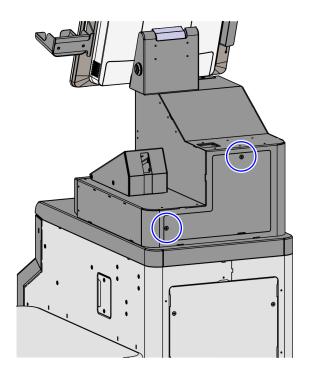

CCP-78610

5. Do the following:


- a. Remove the protective film of the double-sided tape on the back of the Blanking Plate.
- b. Attach the Blanking Plate on the Tri-Light Pole slot. Ensure that the Blanking Plate is positioned based on the measurements shown in the image below.

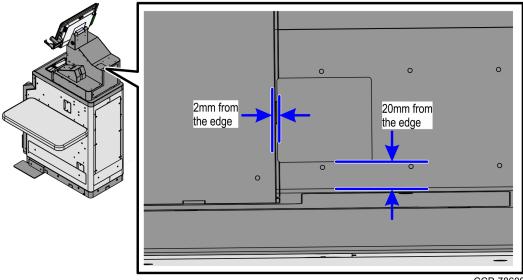

Removing the Tri-Light/Lane Light Assembly


To remove the Tri–Light/Lane Light assembly, follow these steps:

- 1. Shut down the NCR SelfServTM Checkout (7707) R6-Japan software and hardware systems.
- 2. Remove the screw securing the Tri–Light/Lane Light Assembly to the Tri–Light/Lane Light pole.

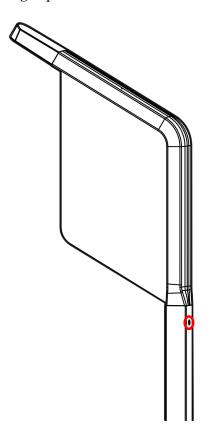

ccp-62078


3. Lift the Tri–Light/Lane Light Assembly and then disconnect the cables.

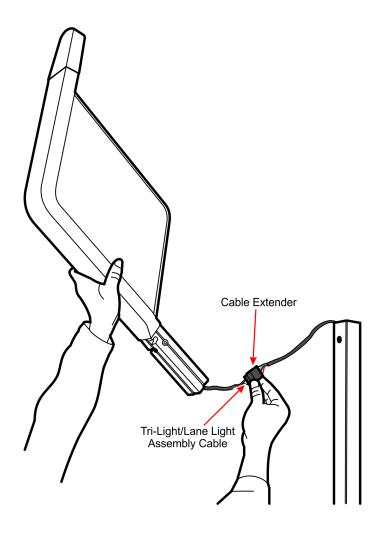


Removing Tri-Light/Lane Light Pole

To remove the Tri–Light/Lane Light pole, follow these steps:

1. Remove the back panels from the Tower frame by removing two (2) screws.

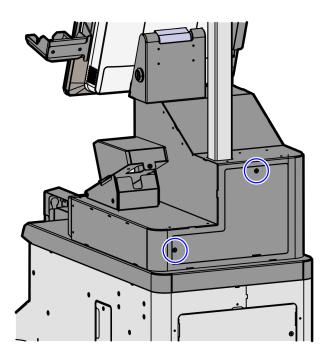

2. Remove four (4) screws securing the pole to the unit.

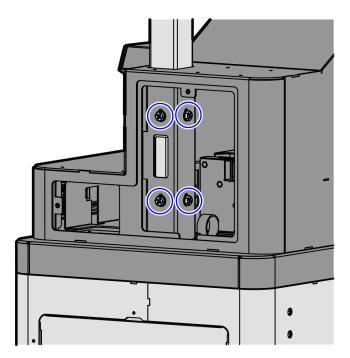

- 3. Disconnect the Tri–Light/Lane Light cable from the KIO Board.
- 4. Carefully lift the pole out of the unit.