



NCR Voyix SelfServ™ 90 (7709)

Kit Instructions

C600 Coupon Printer Arm



7709-K509

Issue B

Copyright and Trademark Information

The product described in this document is a copyrighted work of NCR Voyix Corporation.

NCR Voyix SelfServ™ 90 (7709) is a trademark of NCR Voyix Corporation.

It is the policy of NCR Voyix Corporation to improve products as technology, components, software and firmware become available. NCR Voyix therefore reserves the right to change specifications without prior notice.

All features, functions and operations described herein may not be marketed by NCR Voyix in all parts of the world. In some instances, photographs are of equipment prototypes.

Therefore, before using this document, consult with your NCR Voyix representative or NCR Voyix office for information that is applicable and current.

© 2019 – 2026

By NCR Voyix Corporation

Atlanta, Georgia, USA

All Rights Reserved

Confidential and proprietary information of NCR Voyix.

Use and disclose solely pursuant to company instructions.

Table of Contents

7709-K509 C600 Coupon Printer Arm	5
Kit Contents	5
Installation Procedure	6

Confidential and proprietary information of NCR Voyix.
Use and disclose solely pursuant to company instructions.

Revision Record


Publication issue	Date	Description of change
A	Jun 2019	First issue.
B	Jan 2026	Updated with NCR Voyix brand.

Confidential and proprietary information of NCR Voyix.
Use and disclose solely pursuant to company instructions.

7709-K509 C600 Coupon Printer Arm

This publication provides procedures for installing the C600 Coupon Printer Arm on an NCR Voyix SelfServ™ 90 (7709).

Kit Contents

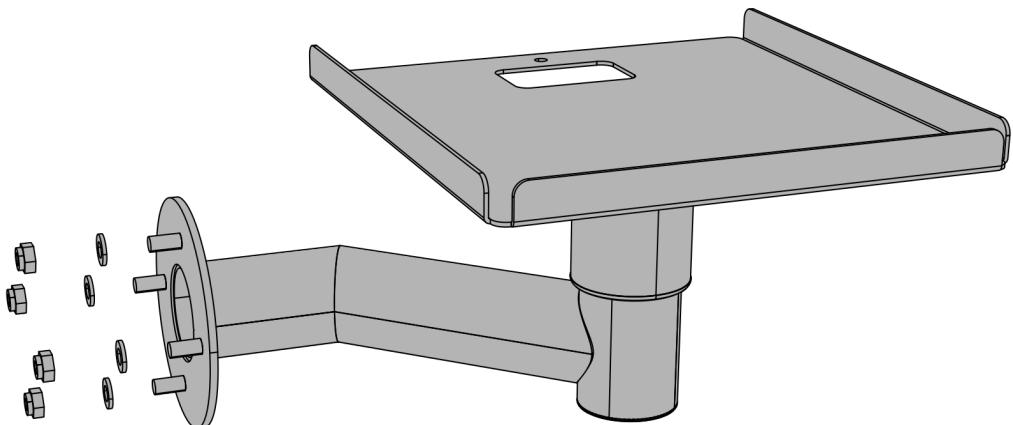

CCP-76606

Part Number	Description
497-0525214	7709-K509 C600 Coupon Printer Arm
497-0525218	Pad Mount, Printer, Catalina C600, 7709
* 497-0423108	Instructions-Kit (Reference Sheet)


* Items marked with an asterisk are not called out on the image.

Installation Procedure

⚠ Warning


Disconnect the AC power cord before disassembling the Terminal.

1. Open the front of the kiosk.

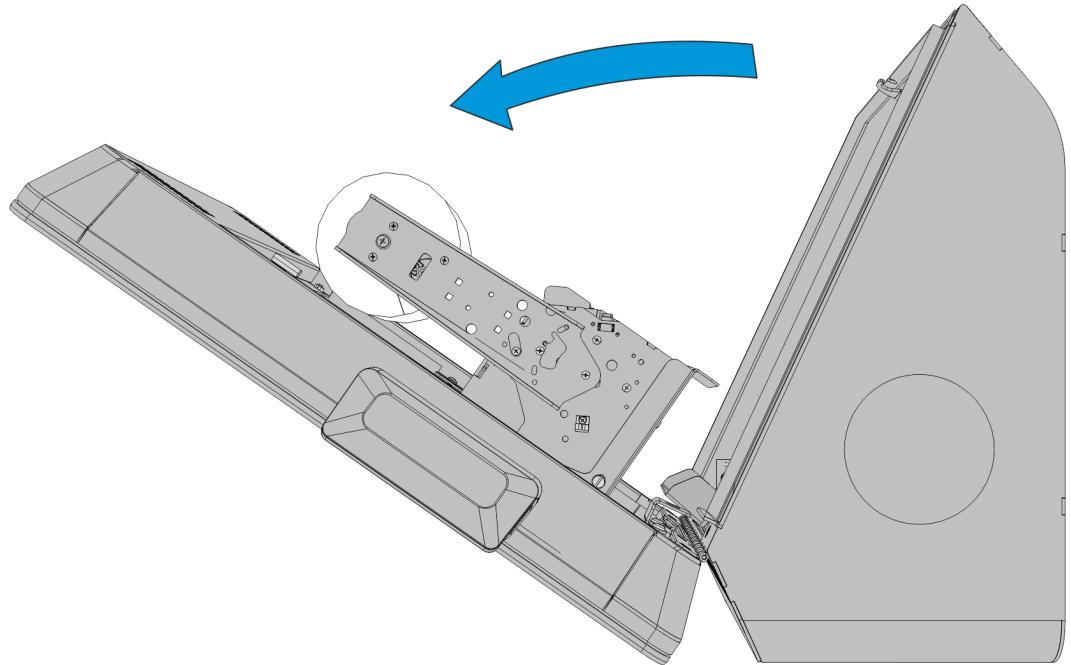


60922

2. Remove PIN pad arm blank plate.
 - a. Unstrap the cinch straps (2) that secure the power supply to the bracket. Remove the power supply and the cinch straps from the bracket.

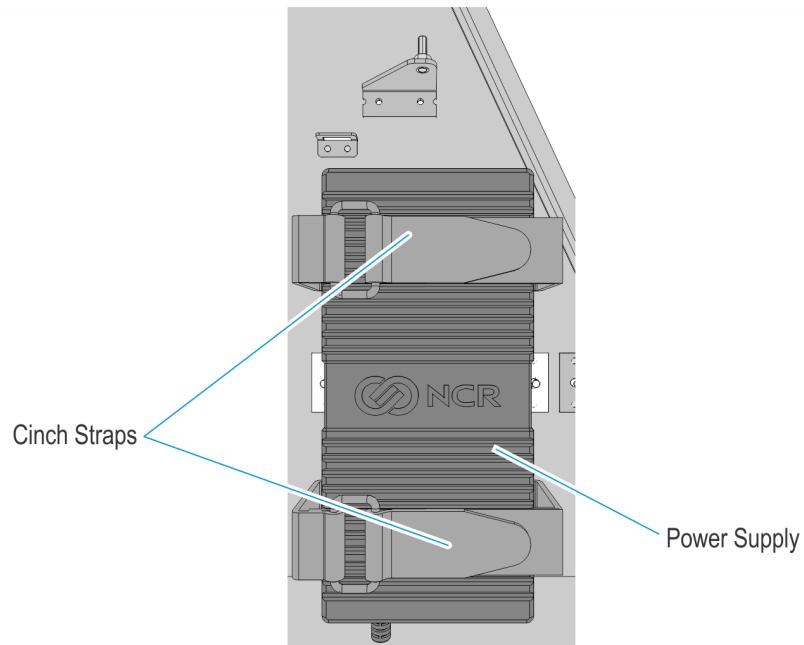


60907

- b. Remove the screws (2) that secure the power supply bracket. Remove the bracket.

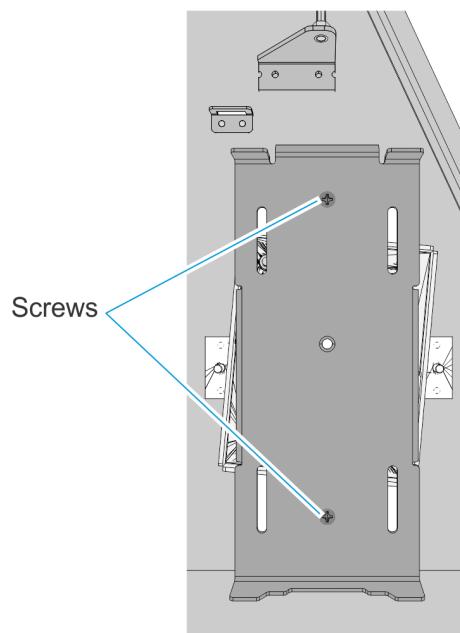


60906

- c. Remove the screws (2) that secure the blank plate. Remove the blank plate.

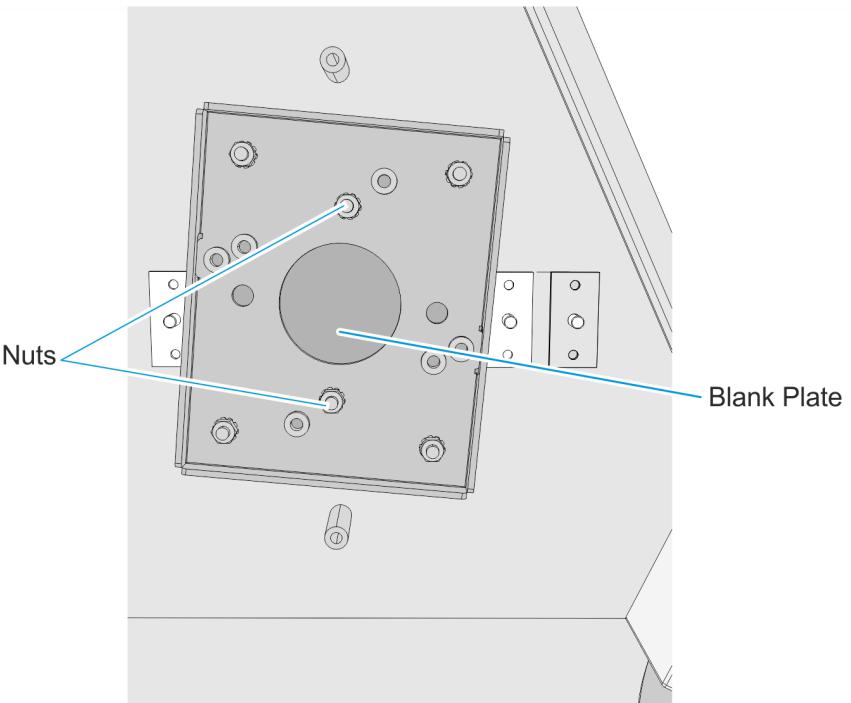


3. Insert the mounting studs of the angular arm through the mounting holes on the cabinet and secure the arm with nuts (4).

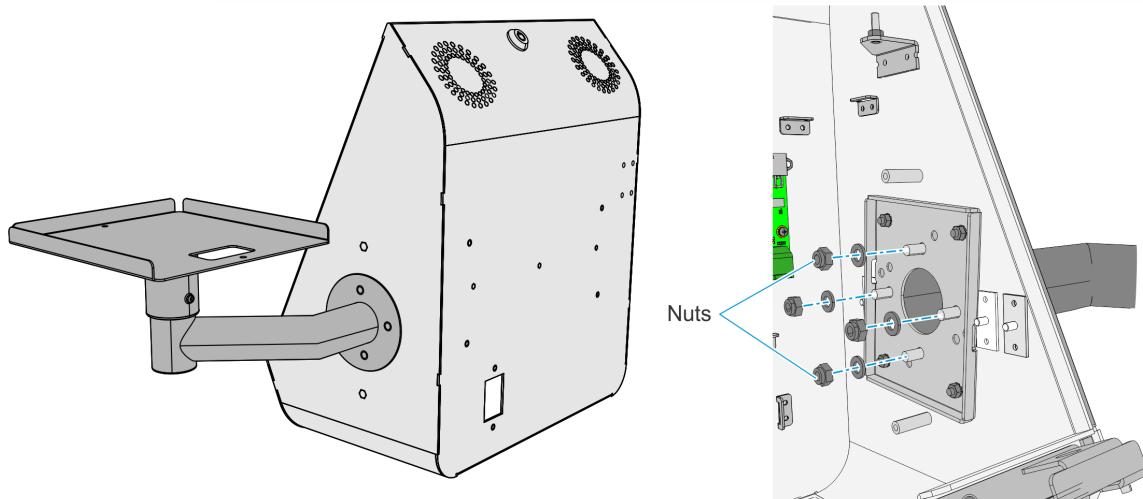

4. Re-install the power supply bracket and the power supply.
5. Place the Catalina Coupon Printer on the carrier bracket.

6. Connect the power cable and ethernet cable to the Catalina Coupon Printer.

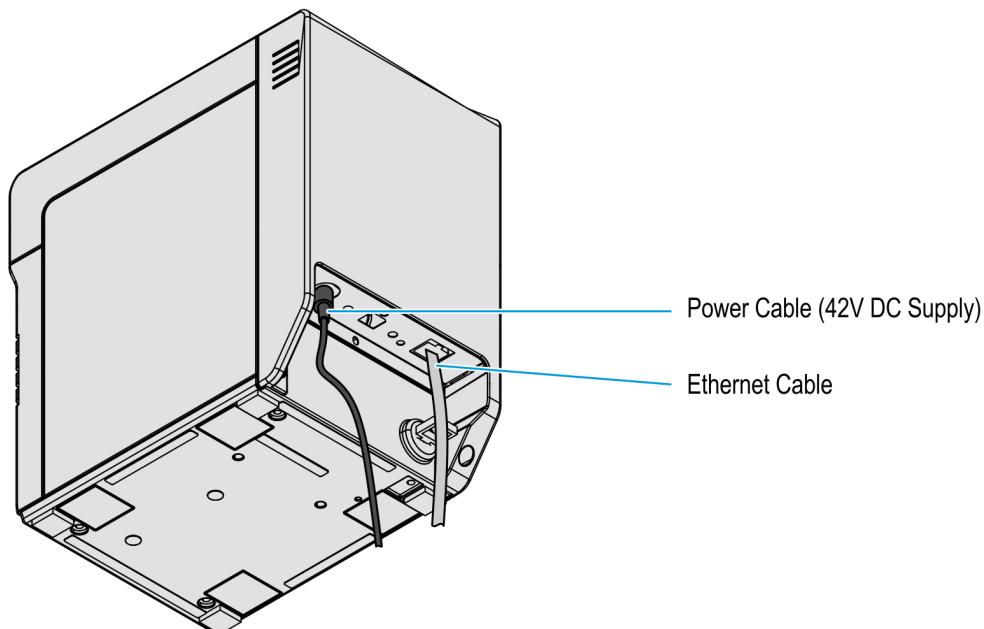

CCP-76614

7. Connect the Ethernet cable to the LAN.

 **Note**

Ensure that the Ethernet Cable from the Catalina Coupon Printer is directly connected to the Store network. Do not connect to the NCR Voyix 7709 LAN.