



NCR Voyix SelfServ™ 90 (7709)

Kit Instructions

Coupon Blank Plate



7709-K576

Issue B

Copyright and Trademark Information

The product described in this document is a copyrighted work of NCR Voyix Corporation.

NCR Voyix SelfServ™ 90 (7709) is a trademark of NCR Voyix Corporation.

It is the policy of NCR Voyix Corporation to improve products as technology, components, software and firmware become available. NCR Voyix therefore reserves the right to change specifications without prior notice.

All features, functions and operations described herein may not be marketed by NCR Voyix in all parts of the world. In some instances, photographs are of equipment prototypes.

Therefore, before using this document, consult with your NCR Voyix representative or NCR Voyix office for information that is applicable and current.

© 2016 – 2026

By NCR Voyix Corporation

Atlanta, Georgia, USA

All Rights Reserved

Confidential and proprietary information of NCR Voyix.

Use and disclose solely pursuant to company instructions.

Table of Contents

7709-K576 Coupon Blank Plate	5
Kit Contents	5
Installation Procedure	6

Confidential and proprietary information of NCR Voyix.
Use and disclose solely pursuant to company instructions.

Revision Record


Publication issue	Date	Description of change
A	Apr 2016	First issue.
B	Jan 2026	Updated with NCR Voyix brand.

Confidential and proprietary information of NCR Voyix.
Use and disclose solely pursuant to company instructions.

7709-K576 Coupon Blank Plate

This kit provides the components to add a coupon blank plate to the NCR SelfServ™ 90 Kiosk.

Kit Contents

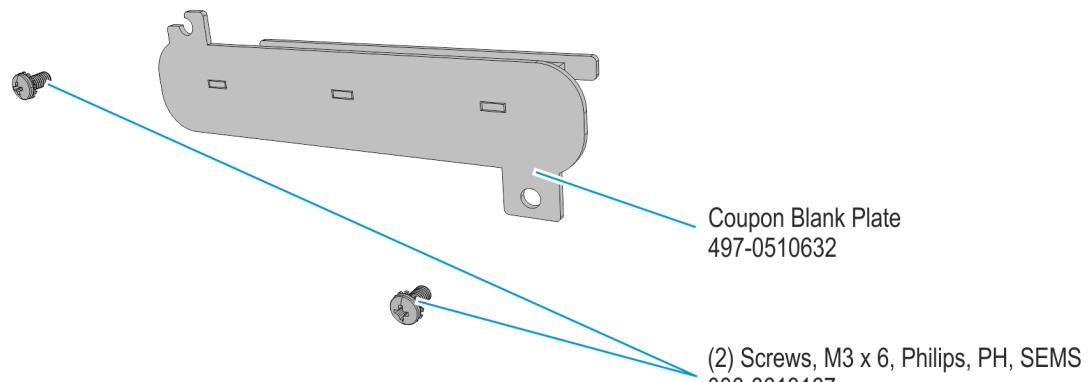


Part Number	Description
497-0511069	7709-K576 Coupon Blank Plate
497-0510632	Blank, Plate, Coupon
006-8613167	Screw - Sems, M3X6Mm Ph Phillips Machine Screw External-Tooth Washer, Zinc Plated (2 pcs)
497-0510526	Label - Blank, Coupon/Printer Graphics
* 497-0423108	Instructions-Kit (Reference Sheet)

* Items marked with an asterisk are not called out on the image.


Installation Procedure

1. Open the front of the kiosk.

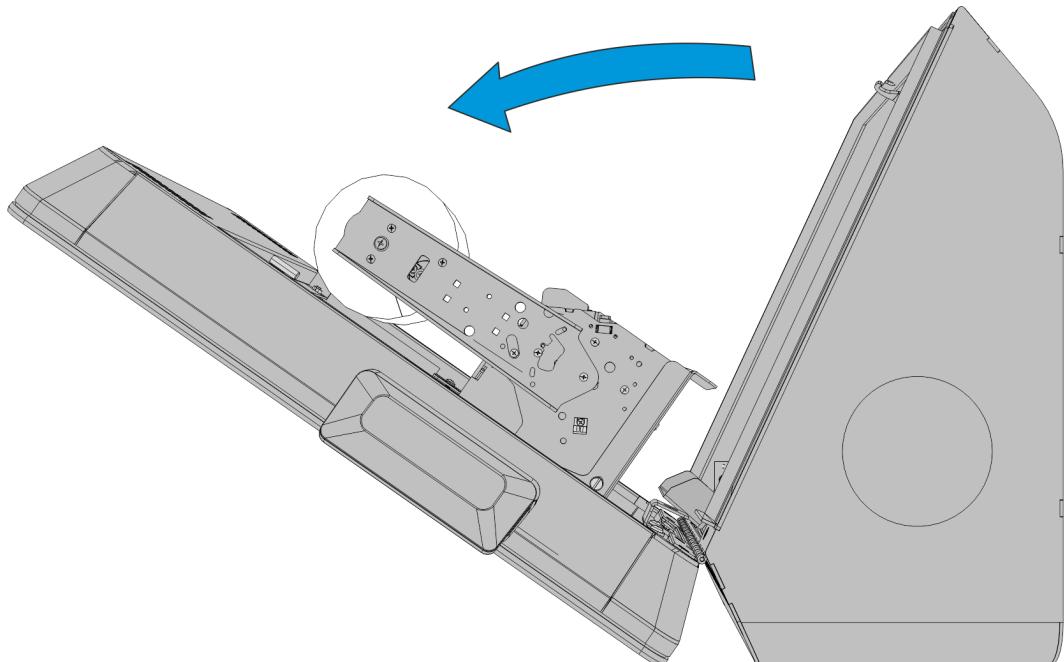

60922


2. Install the coupon blank plate. Secure with screws (2).

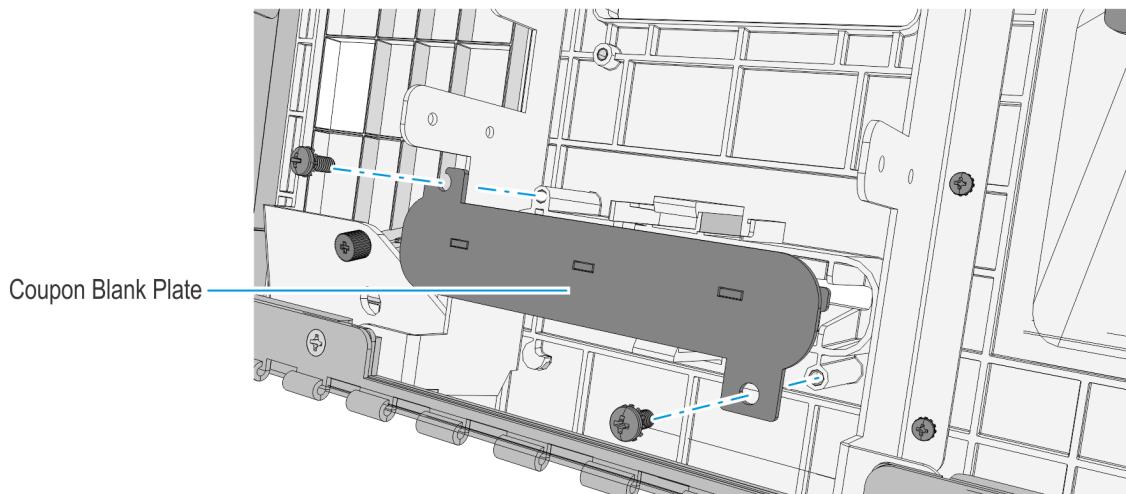

60909

3. Cover the Coupon Graphics with the Blank Label. When attaching the blank label, please observe the following:

- The top edge of the label is parallel to the coupon opening.
- The label is smooth, straight, and not crumpled.
- The whole coupon graphic is covered and no part is visible exceeding the blank label.

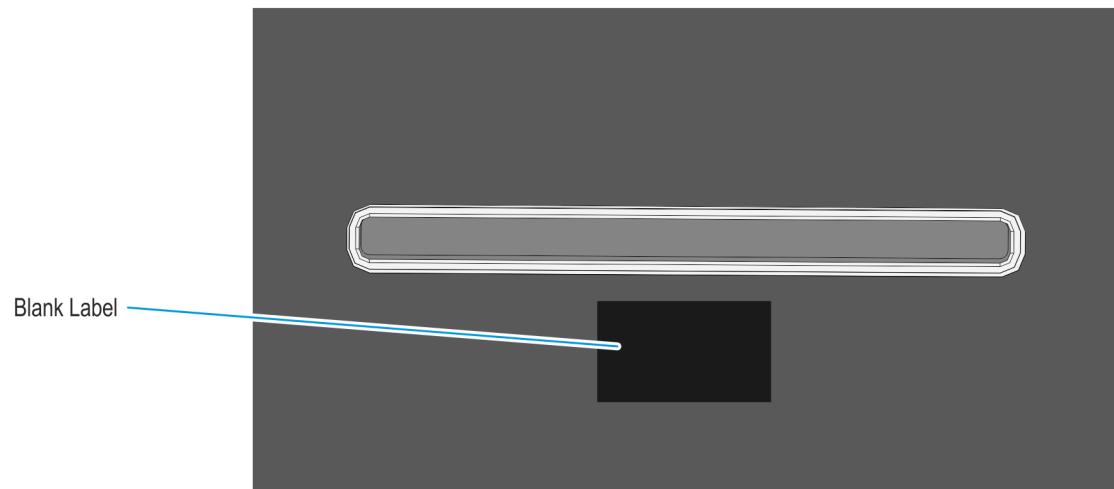

60908