




# NCR Voyix SelfServ™ 90 (7709)

## Kit Instructions

---

### Sensormatic Backpack (Walmart Blue)

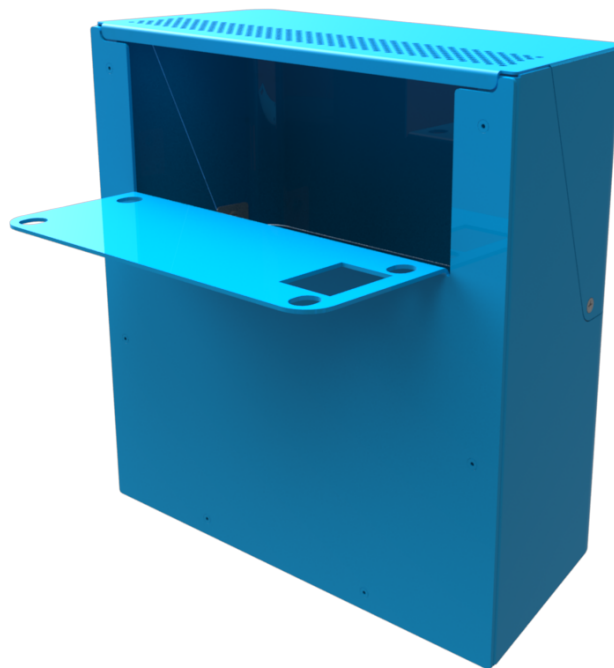

7709-K741  
Issue B

# Copyright and Trademark Information

---

The product described in this document is a copyrighted work of NCR Voyix Corporation.

NCR Voyix SelfServ™ 90 (7709) is a trademark of NCR Voyix Corporation.

It is the policy of NCR Voyix Corporation to improve products as technology, components, software and firmware become available. NCR Voyix therefore reserves the right to change specifications without prior notice.

All features, functions and operations described herein may not be marketed by NCR Voyix in all parts of the world. In some instances, photographs are of equipment prototypes.

Therefore, before using this document, consult with your NCR Voyix representative or NCR Voyix office for information that is applicable and current.

© 2017 – 2026

By NCR Voyix Corporation

Atlanta, Georgia, USA

All Rights Reserved

# Table of Contents

---

|                                                      |          |
|------------------------------------------------------|----------|
| <b>7709-K741 Sensormatic Backpack (Walmart Blue)</b> | <b>5</b> |
| Kit Contents                                         | 5        |
| Installation Procedure                               | 6        |
| Cable Routing                                        | 14       |
| Sensormatic Antenna Cable                            | 15       |
| RS232 Power Pad and USB to RS232                     | 16       |

# Revision Record

---

| Publication issue | Date     | Description of change         |
|-------------------|----------|-------------------------------|
| A                 | Apr 2017 | First issue.                  |
| B                 | Jan 2026 | Updated with NCR Voyix brand. |

# 7709-K741 Sensormatic Backpack (Walmart Blue)

---

This kit provides the components to install a backpack mount for a Sensormatic controller when integrated to the NCR Voyix SelfServ™ 90 (7709) Kiosk.


This kit instruction sheet is to be used with the 7709-K738 Sensormatic kit instructions.



## Note

The Sensormatic Controller, Antenna, and Antenna Brackets are customer supplied.

## Kit Contents

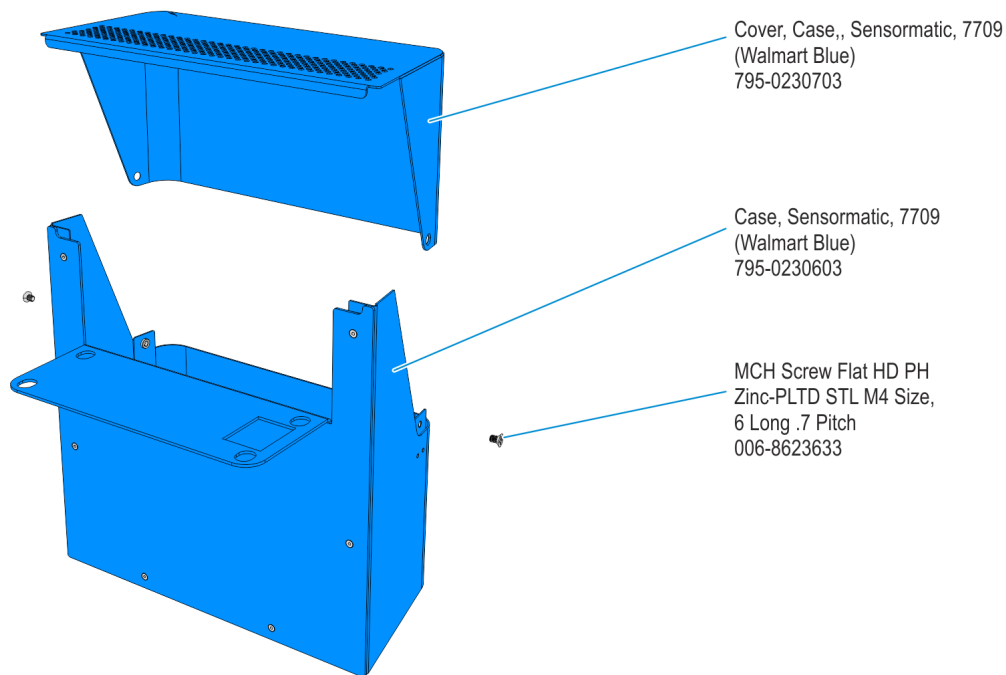

CCP-70884

# Installation Procedure



## Warning

Disconnect the AC power cord before disassembling the Terminal.



## Caution

Do not connect or disconnect the Sensormatic Antenna or any Sensormatic Cable to the Sensormatic Controller when power is ON as this damages the controller.



## Caution


Make sure that the cables are routed as shown. Sensormatic Modules give off strong electrical discharge that may damage other modules.



## Caution


Static Electricity Discharge may permanently damage your system. Discharge any static electricity build up in your body by touching your terminal's exterior panels for a few seconds. Avoid any contact with internal parts and handle cards only by their external edges.

1. Shutdown and power off the terminal.
2. Open the front of the kiosk.

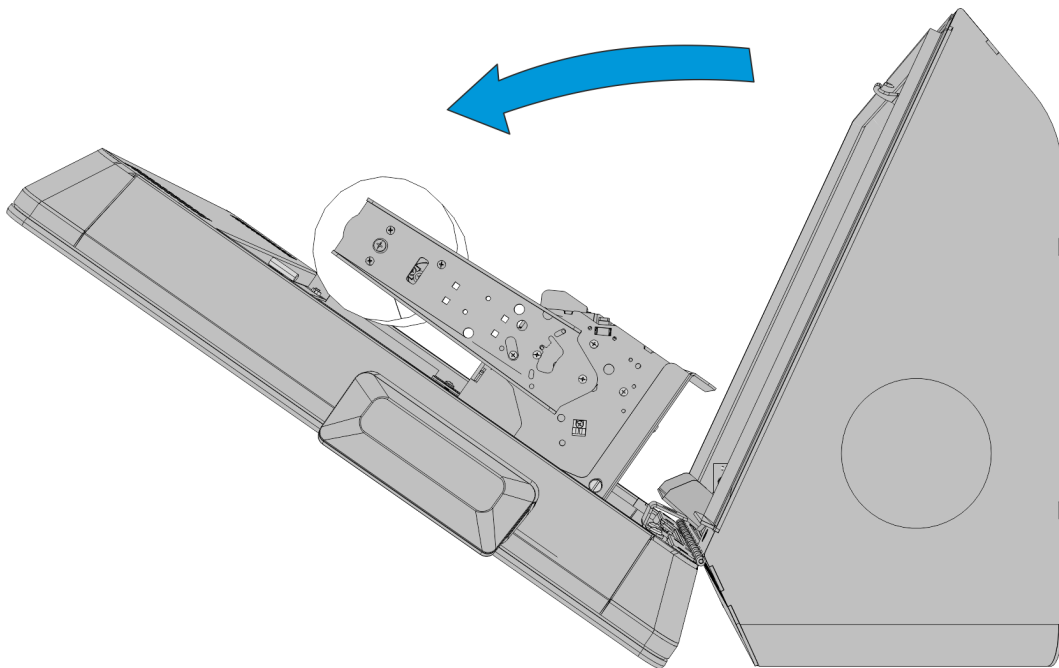

60922

3. Remove the two nuts securing the coupon bin to the kiosk cabinet and remove the coupon bin.

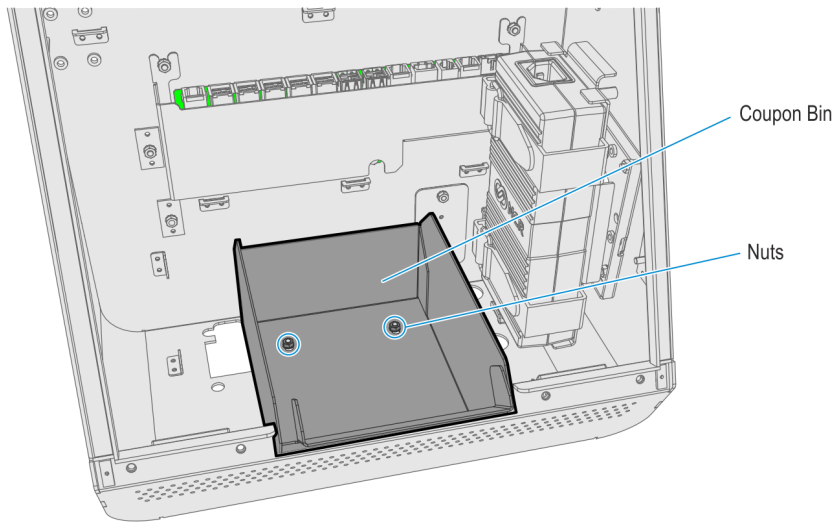

CCP-60825


4. Remove the Kiosk Counter Top Unit from the pedestal.



**Caution**


When loosening and removing the screws securing the kiosk to the pedestal, make sure that the kiosk is properly supported and will not fall off the pedestal.

- a. Remove one screw and loosen three screws securing the kiosk to the pedestal.

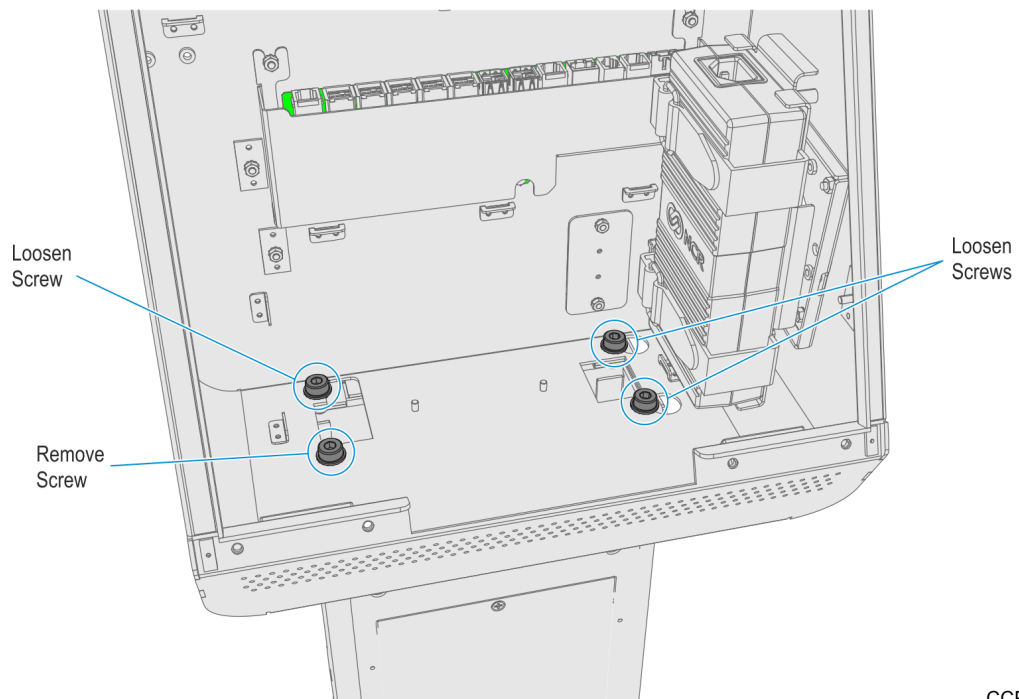


CCP-60826

- b. Slide the kiosk to the left and lift up and off of the pedestal.
  - c. Remove the three remaining mounting screws from the pedestal.
5. Position the backpack case on the pedestal aligning their mounting holes, then install three screws just enough to secure the case to the pedestal but leaving room to insert and slide the kiosk under the screw heads.

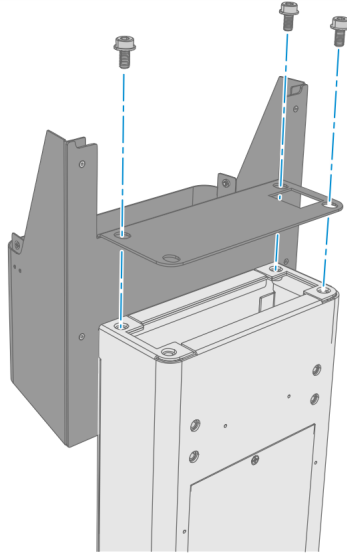


CCP-60827

6. Position the kiosk on top of the pedestal inserting its mounting holes to the screws, then slide the cabinet to the right.

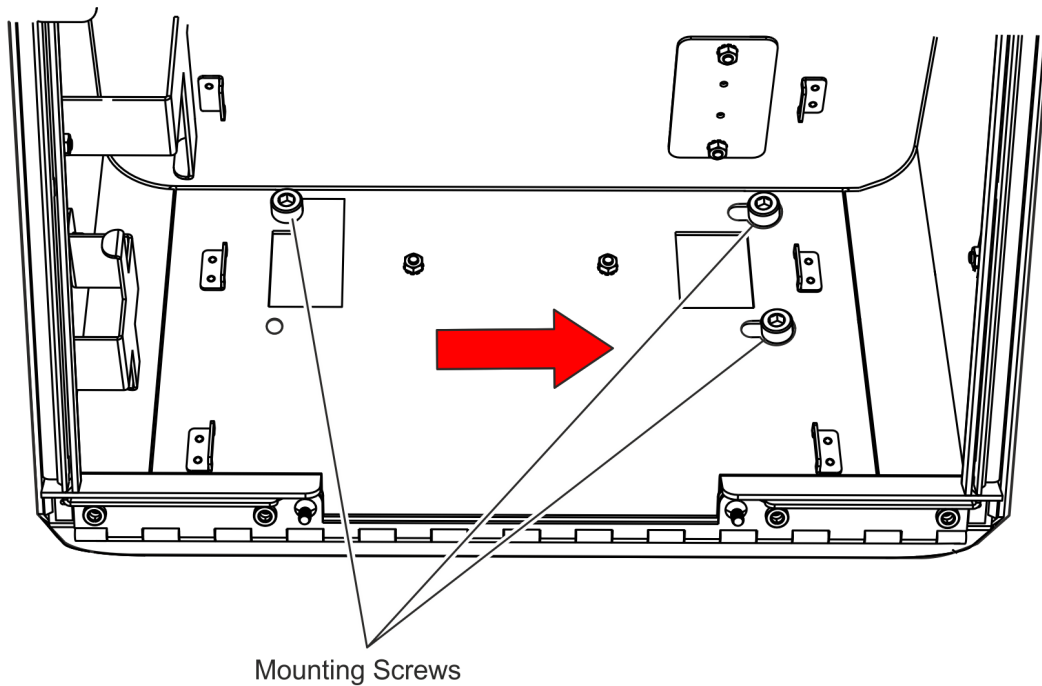

ATL-33780

7. Install the fourth mounting screw and tighten all mounting screws to secure the Sensormatic case and kiosk counter top unit to the pedestal.

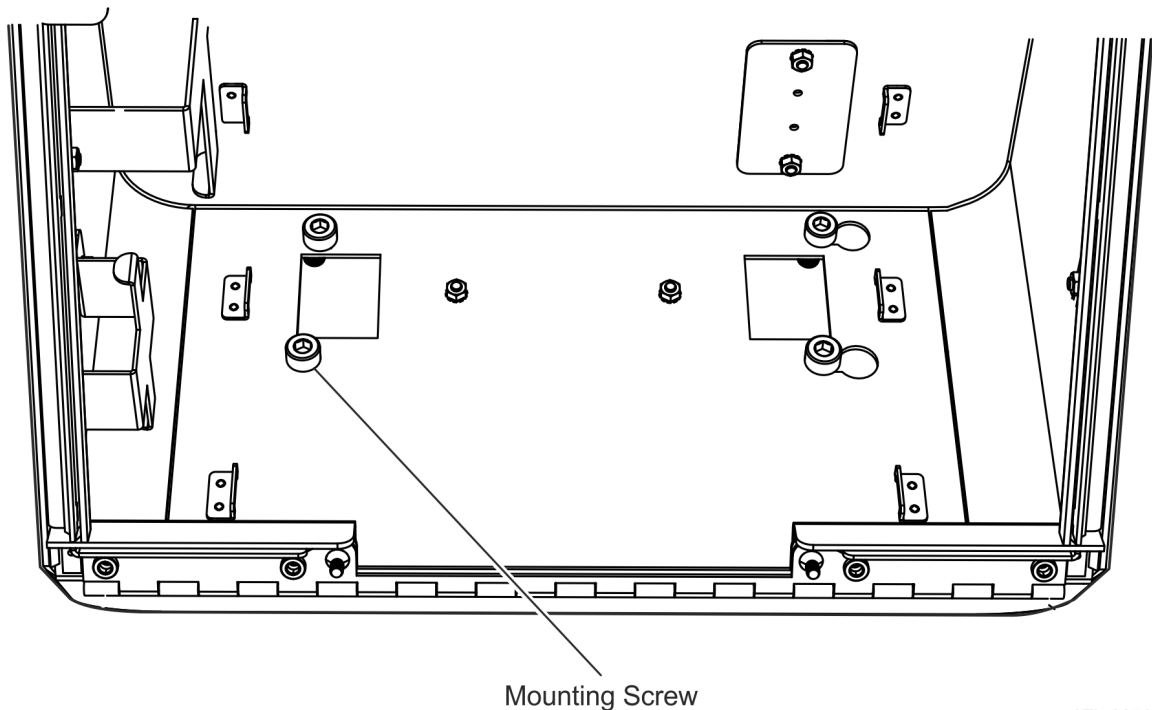

ATL-33781

8. Mount the coupon bin to the inside the kiosk cabinet and secure with screws (2).
9. Place the Sensormatic controller into the backpack with its I/O ports facing upwards.


10. Make sure that the Sensomatic Controller is OFF and connect the Sensomatic Cables to the Sensomatic Controller ports in the following order:



**Caution**

To avoid damage to the Sensomatic Controller, Do NOT reverse the order of connecting the Sensomatic Controllers and Do NOT connect or disconnect the cables to the controller when power is ON.


- a. RS232 Power Pad Cable connect to Port 1
- b. Antenna Cable connect to Port 2
- c. AC Power Cable connect to Port 3

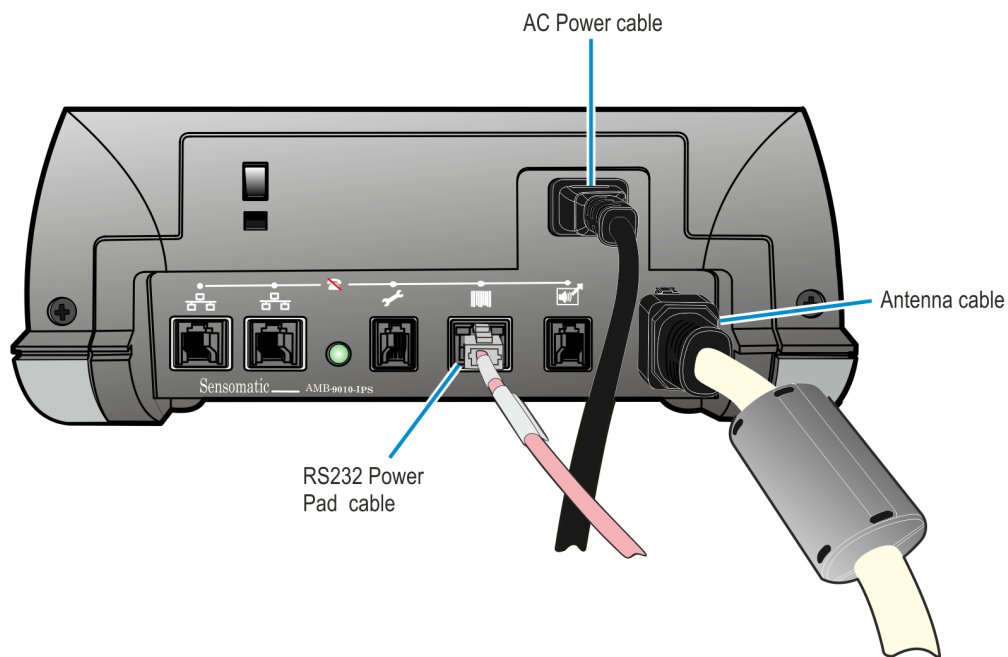

CCP-60873


11. Route the Sensomatic Cables into the cabinet through the rear access hole.

12. Inside the Kiosk, route the Sensormatic AC Power Cable down into the pedestal through the access hole at the bottom panel of the cabinet, between the power supply and coupon bin.

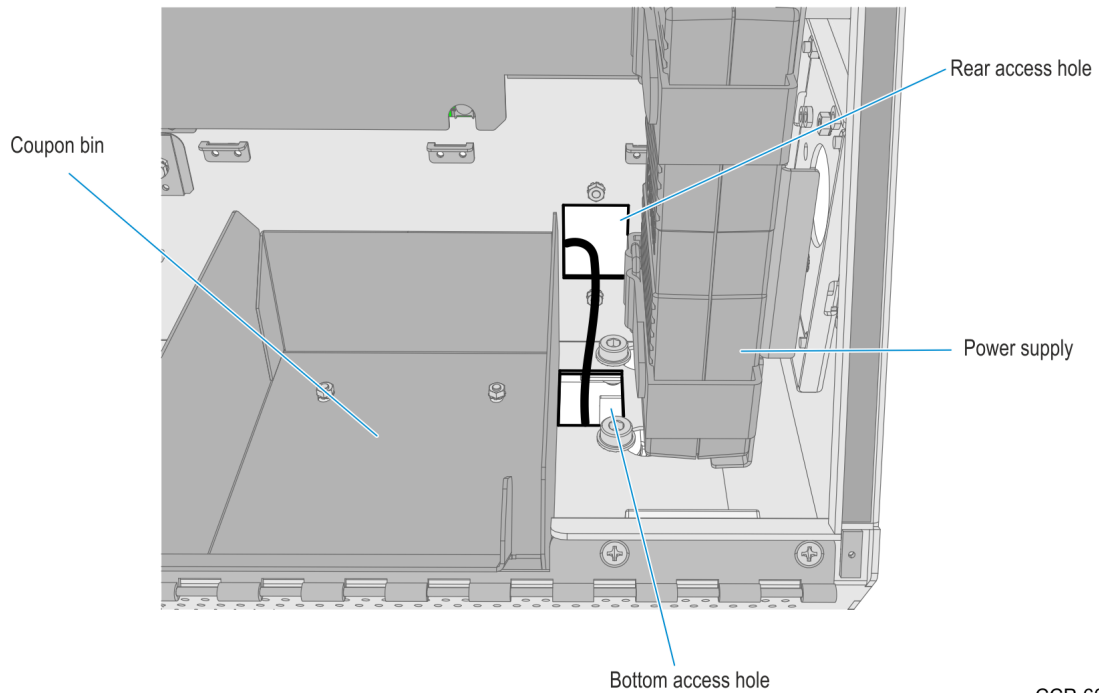

CCP-60857


13. Remove the screw (1) that secures the front access door to the pedestal and remove the door.

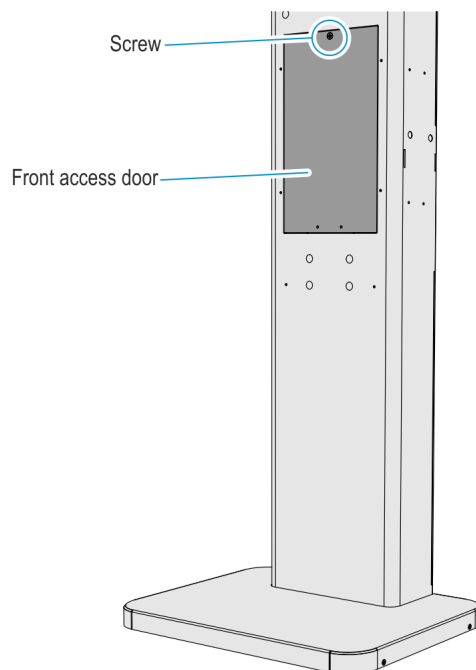

CCP-60855

14. Route the power cable towards the rear access door at the bottom of the pedestal.


15. At the rear side of the pedestal, remove the screw (1) that secures the rear access door to the pedestal and detach the door just enough to feed the power cable through the cable access hole.

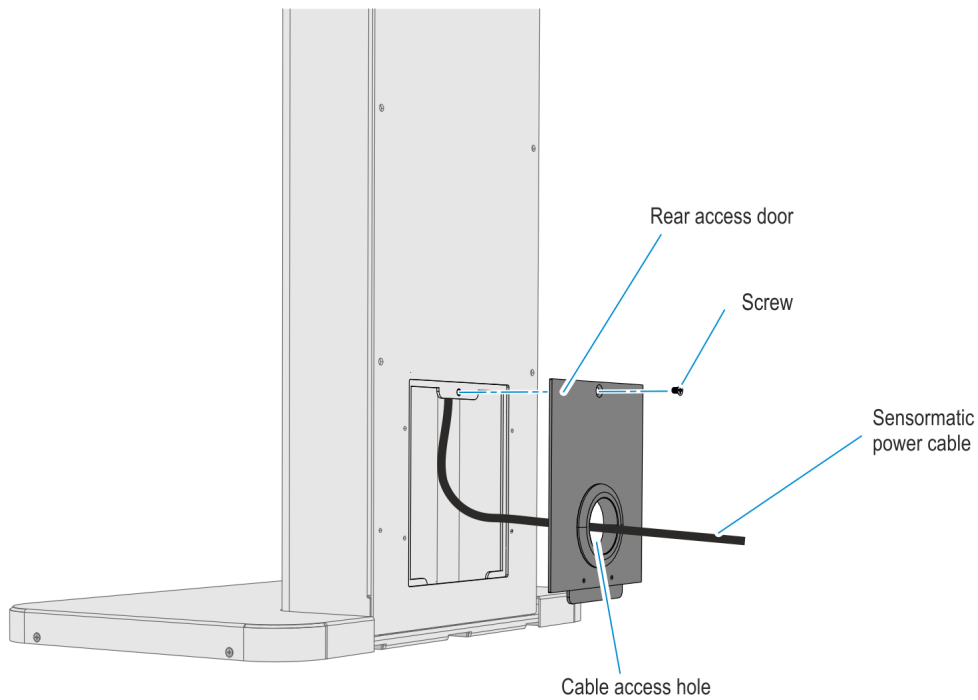

CCP-60856

16. Check the length of the power cable if it is long enough to reach the AC power source but do NOT plug the cable yet.
17. Install the Sensormatic Antenna and Imager Shield casing as required. Refer to the 7709-K738 instruction sheet for the installation procedure.
18. Connect the Sensormatic Antenna Cable and USB to RS232 Cable to the Sensormatic Cables. Refer to the Cable Routing section below for more information.


19. Mount and secure the Sensormatic Cover to the case, safely tucking in the cable bundle.

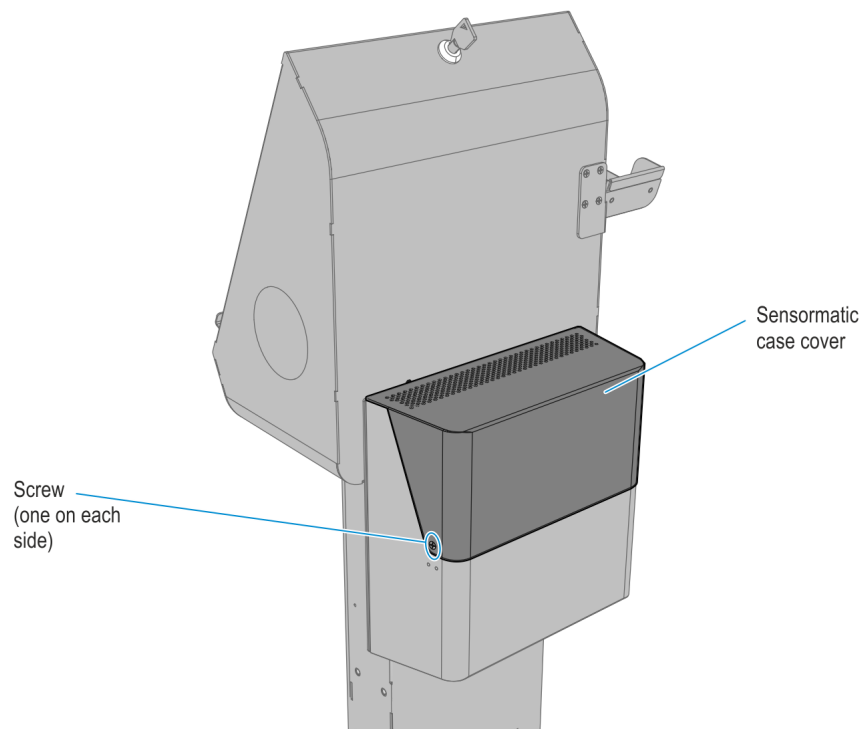

CCP-60575

# Cable Routing


The Sensormatic cables below are routed as described in the 7709-K738 Sensormatic Kit Instructions. After installing the cables, bundle the extra cable lengths with a cable tie and place the bundle at the top of the Sensormatic Controller.

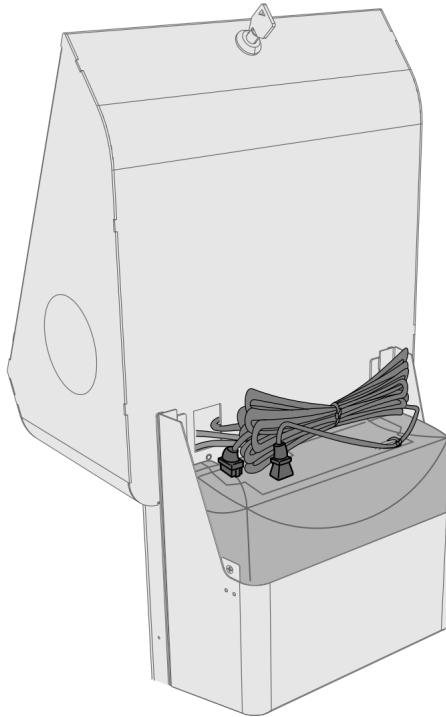

CCP-60858


# Sensormatic Antenna Cable

1. Route the antenna pigtail cable into the cabinet at the space on the left-hand side of the coupon bin and secure it with a cable tie.
2. Route the sensormatic antenna cable towards the antenna pigtail cable and plug the connectors together.
3. Use cable ties to secure the cable with other cable bundles along its route as necessary.

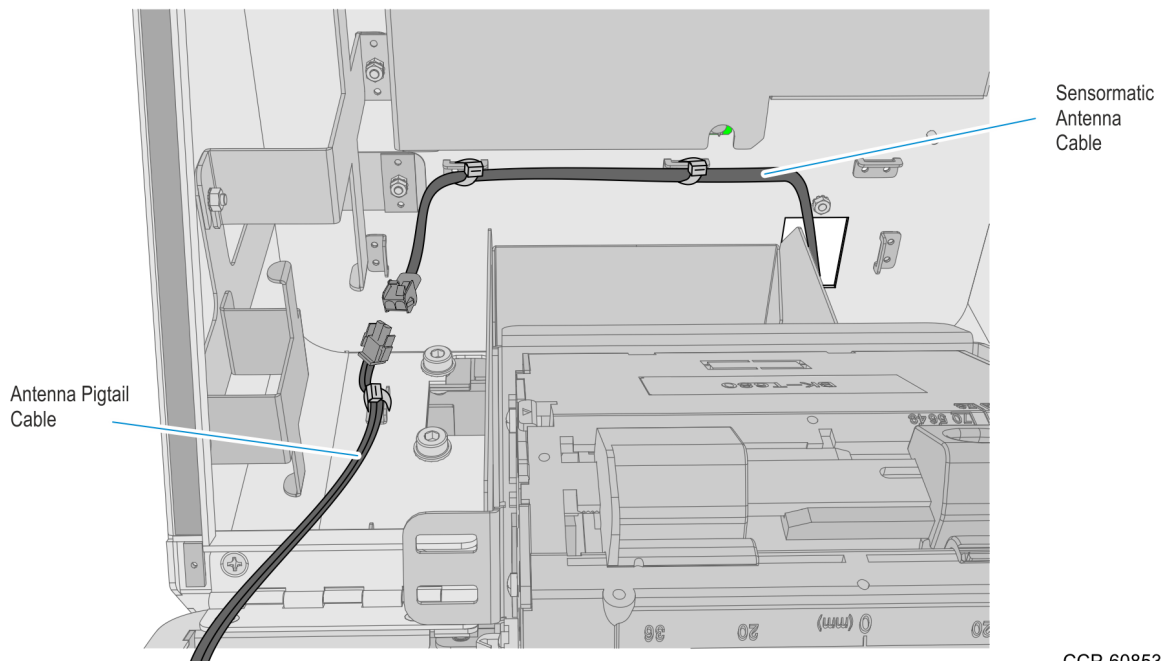

# RS232 Power Pad and USB to RS232

1. Connect the RS232 Power Pad cable to the USB to RS232 cable. Place the connectors at the space between the power supply and coupon bin.
2. Route USB to RS232 cable towards the motherboard and plug the USB connector to the **USB A** port of the motherboard.

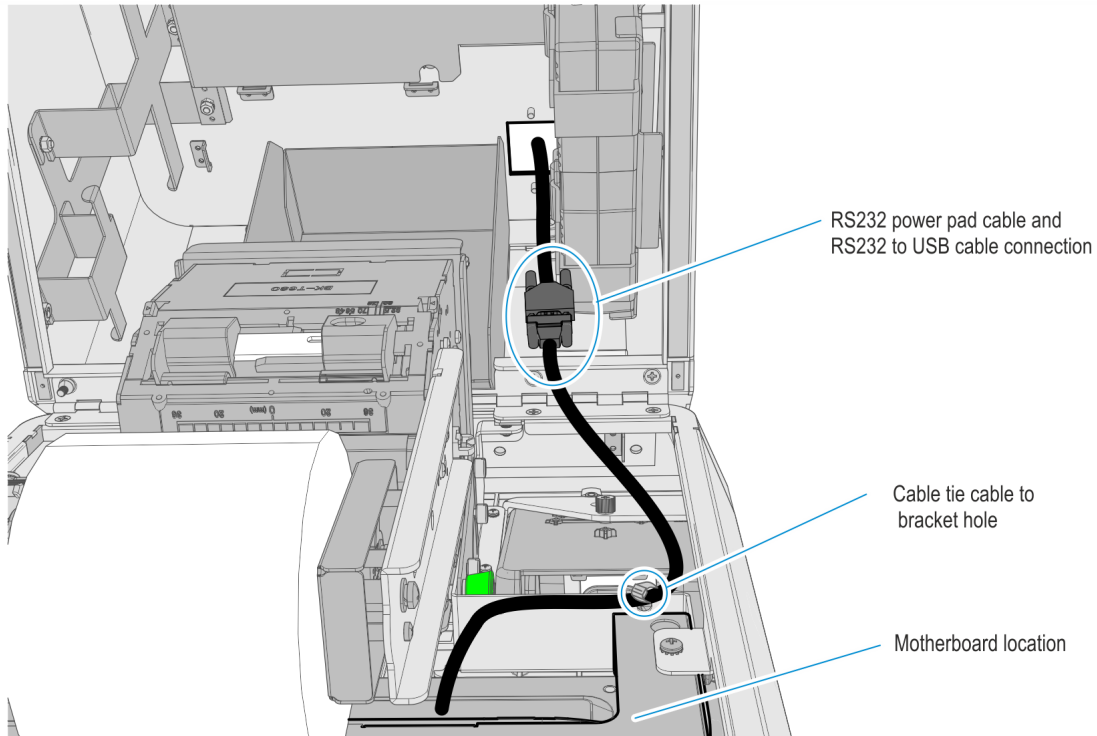

CCP-60854