


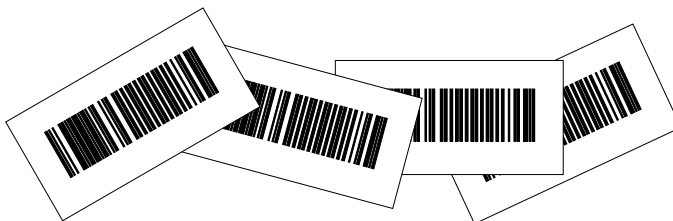

Scanner Programming Tags



BST0-2121-74

Release P

32744

Volume Adjustment



11817

Reset




11818

Default



R0046

Programming Mode

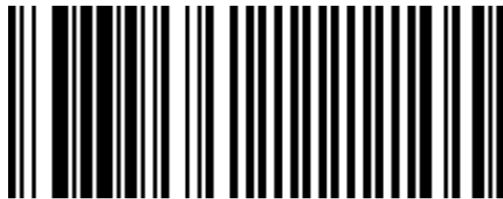

R0042

End



R0043

Save and Reset




R0044

Abort



R0045

Diagnostic Mode

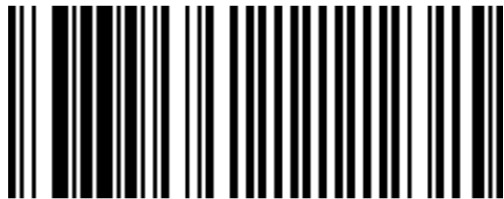

R0041

Mode 1



Slot Scanner (PACESETTER Plus)

11500

Mode 2



Slot Scanner (PACESETTER Plus)

11501

Reset Tallies



Slot Scanner (PACESETTER Plus)

11502

Firmware Flashing



Super ASIC Models

20600

Speak Scanner Serial Number



Available with firmware version 497 - 0433606 or later.

22786


Speak Barcodes Currently Enabled



Available with firmware version 497 - 0433606 or later.

2285

Hex 0

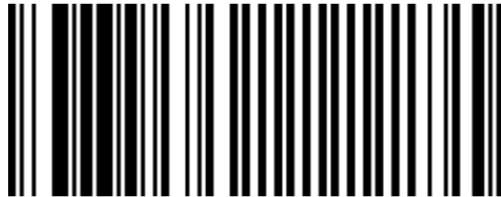


R0048

Hex 1




R0049

Hex 2

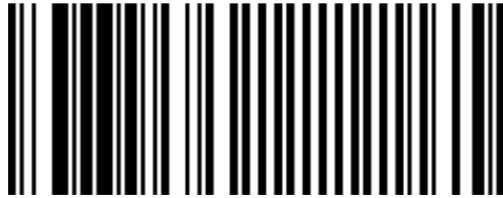


R0050

Hex 3

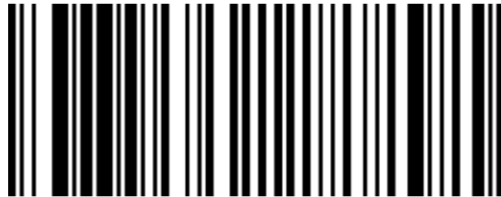


R0051

Hex 4

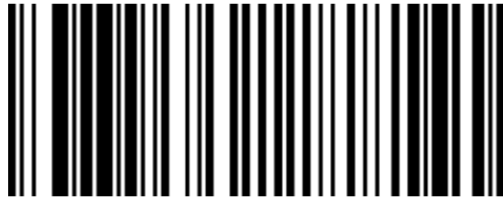


R0052

Hex 5

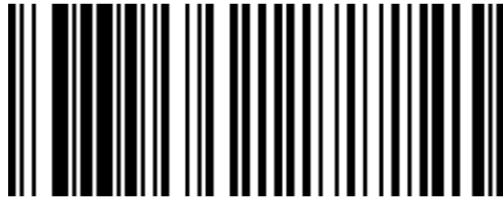


R0053

Hex 6

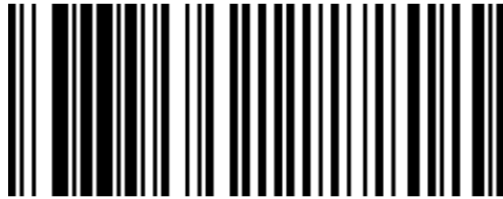


R0054

Hex 7

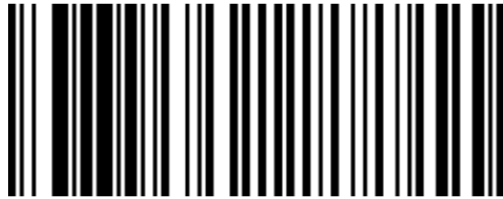

R0055

Hex 8

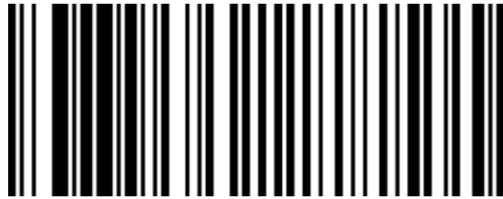


R0056

Hex 9




R0057

Hex A

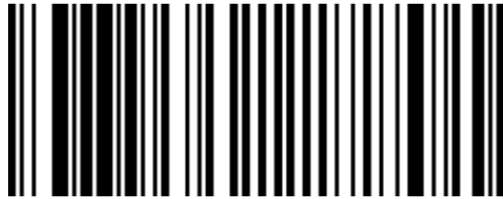


R0058

Hex B

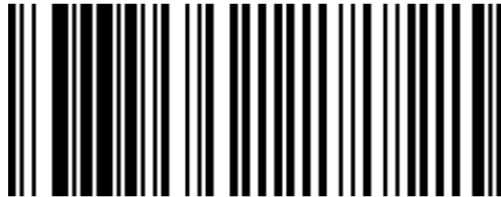

R0059

Hex C

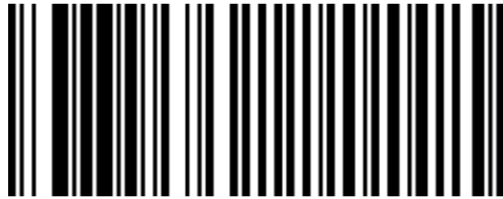


R0060

Hex D




R0061

Hex E

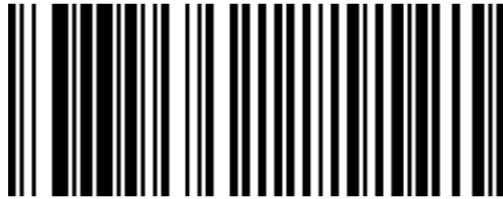

R0062

Hex F

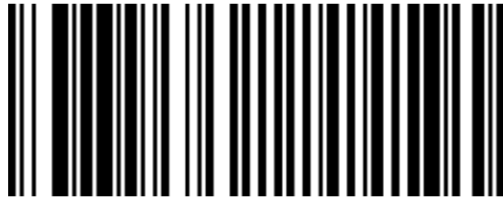

R0063

ASCII Code Chart									
00	NULL	10	DLE	20	SP	30	0	40	@
01	SOH	11	DC1	21	!	31	1	41	A
02	STX	12	DC2	22	"	32	2	42	B
03	ETX	13	DC3	23	#	33	3	43	C
04	EOT	14	DC4	24	\$	34	4	44	D
05	ENQ	15	NAK	25	%	35	5	45	E
06	ACK	16	SYN	26	&	36	6	46	F
07	BEL	17	ETB	27	'	37	7	47	G
08	BS	18	CAN	28	(	38	8	48	H
09	HT	19	EM	29	)	39	9	49	I
0A	LF	1A	SUB	2A	*	3A	:	4A	J
0B	VT	1B	ESC	2B	+	3B	;	4B	K
0C	FF	1C	FS	2C	,	3C	<	4C	L
0D	CR	1D	GS	2D	-	3D	=	4D	M
0E	S0	1E	RS	2E	.	3E	>	4E	N
0F	S1	1F	US	2F	/	3F	?	4F	O
50	P	60		70	p	51	Q	61	a
52	R	62	b	72	r	53	S	63	c
54	T	64	d	74	t	55	U	65	e
56	V	66	f	76	v	57	W	67	g
58	X	68	h	78	x	59	Y	69	i
5A	Z	6A	j	7A	z	5B	[	6B	k
5C	\	6C	l	7C		5D	]	6D	m
5E	^	6E	n	7E	~	5F		6F	o
5F	O	6F	o	7F	DEL				

R0040

BST0-2121-74
Release P
1013

Copyright © 1992 - 2013
NCR Corporation
Duluth, Georgia U.S.A.