#### 7403-K266

# Dual 2.5" Hard Drives

Kit Instructions




## **Revision Record**

Issue	Date	Remarks
A	Nov 2008	First issue
В	Aug 2013	Removed K262

#### Introduction

This kit contains two 2.5" hard drives and mounting brackets for the RealPOS 70xrt/RealPOS 72xrt.

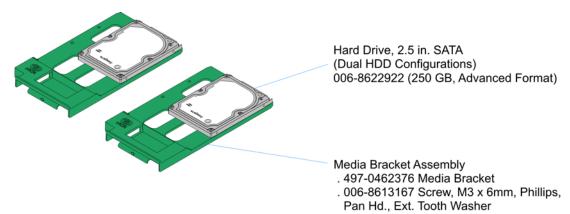

26168f


#### **Installation Procedures**

**Caution:** Static Electricity Discharge may permanently damage your system. Discharge any static electricity build up in your body by touching your computer's case for a few seconds. Avoid any contact with internal parts and handle cards only by their external edges.


1. Disconnect power to the terminal.

**Caution:** Disconnect the AC power cord before disassembling the terminal. The ON/OFF switch does **NOT** remove power to the unit.

- a. Insert the Security Key and turn it 90 degrees clockwise.
- b. Remove the Front Cover.

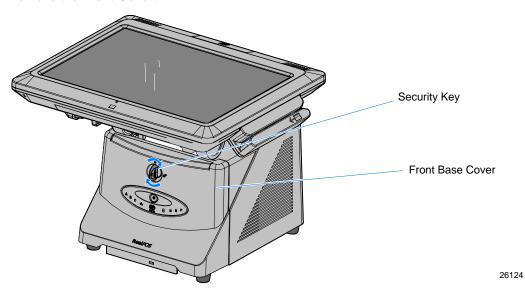


c. Pivot the top of the Front Base Cover toward the front of the unit and remove it from the terminal.

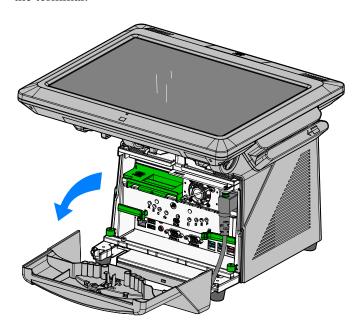


26032

d. Disconnect the Power Cord from the Power Supply.

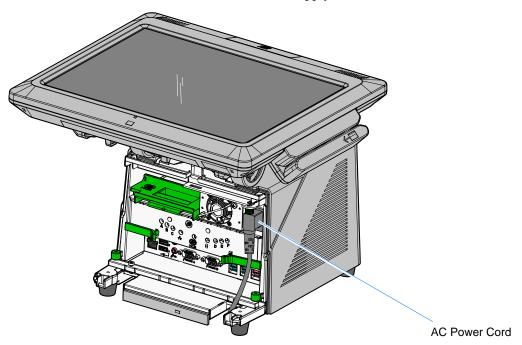


26135

2. The Dual Drive (RAID) system does not use the existing large format HDD. Squeeze the latch on the green Storage Media Bracket and pull the Hard Disk Drive out of the Base Chassis.

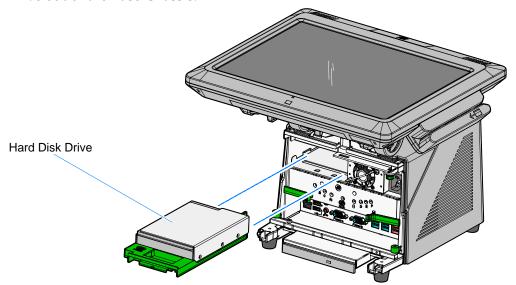


26034

3. Install the Primary HDD in the lower HDD slot.

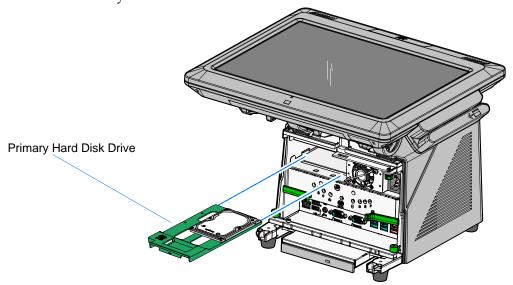


26484

The Primary HDD connector (Drive 0) is the *lower* connector. The secondary is the upper connector.

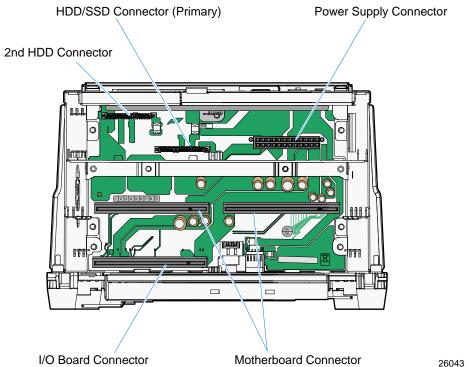

4. Install the Secondary HDD in the upper HDD slot.

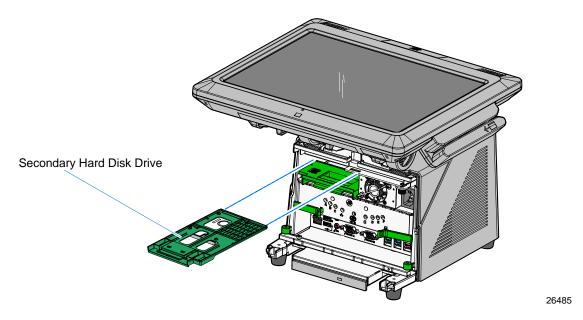

5. Install the Front Base Cover and lock the Security Lock.

### **RAID System**

If the secondary HDD is going to be used as a RAID volume see the RealPOS 70xrt User Guide (B005-0000-1872) for information about installing RAID.