# **Kit Instructions**

2D Scanner, Front Mount





The product described in this document is a licensed product of NCR Corporation.

NCR is a registered trademark of NCR Corporation. NCR POS is a trademark of NCR Corporation in the United States and/or other countries. Other product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Where creation of derivative works, modifications or copies of this NCR copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR, NCR's copyright notice must be included.

It is the policy of NCR Corporation (NCR) to improve products as new technology, components, software, and firmware become available. NCR, therefore, reserves the right to change specifications without prior notice.

All features, functions, and operations described herein may not be marketed by NCR in all parts of the world. In some instances, photographs are of equipment prototypes. Therefore, before using this document, consult with your NCR representative or NCR office for information that is applicable and current.

To maintain the quality of our publications, we need your comments on the accuracy, clarity, organization, and value of this book. Please use the link below to send your comments.

Email: FD230036@ncr.com


Copyright © 2020 By NCR Corporation Global Headquarters 864 Spring St NW Atlanta, GA 30308 U.S.A. All Rights Reserved

#### **Revision Record**

Issue	Date	Remarks
Α	Sep 2020	First Issue


This kit provides a front mount 2D Scanner for the NCR PX10/PX15 POS (7746).

### Kit Contents

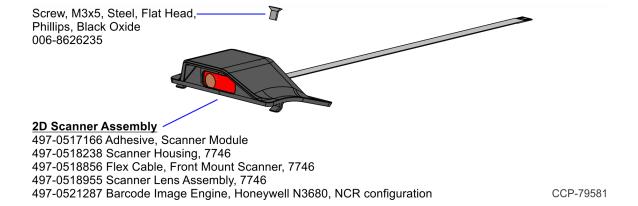

## Installation Procedure

1. Pivot the display toward the back.

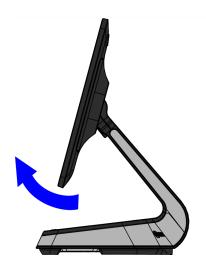

2. Remove the screw (1) that secures the Front Neck Cover to the neck.




**Note:** Use only a screwdriver with a #1 Philips bit to avoid stripping the screw head.



CCP-73936

3. Pivot the Front Neck Cover away from the terminal.

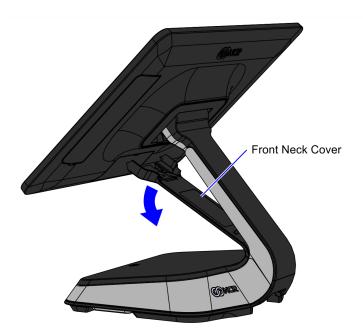


CCP-73937

4. Lay the terminal face down on a flat surface.




**Caution:** Always use a soft material (cloth, foam) to protect the display screen when placing the terminal face down.


5. Remove the screws (2) that secure the Rear Base Cap to the Neck.

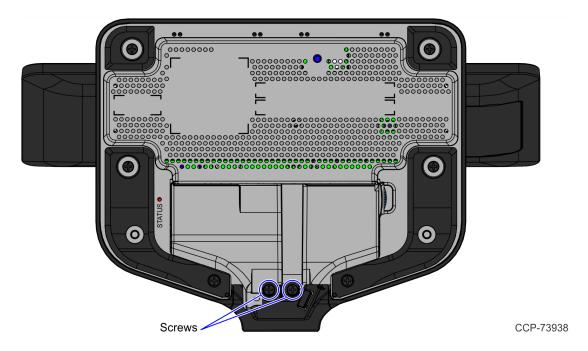

 
6. Remove the Rear Base Cap.



7. Set the terminal to stand upright, and then pivot the display toward the front.

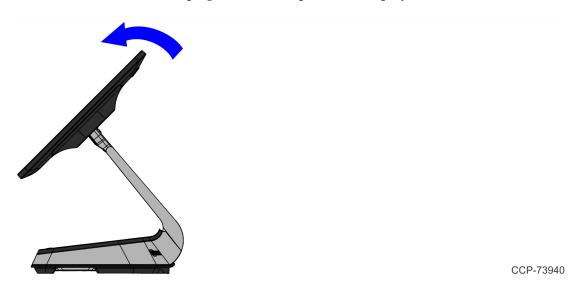


8. Pivot the Back Neck Cover away from the terminal.

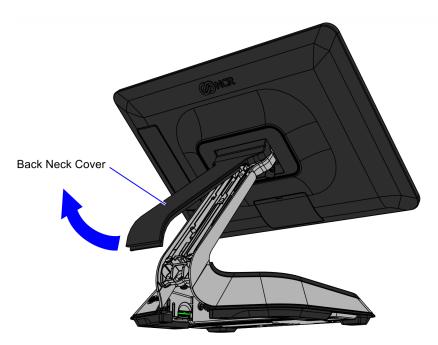


CCP-73941


9. Slightly push the front side of the Stand Top Cover Assembly, and then pivot the cover open.

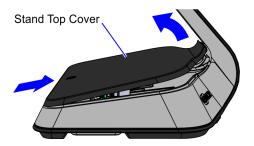


10. For versions with battery, disconnect the battery cable from the Motherboard.

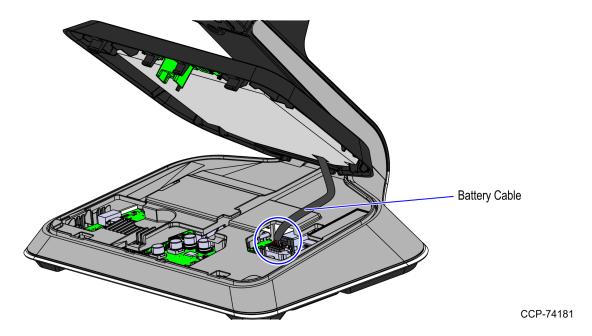


11. Insert a flat screw driver in the slot to unsnap the Scanner Blank from the display housing.

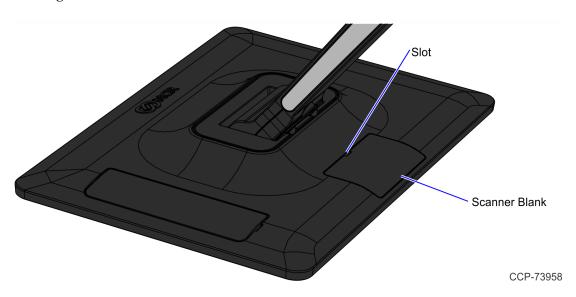


12. Insert the end of the Scanner flex cable through the opening on the display housing until the cable is visible above the neck.

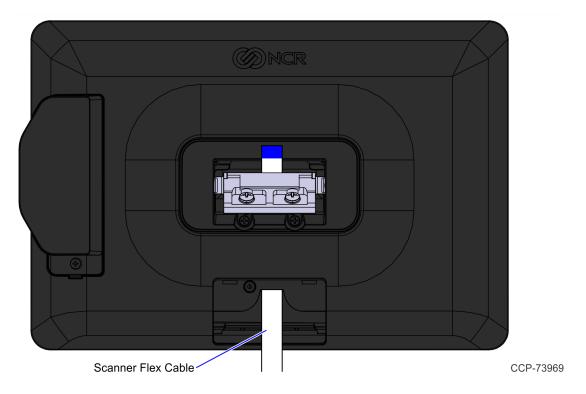

- 13. Using tweezers or a plastic hook, pull the cable out of the neck area.
- 14. Hook the Scanner into the housing and pivot into place.

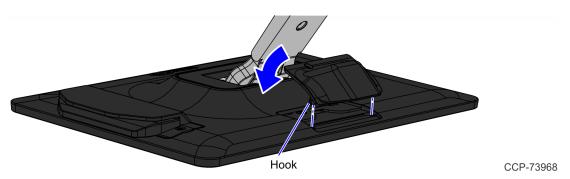


#### 15. Secure the Scanner using a screw.

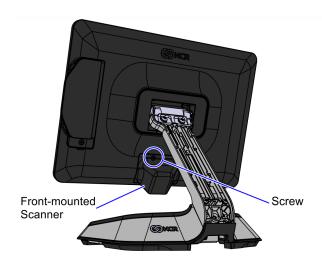


CCP-73949


16. Route and tape the cable down the left channel of the neck stand.

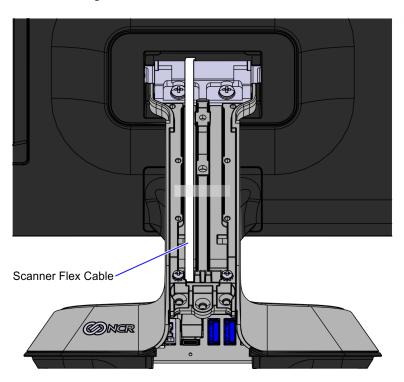

17. Insert the scanner cable through the opening at the bottom of the neck.

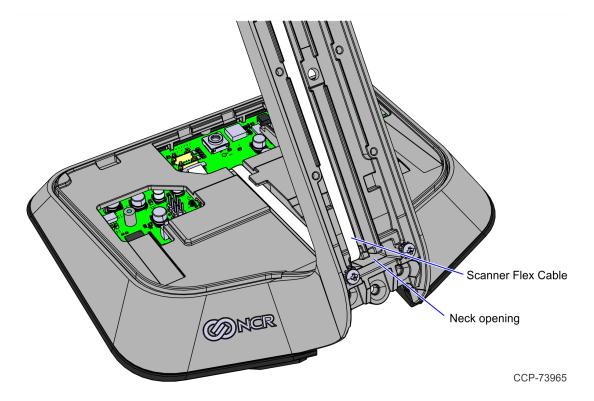

18. Route the scanner flex cable through the routing slot and connect the flex cable to the Motherboard with the blue side facing out.

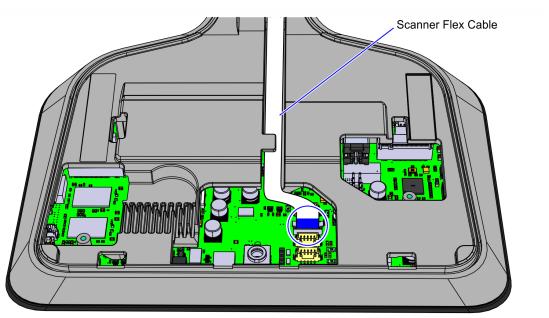

- 19. Reinstall the Stand Top Cover.
- 20. Reinstall the Back Neck Cover.
- 21. Reinstall the Rear Base Cap.

22. Reinstall the Front Neck Cover.