


Kit Instructions

Front Mounting Plate (Verifone P400)

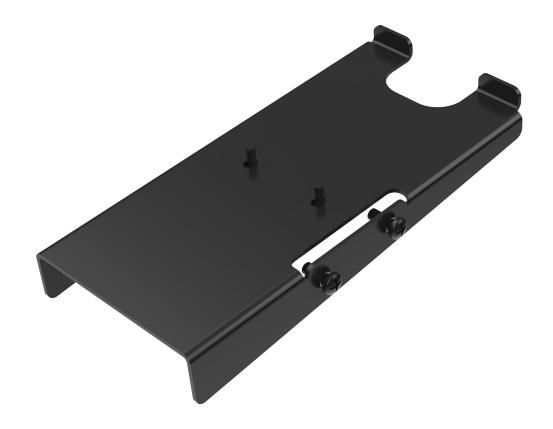

7371-K355

Issue A

The product described in this document is a licensed product of NCR Corporation.

NCR is a registered trademark of NCR Corporation. NCR Self-Checkout Hardware is a trademark of NCR Corporation in the United States and/or other countries. Other product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Where creation of derivative works, modifications or copies of this NCR copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR, NCR's copyright notice must be included.

It is the policy of NCR Corporation (NCR) to improve products as new technology, components, software, and firmware become available. NCR, therefore, reserves the right to change specifications without prior notice.

All features, functions, and operations described herein may not be marketed by NCR in all parts of the world. In some instances, photographs are of equipment prototypes. Therefore, before using this document, consult with your NCR representative or NCR office for information that is applicable and current.

Copyright © 2023

By NCR Voyix Corporation Global Headquarters 864 Spring St. NW Atlanta, GA 30308 United States All Rights Reserved

Revision Record

| Issue | Date | Remarks |
|-------|----------|--------------|
| Α | Oct 2023 | First issue. |
| | | |

7371-K355 Front Mounting Plate (Verifone P400)

This publication provides procedures for installing a Front Mounting Plate for a Verifone P400 PIN Pad device on either of the following NCR Self-Checkout Hardware (7371) configurations:


- Full Function Self-Checkout units
- Full Function Self-Checkout (Hybrid) units



Note

The Verifone P400 device is supplied by the customer.

Kit Contents

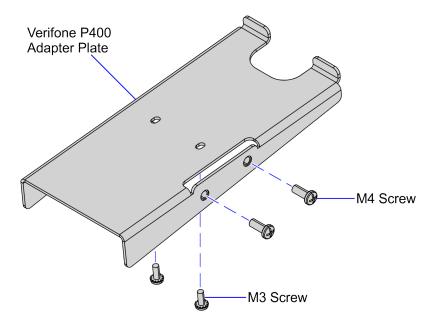

CCP-84235

| Part Number | Description |
|-------------|---|
| 497-0534984 | 7371-K355 Kit - Front Mounting Plate (Verifone P400) |
| 497-0535000 | Verifone P400 Adapter Plate (Front Mount) |
| 006-8608194 | Screw, M4 X 10, Machine, PHIL, PAN,STL, Black (2 pcs) |
| 006-8612048 | Screw ,M3 X 8, SEM, PHIL, PAN, STL, Z (2 pcs) |

Confidential and proprietary information of NCR Voyix Corporation.

| Part Number | Description |
|---------------|------------------------------------|
| * 497-0423108 | Instructions Kit (Reference Sheet) |

^{*} Items marked with an asterisk are not called out on the image.

Installation Procedures


To install the Front Mounting Plate, follow these steps:

- 1. Remove the existing PIN Pad device and Front Mounting Plate, if necessary. For more information, refer to Removing the PIN Pad (Verifone P400).
- 2. Secure the Verifone P400 PIN Pad to the Front Mounting Plate using two (2) M4 pan head screws.



Note


The Verifone P400 PIN Pad is not included in the 7371-K355 Front Mounting Plate (Verifone P400) Kit. For more information, contact an NCR Customer Service Representative.

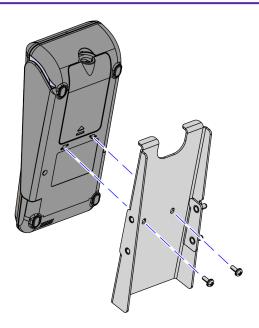


CCP-84240

Confidential and proprietary information of NCR Voyix Corporation.

3. Slide the locator pins of the PIN Pad Mounting Plate Assembly so that the locator pins are engaged with the bottom hooks of the PIN Pad Mount, as shown in the image below.

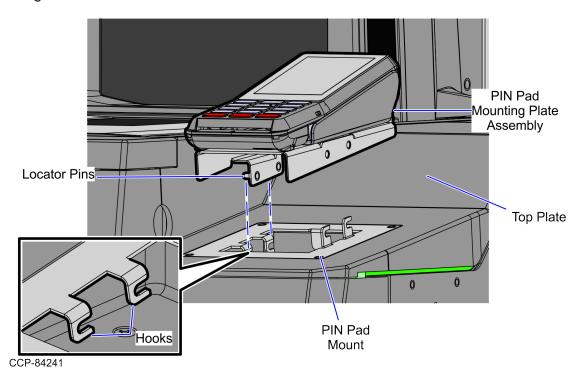

4. Secure the PIN Pad Mounting Plate Assembly to the PIN Pad Mount using two (2) M4 pan head screws, as shown in the image below.

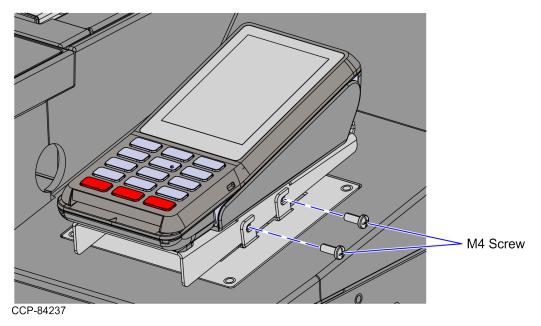


5. Route the PIN Pad device cable. For more information, refer to Routing the PIN Pad cable.

Confidential and proprietary information of NCR Voyix Corporation.


Removing the PIN Pad (Verifone P400)

To remove the PIN Pad, follow these steps:


- 1. Turn off the 7371 Full Function Self-Checkout (Fixed) software and hardware systems.
- 2. Disconnect the PIN Pad device cable.
- 3. Remove two (2) M4 pan head screws to detach the PIN Pad Mounting Plate Assembly from the PIN Pad Mount, as shown in the image below.

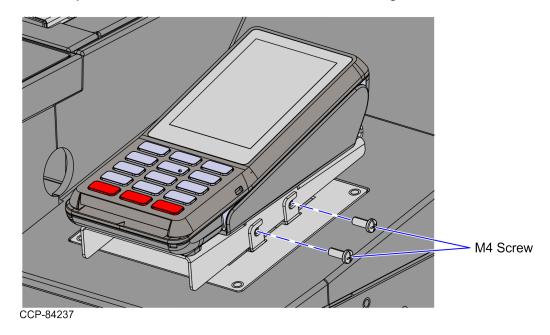

4. Slide the PIN Pad Mounting Plate Assembly to the rear of the unit so that the locator pins are disengaged from the bottom hooks of the PIN Pad mount, as shown in the image below.

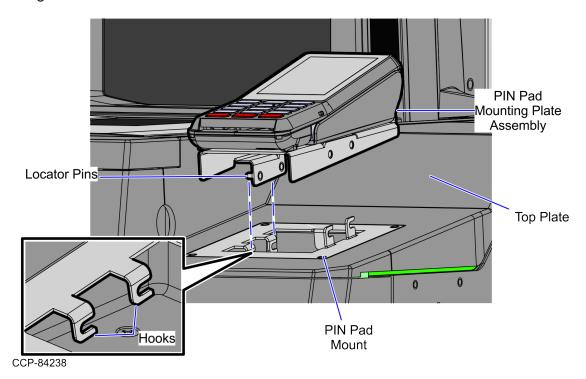

5. Remove two (2) M4 pan head screws to detach the Verifone P400 PIN Pad from the Front Mounting Plate.

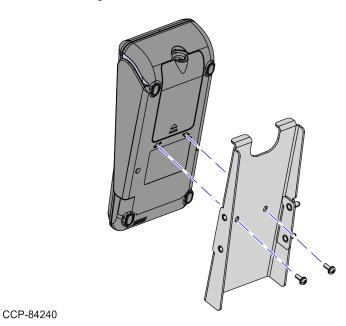


Confidential and proprietary information of NCR Voyix Corporation.

Routing the PIN Pad cable

To route the PIN Pad cable, follow these steps:


- Access the Retail I/O Box. For more information, refer to <u>Accessing the Retail I/O</u> Box.
- 2. Connect the PIN Pad device cable to the **12V powered USB port E** of the Retail I/O Box.
- 3. Secure the PIN Pad device cable on the Retail I/O Box Mounting Bracket using a cable tie, as shown in the image below.

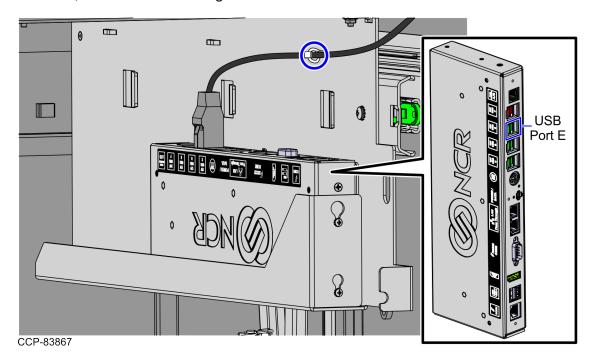


Confidential and proprietary information of NCR Voyix Corporation.

4. Do the following:

- a. Secure the PIN Pad device cable on the lance bridges of the Core (Cabinet).
- b. Route the cable up and through the cable access hole on the Top Plate, as shown in the image below.

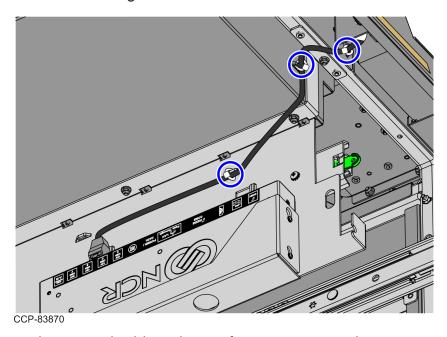

5. Connect the PIN Pad cable to the Verifone P400 PIN Pad.

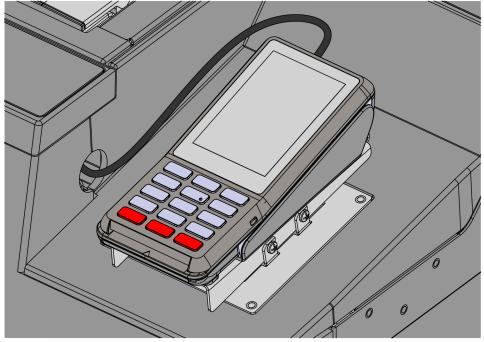


CCP-84242


6. Slide the Coin Recycler back in place.

7. Close and lock the Cosmetic Door using a key.

Fixed Configuration

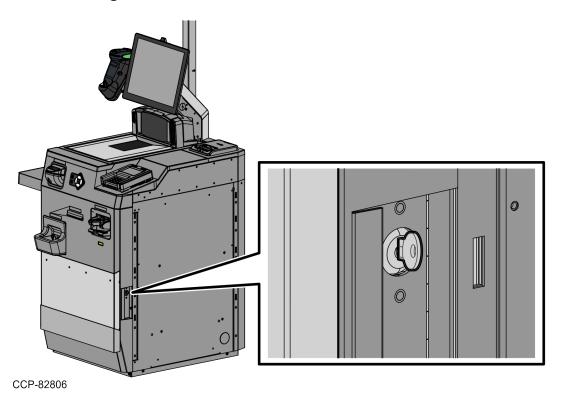

Hybrid Configuration

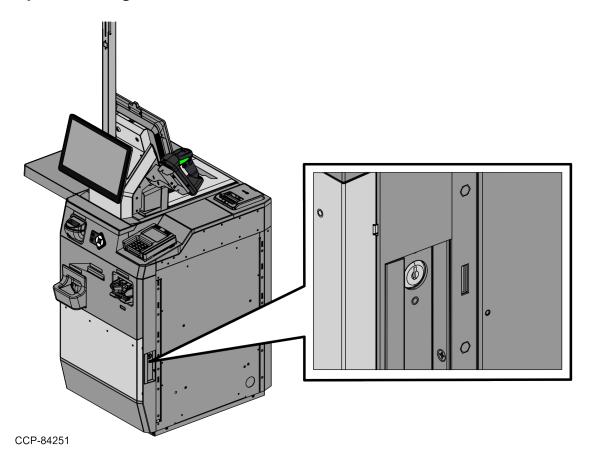


Accessing the Retail I/O Box


To access the Retail I/O Box, follow these steps:

1. Unlock and open the Cosmetic Door using a key.

Fixed Configuration

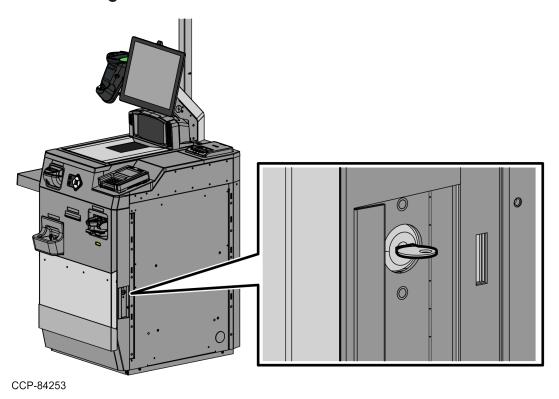

Hybrid Configuration

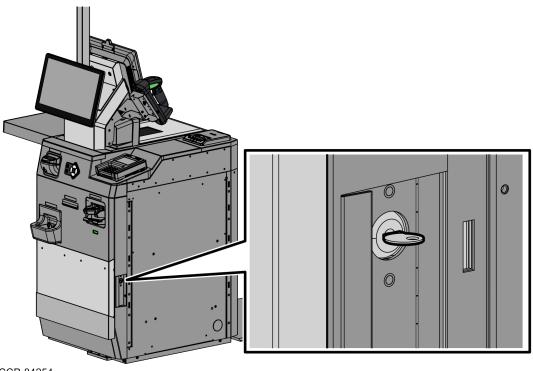


CCP-84254




Note

If the unit is configured with a Security Door, refer to Opening the Security Door.

2. Rack out the Coin Recycler Tray.

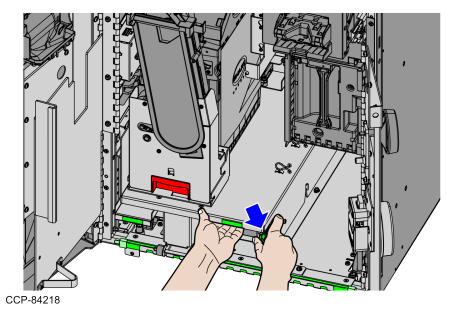

The Retail I/O Box is located on the right side of the Cabinet.

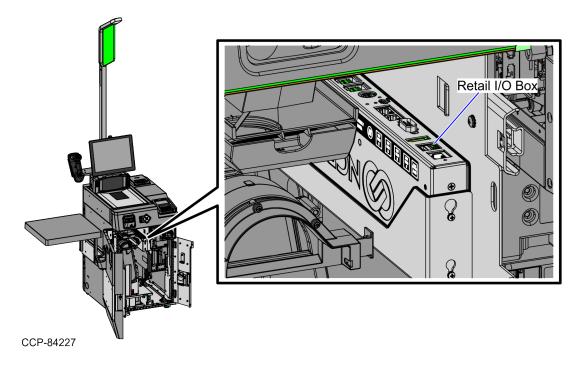

Opening the Security Door

To open the Security Door, follow these steps:



Note

The Security Door is an option for the 7371 Full Function Self-Checkout (Fixed) unit.


- 1. Do the following:
 - a. Insert the key into the keyhole and then turn the key clockwise.



Caution

Do not force the key into the lock to avoid causing permanent damage to the Lock or Key. Do not apply inward or outward axial force to the Key once it is inserted to avoid causing the Lock from opening incorrectly.

b. Turn the knob counterclockwise.

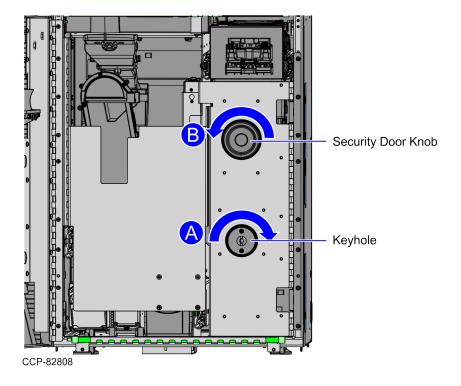

Confidential and proprietary information of NCR Voyix Corporation.

2. Open the Security Door, as show in the image below.



Note

Open both sides of the Security Door to access the devices inside the Core Cabinet.

