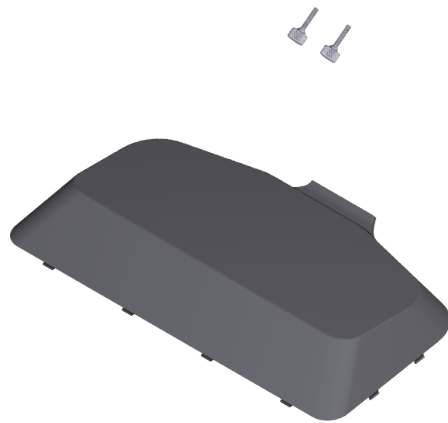# NCR V◌YIX

Integrated Power Supply Base Conversion Kit

Kit Instructions

7772-K032

Issue C

Copyright

The product described in this document is a licensed product of NCR Voyix Corporation.

NCR CX7 All-in-One POS (7772) is a trademark of NCR Voyix Corporation in the United States and/or other countries. Other product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Where creation of derivative works, modifications or copies of this NCR Voyix copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR Voyix, NCR Voyix's copyright notice must be included.

It is the policy of NCR Voyix Corporation to improve products as new technology, components, software, and firmware become available. NCR Voyix, therefore, reserves the right to change specifications without prior notice.

All features, functions, and operations described herein may not be marketed by NCR Voyix in all parts of the world. In some instances, photographs are of equipment prototypes. Therefore, before using this document, consult with your NCR Voyix representative or NCR Voyix office for information that is applicable and current.

Table of Contents

Revision Record

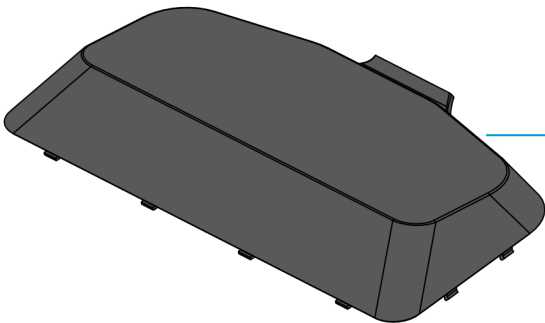| Issue	Date	Remarks
A	Jul 2019	First Issue
B	Jun 2020	Added CX5 (7773) to introduction
C	Dec 2021	Added Warning statement

Integrated Power Supply Base Conversion Kit

This kit provides a Base Cover and thumbscrews for the Front Neck Cover when an integrated power supply is installed on the NCR CX7 All-in-One POS (7772) or NCR CX5 All-in-One POS (7773).

Kit Contents

Thumbscrew, M3x16, Knurled Head
497-0525691

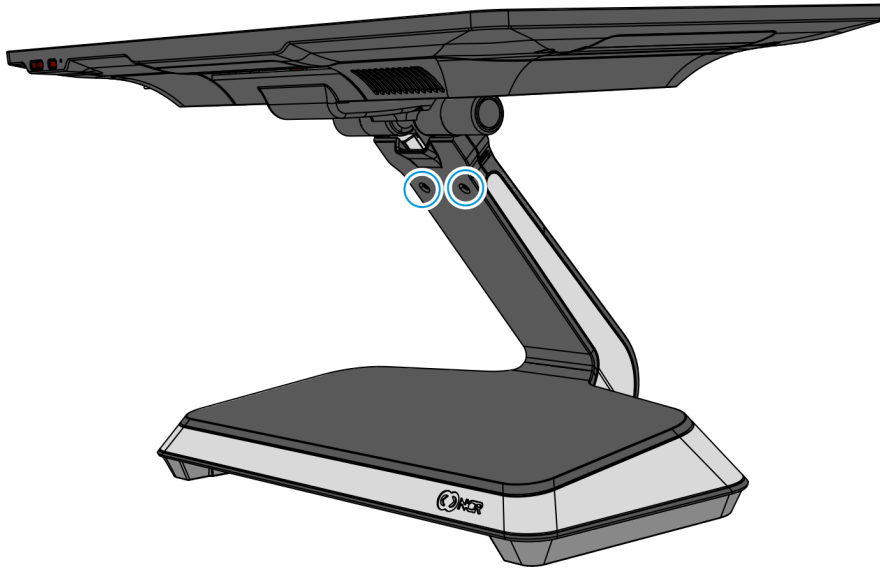Base Cover, Integrated Power Supply
497-0523771

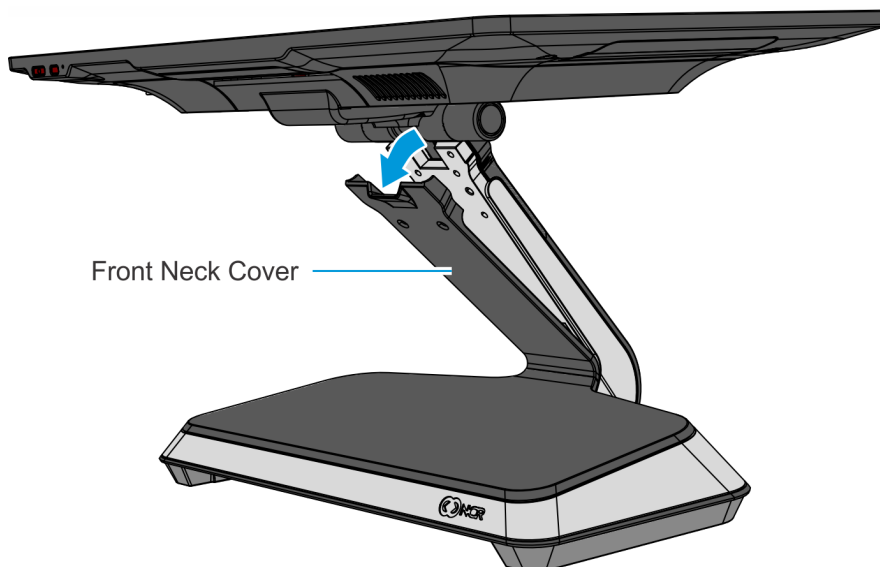CCP-76977

Installation Procedure

> ⚠️ **Warning**
>
> Disconnect the AC power cord from the AC outlet and wait 30 seconds before servicing the terminal.

1. Remove the two (2) flat head screws that secure the Front Neck Cover to the Neck.
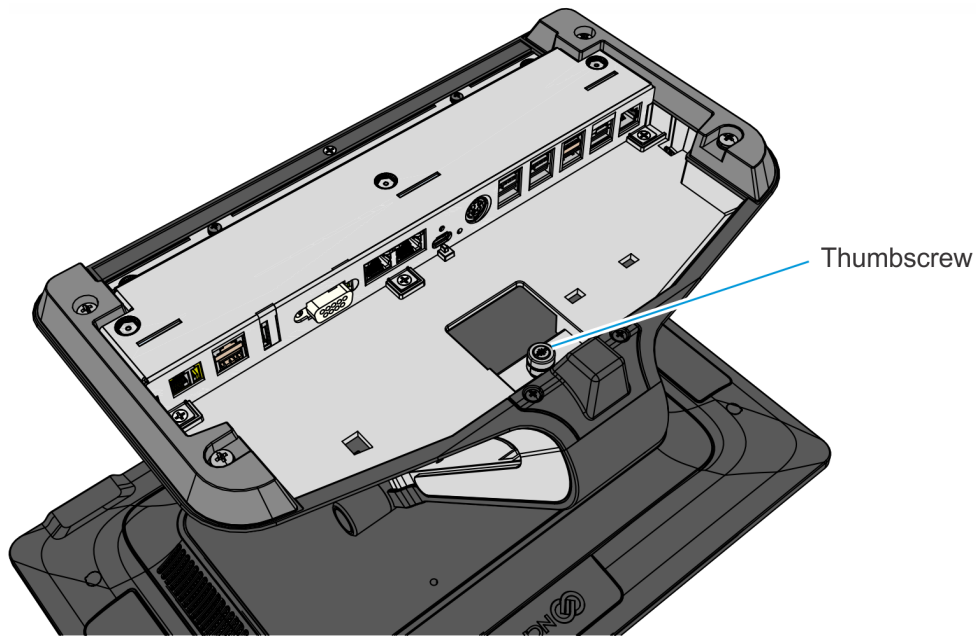

CCP-76947

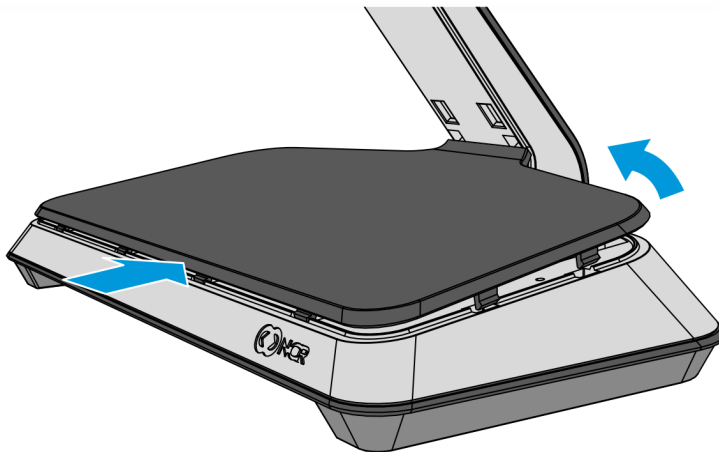2. Pivot the Front Neck Cover away from the Neck.

Front Neck Cover

CCP-76948

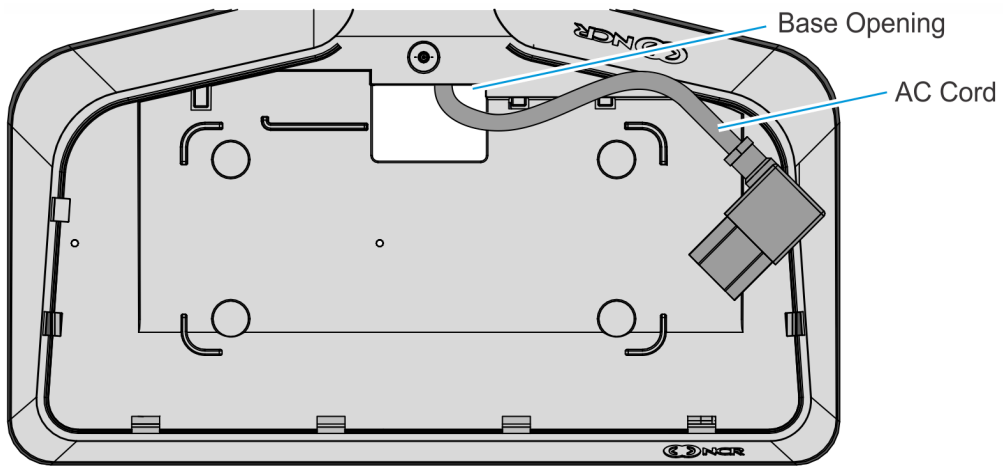3. Loosen the thumbscrew on the bottom of the Base.

Thumbscrew

CCP-76950

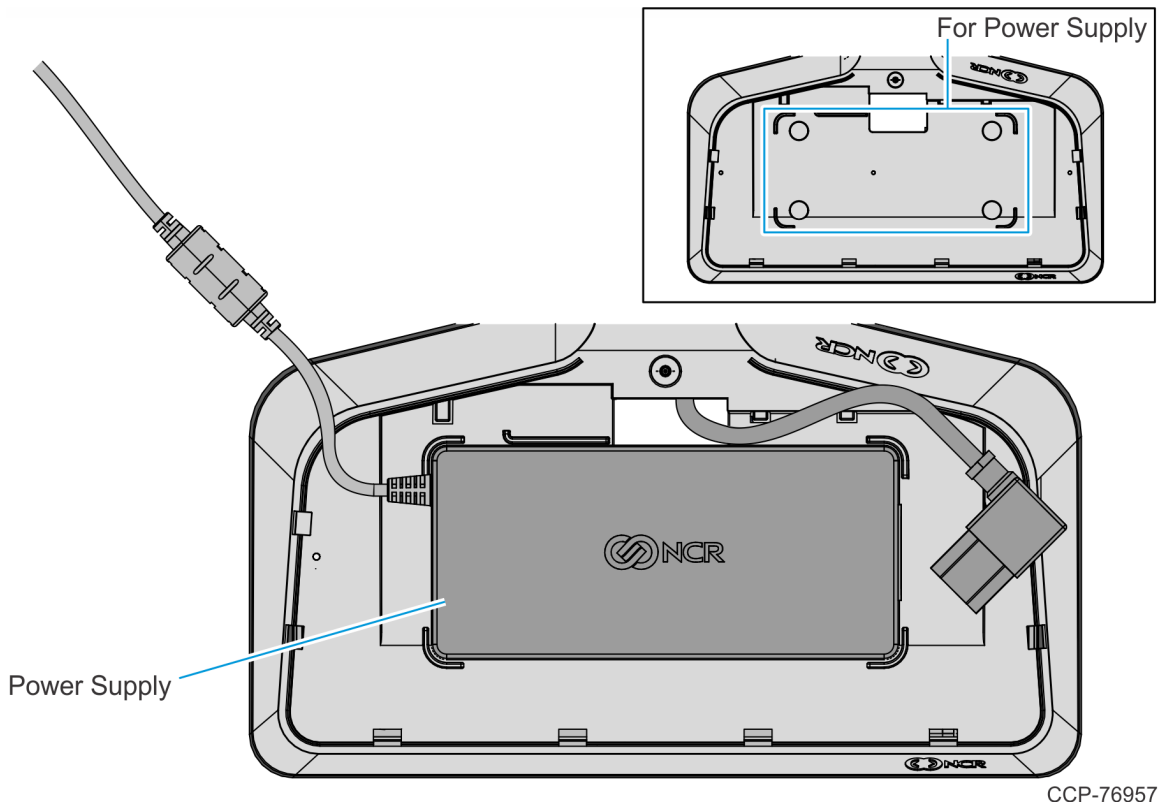4. Slightly push the front side of the Base Cover, then pivot the cover open.

CCP-77006

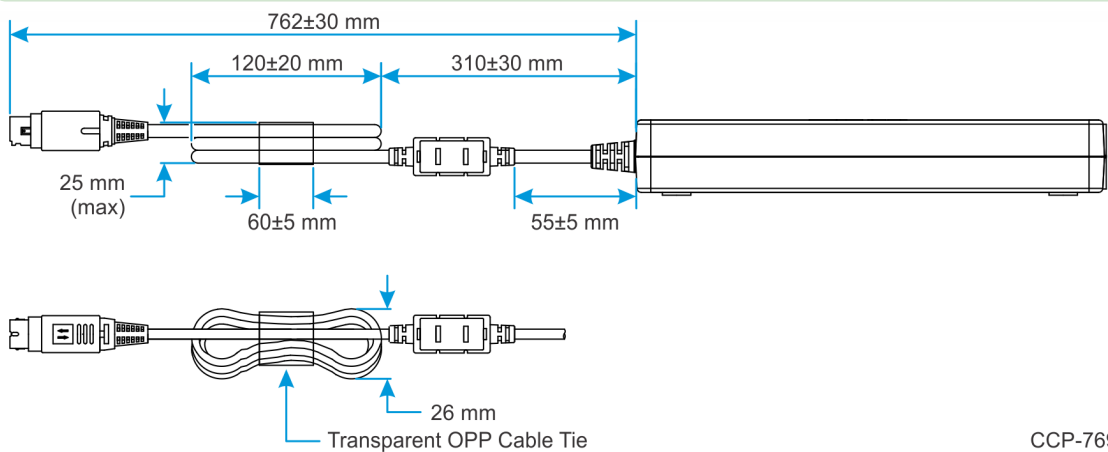5. Route the AC Cord up through the opening in the Base.

Base Opening

AC Cord

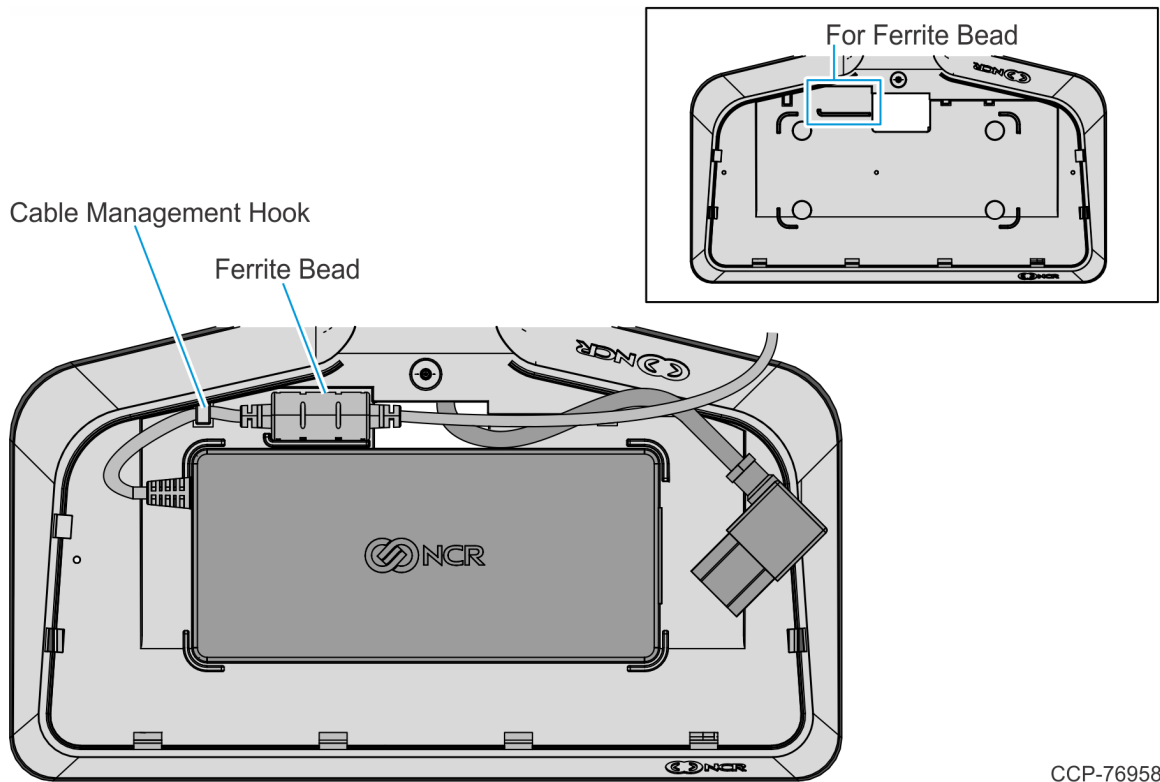CCP-76956

6. Position the Power Supply in the recess on the Base.

For Power Supply

Power Supply

CCP-76957

> 📝 **Note**
>
> The Power Supply Cable comes bundled as shown. Do not modify the bundled cable.

762±30 mm

120±20 mm   310±30 mm

25 mm (max)

60±5 mm   55±5 mm

26 mm
Transparent OPP Cable Tie

CCP-76996

7. Set the Ferrite Bead in the small recess on the Base and secure the Cable under the Cable Management Hook.

For Ferrite Bead

Cable Management Hook

Ferrite Bead
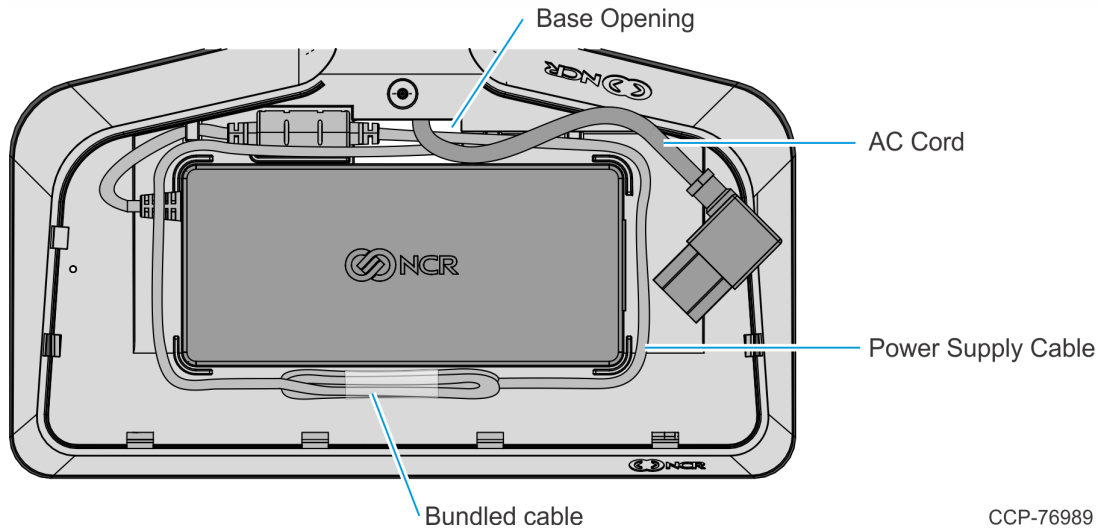
CCP-76958

8. Route the Power Supply Cable.

   a. Route the Power Supply Cable around the Power Supply with the bundled cable in front as shown.

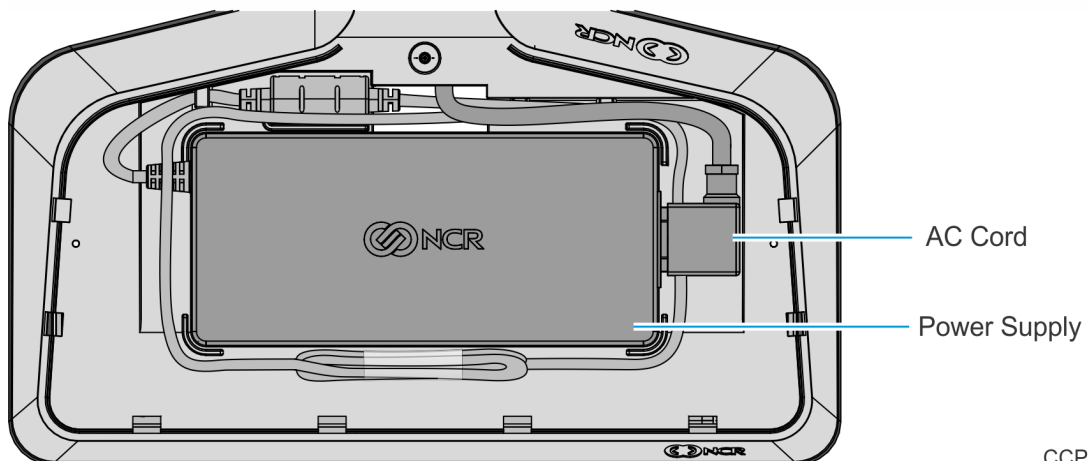   The Power Supply Cable should be under the AC Cord.

Base Opening

AC Cord

Power Supply Cable

Bundled cable

CCP-76989

   b. Insert the DC Connector of the Power Supply Cable down through the Base opening.
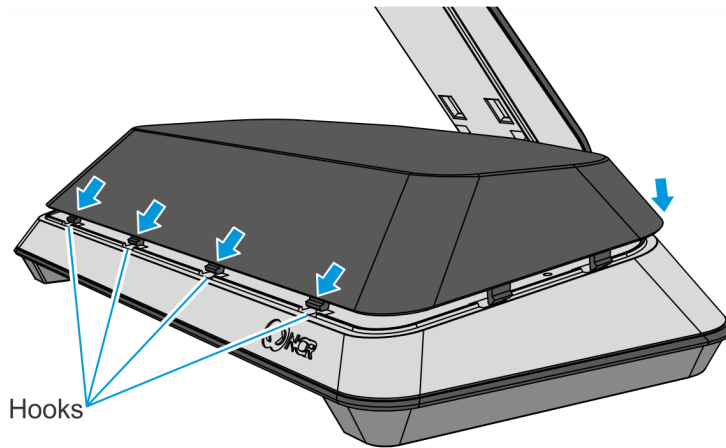
   c. On the underside of the Base, pull the DC Connector such that the excess cable is under the Base.

9. Connect the AC Cord to the Power Supply.
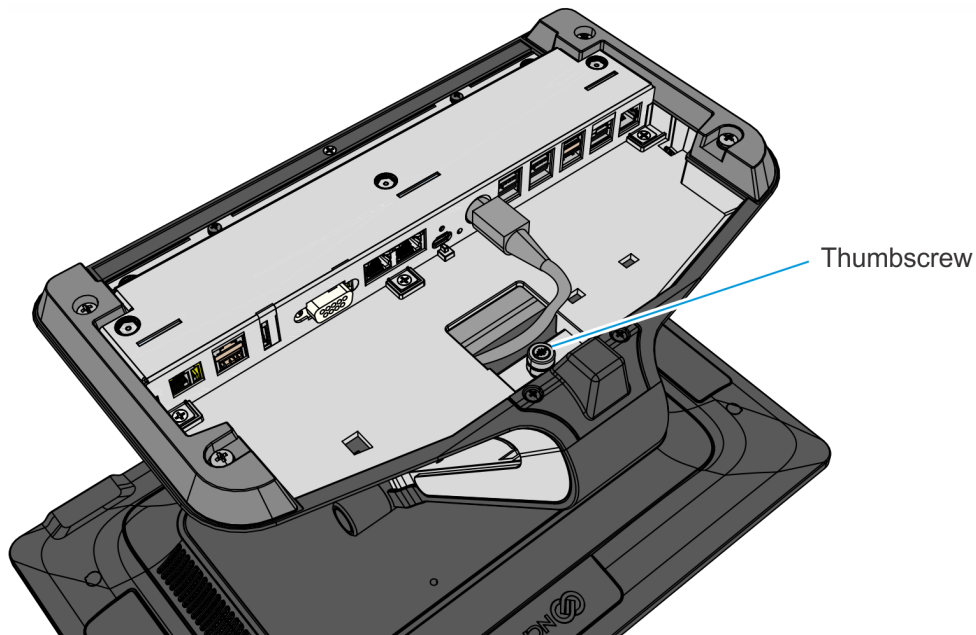

AC Cord

Power Supply

CCP-76990

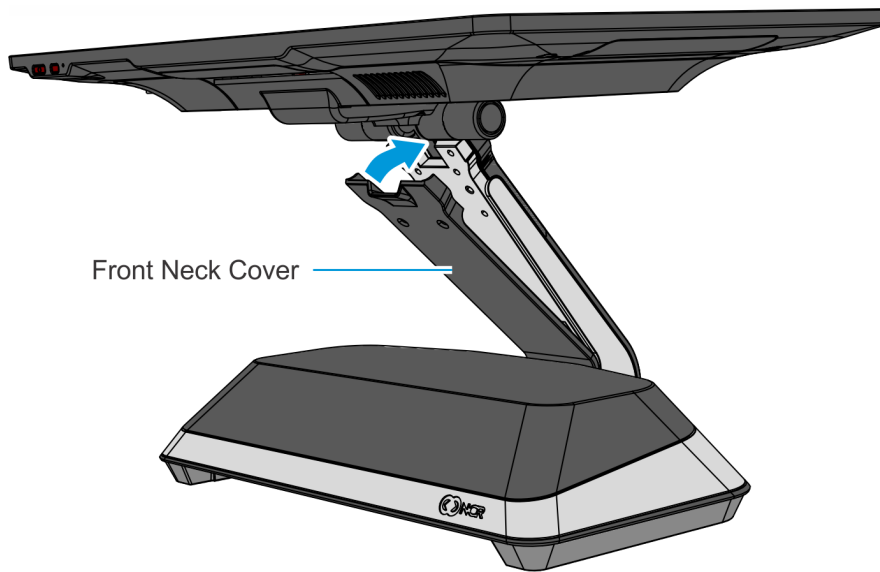10. Hook the Base Cover into the Stand, then snap into place.

Hooks

CCP-76978

11. Insert the DC Connector into the Power In connector on the I/O.

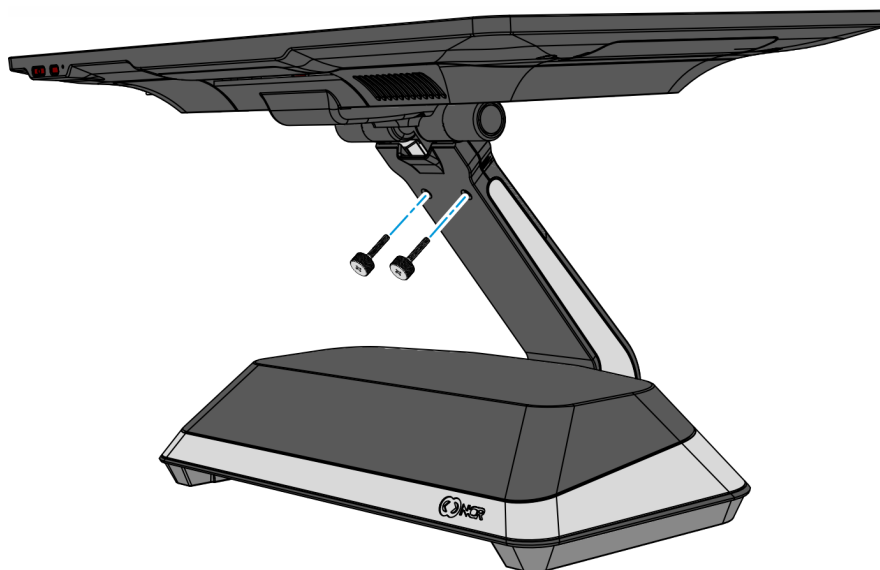12. Tighten the thumbscrew on the bottom of the Base to secure the Base Cover.

Thumbscrew

CCP-76991

13. Attach the Front Neck Cover to the Neck.

Front Neck Cover

CCP-76979

14. Secure the Front Neck Cover with the two (2) thumbscrews included in the kit.

CCP-76980