KIT INSTRUCTIONS

P1535 POS (7761) Stand

Release 1.0

7761–K170

Issue A

NCR

Revision Record

Issue	Date	Remarks
A	Jan 2016	First Issue

P1535 POS Stand

Introduction

This kit provides a P1535 POS (7761) Table Top Stand.

Kit Content

Kit, Stand, 7761
497–0511368

60382
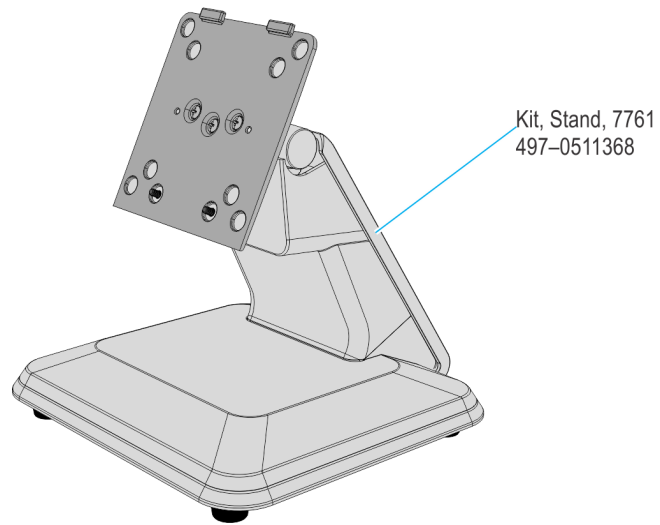
Installation Procedure

1. Lay the terminal face down on a flat surface.

    ⚠️ **Caution:** Always use a soft material (cloth, foam) to protect the display screen when placing the terminal face down.

Protective Foam/Cloth

60383
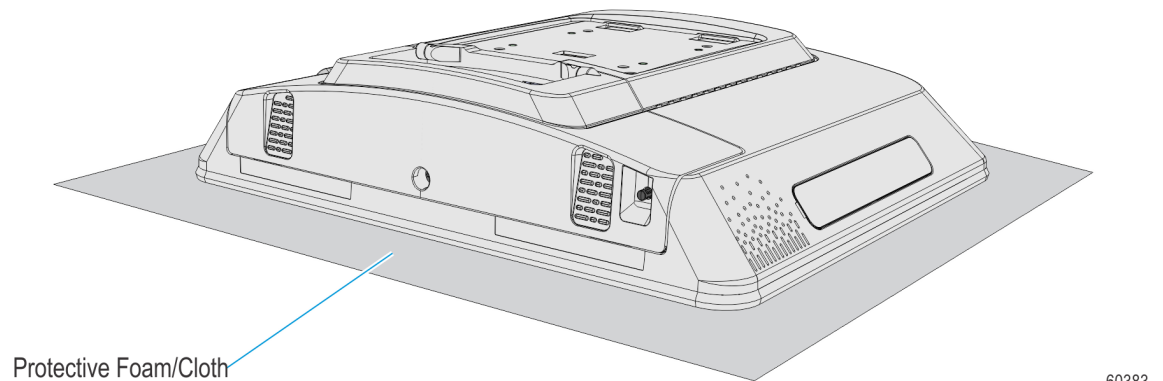
2. Insert the Mounting Plate Tabs (2) into the openings in the Rear Cover at a slight angle as shown.

Mounting Plate Studs

60384
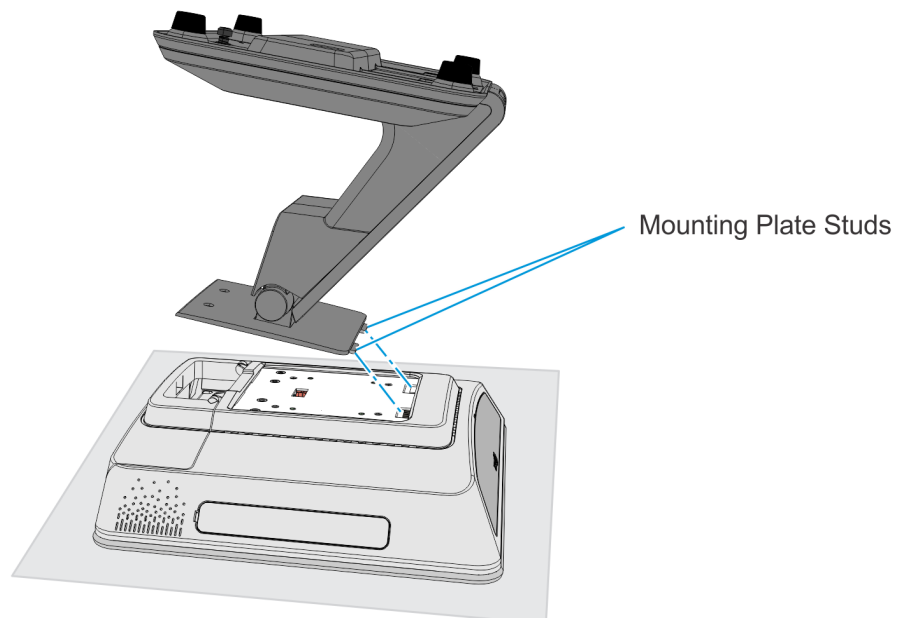
3. Rotate the stand flush into the Rear Cover and secure it with the mounting screws (2).

Screws

60385

Installing the Power Supply

The P1535 terminal receives power from an external 19 V or 24 V power supply.
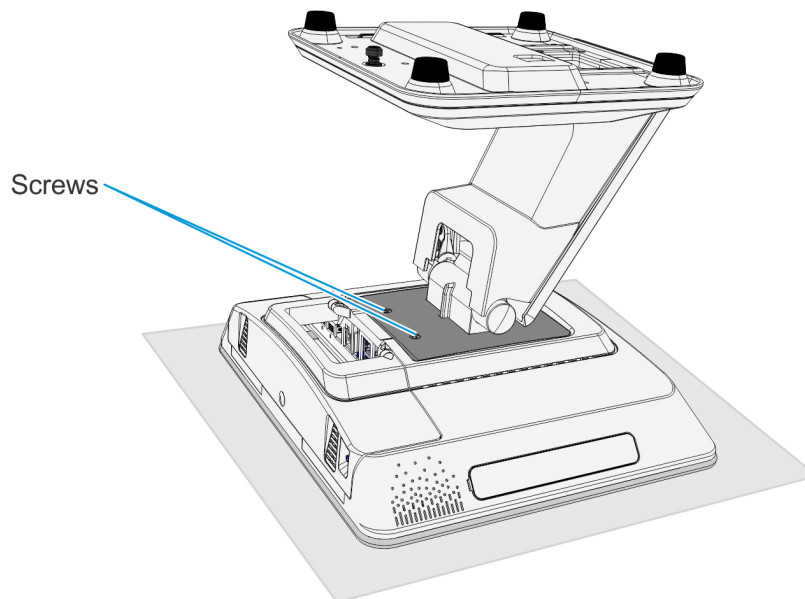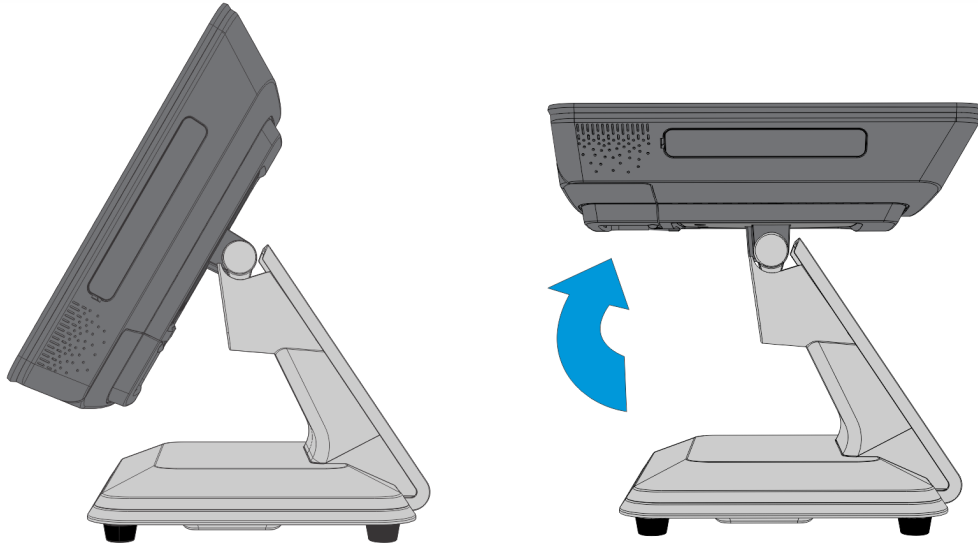
⚠ **Caution:** The P1535 terminal requires the NCR 19 V or 24 V power supply that is shipped with the terminal. Use of other power supply may cause damage to the unit. Do not connect or disconnect the 19 V or 24 V Power Cable from the terminal with the AC Power Cord still connected to an AC outlet.

1. Pivot the display toward the back.

61031

2. Remove the Upper Stand Cover by pivoting it away from the stand. The cover has a simple snap fit connection at the top.

61032
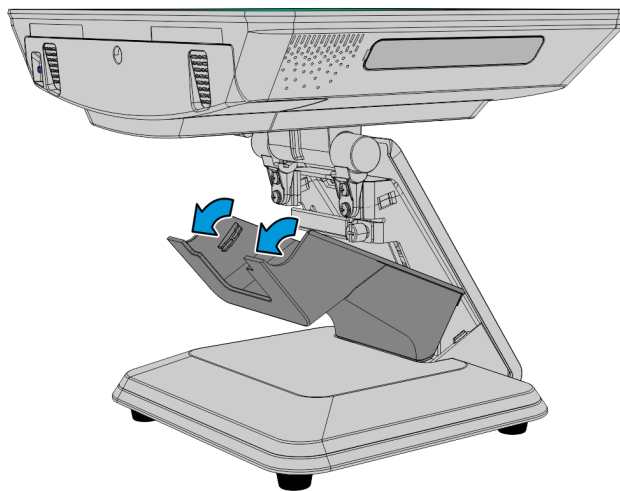
3. Loosen the Thumbscrew that secures the Base Cover.
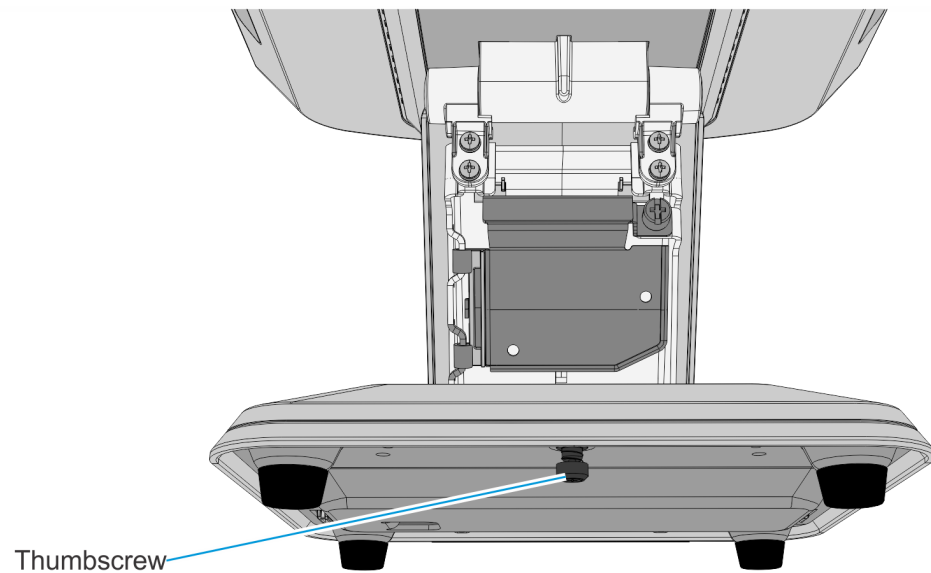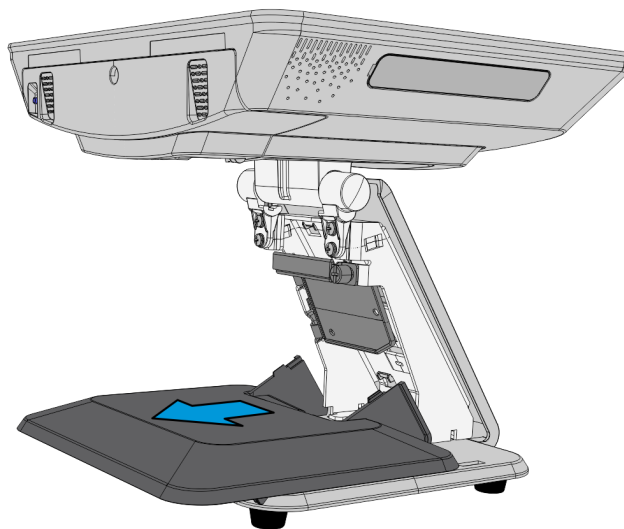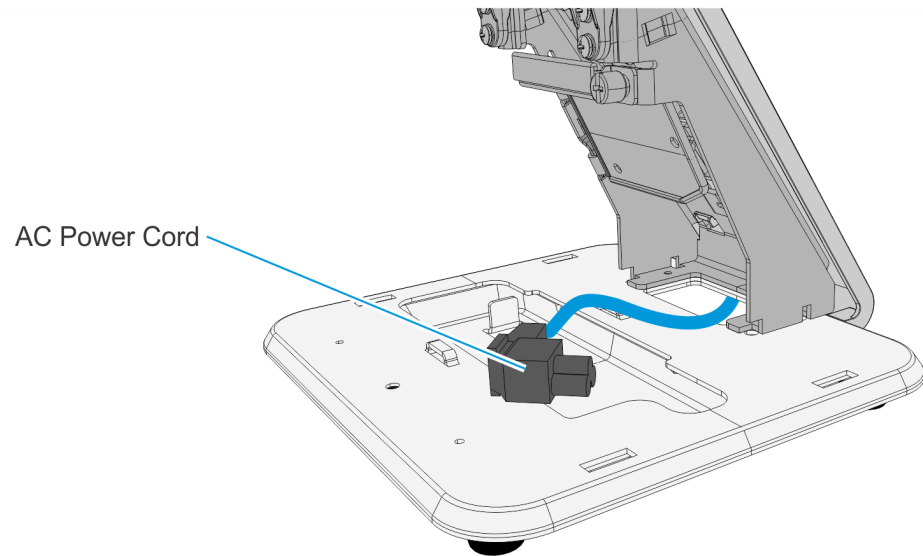

Thumbscrew

61037

4. Slide the Base Cover toward the front slightly to disengage it from the Base.

61038

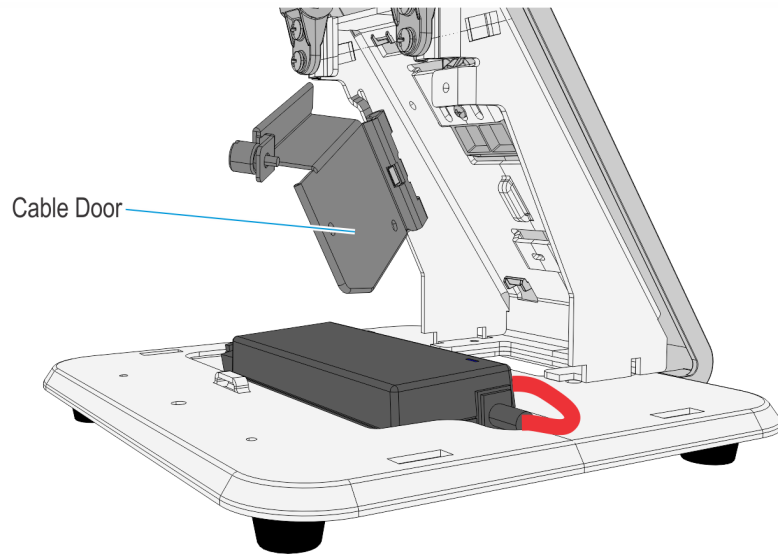5. Route the AC Power Cord up through the base of the stand.

AC Power Cord

61039

6. Attach the Power Cord to the Power Brick.

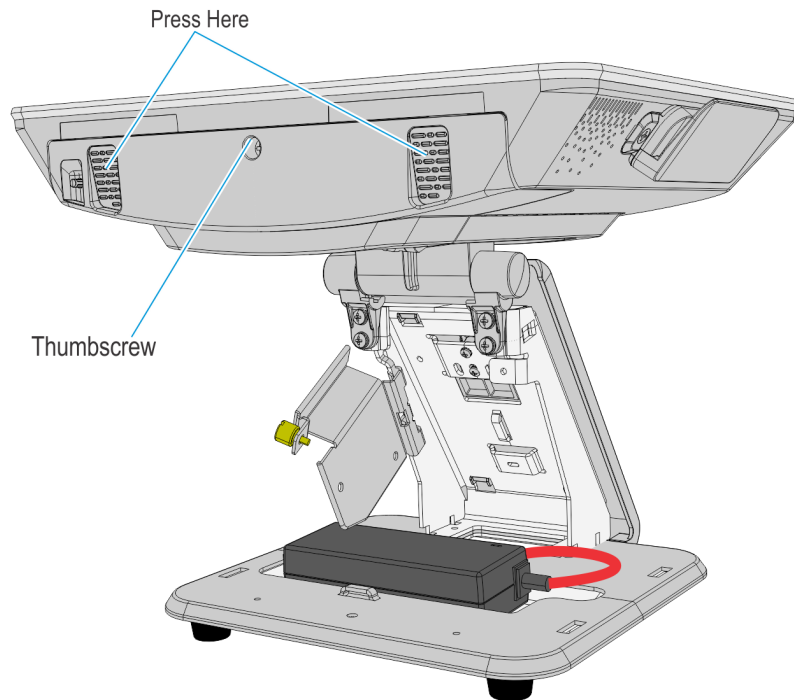7. Install the Power Brick in the Base.
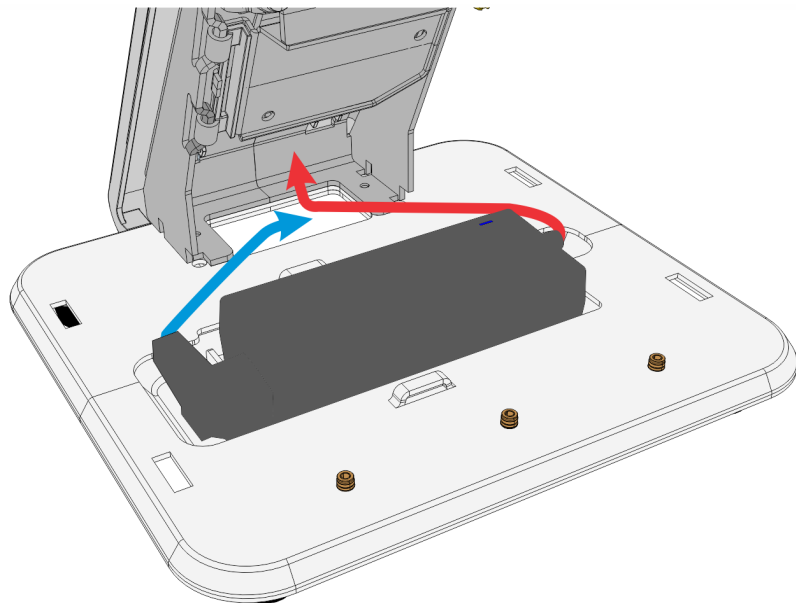
61041

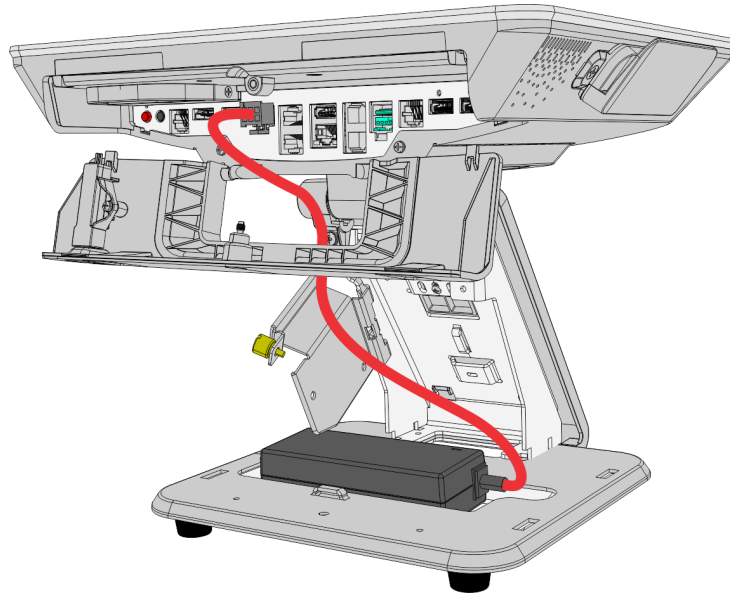8. Loosen the thumbscrew to open the Cable Door.

Cable Door

61042

9. Loosen the screw on the Terminal Cable Cover. To open, press the indentations on the Cable Cover to unlatch the cover then pivot to open.

Press Here

Thumbscrew

61040

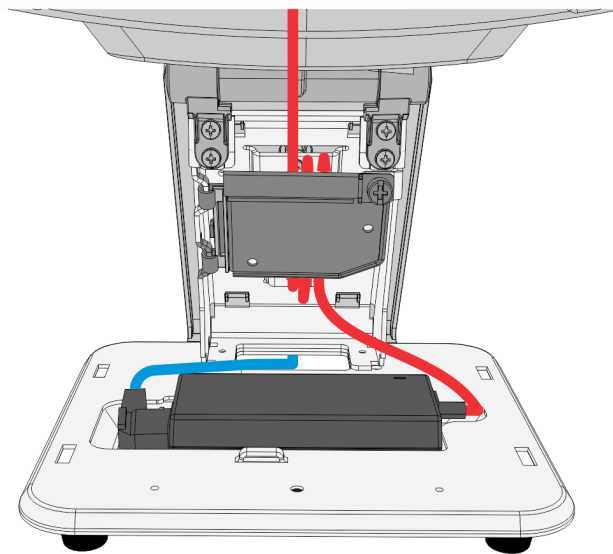10. Route the power cable up through the stand and connect the power supply cable to the **Power In** connector.

71352

11. Secure the excess power cables with a cable tie and place the cables behind the Cable Door.

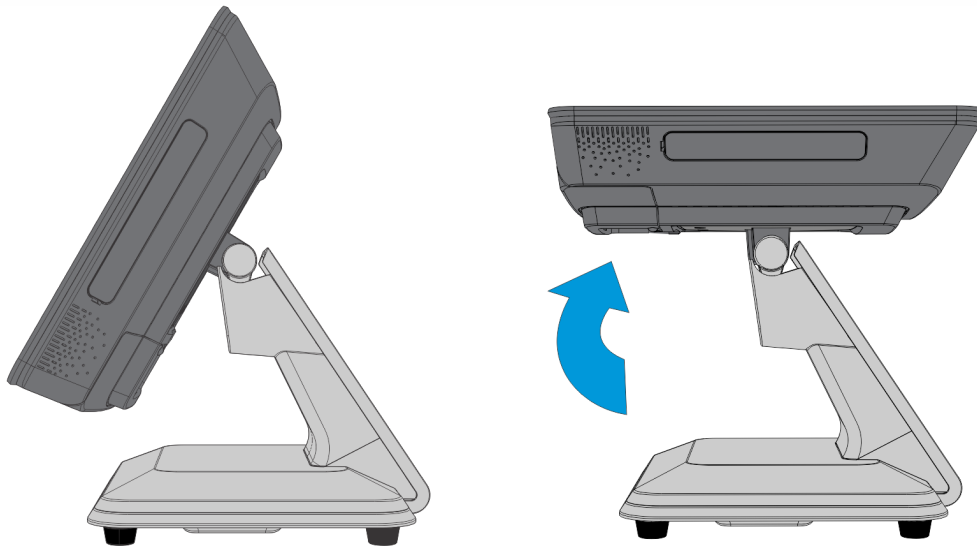12. Close the Cable Door and tighten the thumbscrew to secure the door.

61043

13. Reinstall the Base Cover and tighten thumbscrew to secure cover.
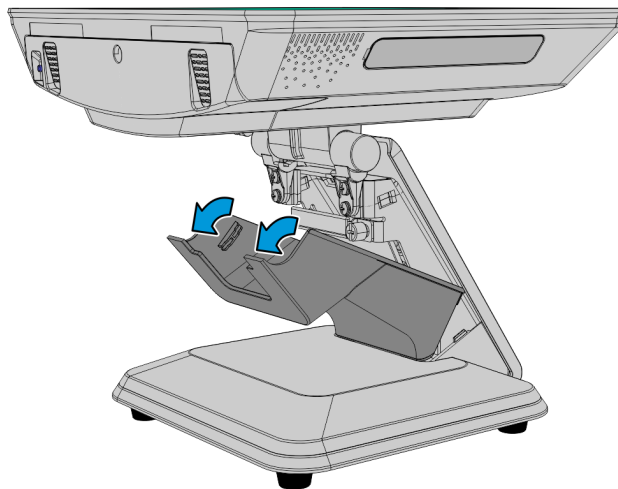
14. Connect the AC Power cord to an AC outlet.

Cable Routing

1. Pivot the display toward the back.

61031

2. Remove the Upper Stand Cover by pivoting it away from the stand. The cover has a simple snap fit connection at the top.

61032

3. Open the Cable Door (Thumbscrew).

Cable Door
Thumbscrew
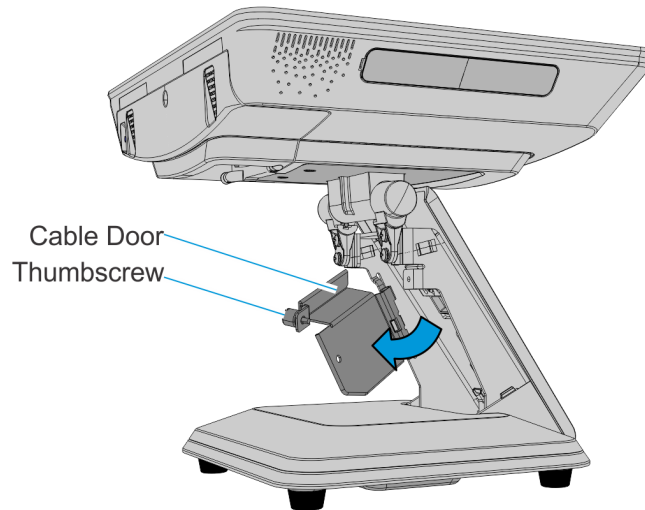
61033

4. Loosen the screw on the Terminal Cable Cover. To open, press down on the indentations in the Cable Cover to unlatch the cover and then pivot the cover open.

Note: Ensure that the screw is disengaged from the threads.

Thumbscrew

Press Here

61030

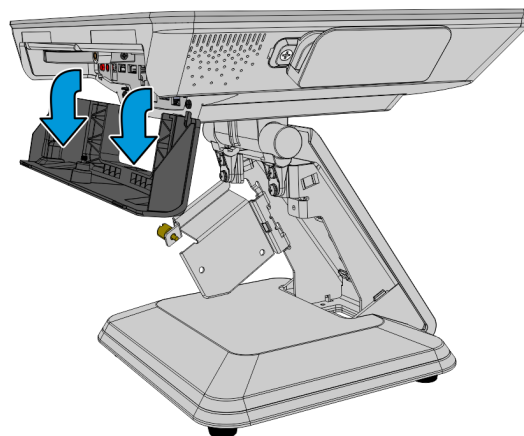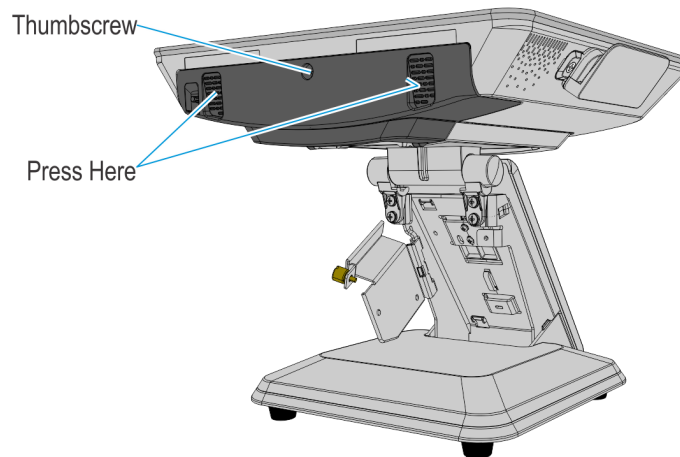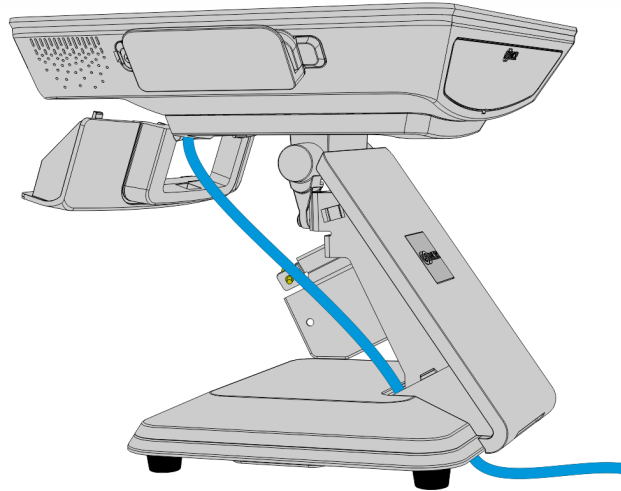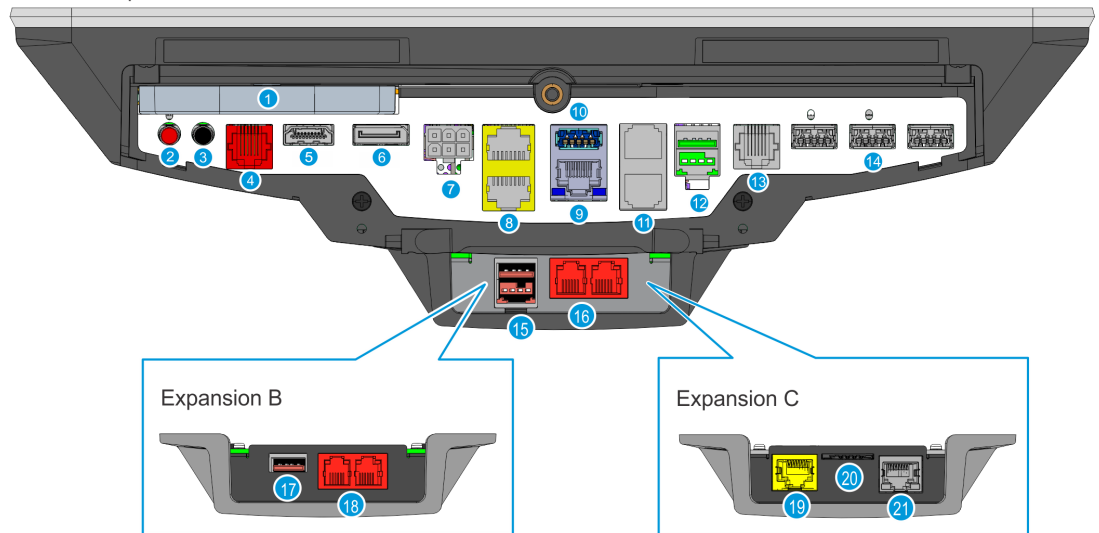5. Route the cables up through the stand and out of the Terminal Cable Cover.

61034

6. Connect the peripheral cables to the I/O Panel.

POS with Expansion A

Expansion B

Expansion C

1 – Removable SSD	**8** – RJ45 Serial Ports (2)	**15** – 24V Powered USB
2 – Power Button	**9** – Ethernet Port	**16** – RJ12 Serial Ports (2)
3 – Recovery Button	**10** – USB 3.0	**17** – 5V USB
4 – RJ12 Cash Drawer	**11** – RJ11 Serial Ports (2)	**18** – RJ12 Serial Ports (2)
5 – HDMI	**12** – 12V Powered USB	**19** – RJ45 Serial Port
6 – Display Port	**13** – RJ12 Serial Port	**20** – SIM Card Reader*
7 – Power In	**14** – USB 3.0 (3)	**21** – RJ45 Power Over Ethernet PSE

61029

Note: SIM cards must be inserted while the terminal is powered off.

7. Install the Terminal Cable Cover and tighten thumbscrew to secure cover.

8. Close the Cable Door and tighten thumbscrew to secure cable door.

9. Install the Upper Stand Cover.