Kit Instructions

XL7 Mount Bracket to 7613 Stand - Rear

7613–K477

Issue A

NCR

Revision Record

Issue	Date	Remarks
A	Apr 2018	First Issue

XL7 Mount Bracket to 7613 Stand - Rear

This kit provides a bracket to mount the NCR XL7 (5907) Display to the neck of the NCR XR3 (7613).

Kit Contents

Screw, M4-0.7x8mm, Machine, Phillips, Pan Head, with External Tooth Lock Washer
006-8622368

Bracket, XL7 Display
497-0518433

Screw, M4x8, Machine, Phillips, Pan Head
006-8615964

Neck Cover, 2x20, 7613
497-0512841

Screw, M4-0.7x8mm, Machine, Knurled Head
006-8622885

Cable, Y, USB-C to DP and USB 12V, 0.67m
497-0517925
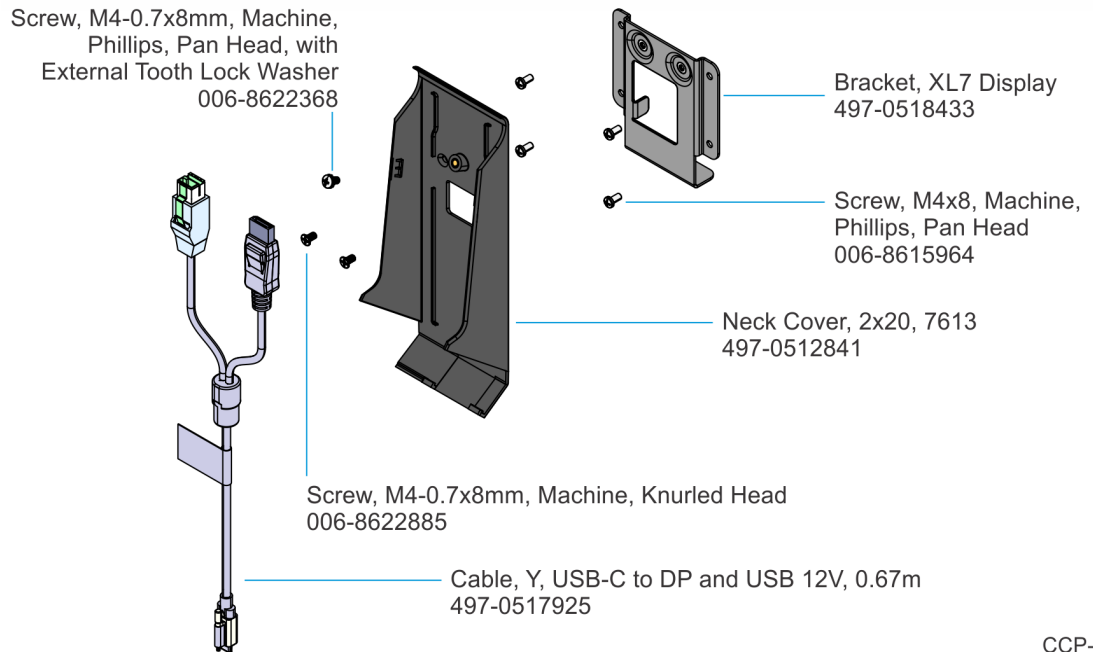
CCP-72943

Installation Procedure

1. Connect the USB-C end of the Display Cable to the back of the Display. Tighten the thumbscrew.

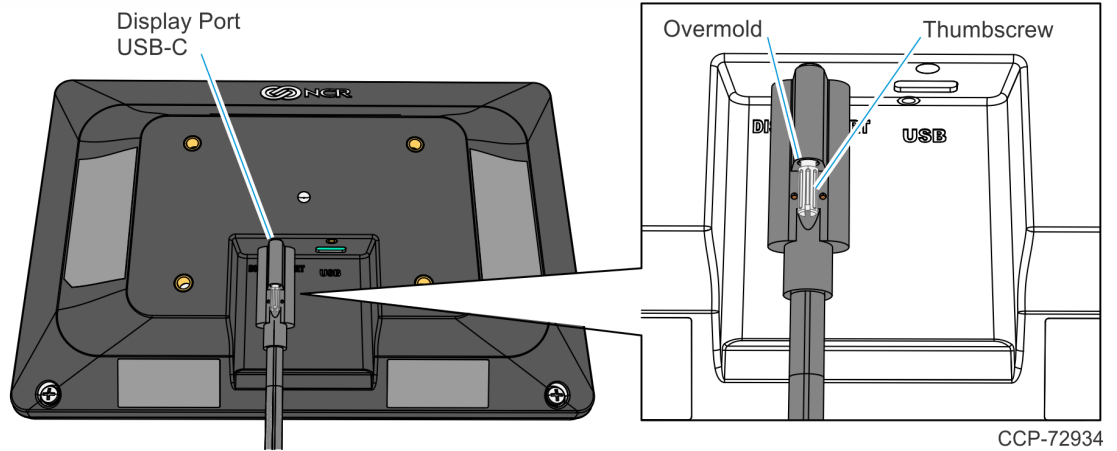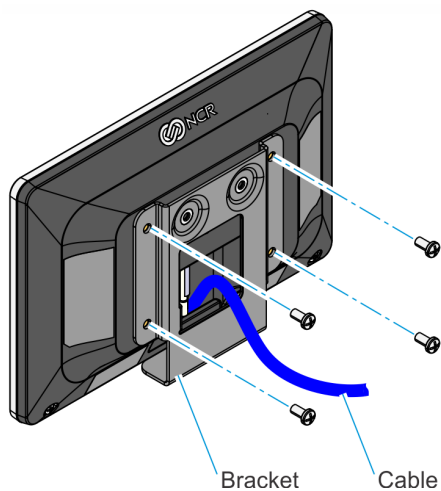   📝 **Note:** Avoid overtightening the thumbscrew by turning it only until the silver knurled portion touches the black plastic overmold. Overtightening the thumbscrew damages the connector on the board.

CCP-72934

2. Route the cable through the Bracket opening, then install the Bracket on the back of the Display (4 screws).
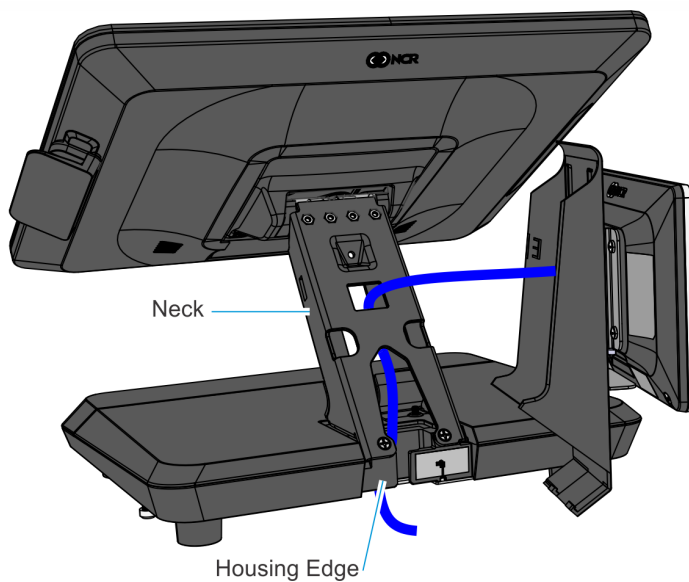

Bracket   Cable   CCP-72944

3. Route the cable through the Neck Cover, then install the Neck Cover on the Display and Bracket Assembly (2 screws).
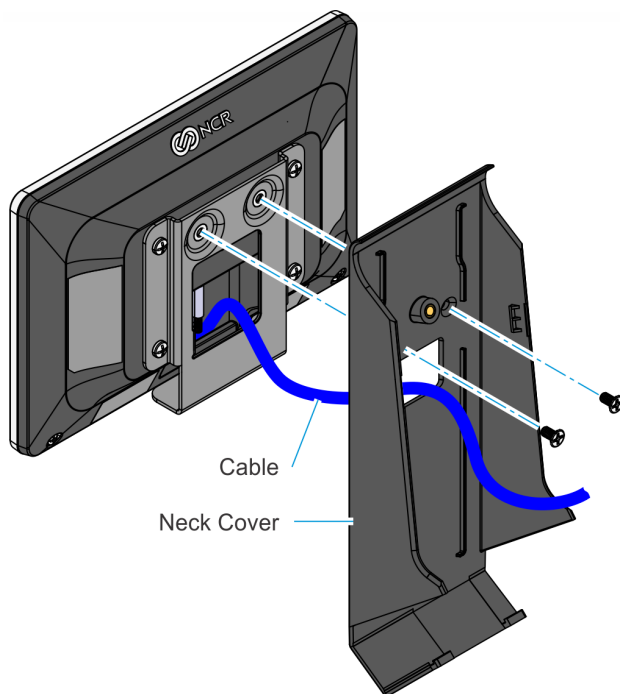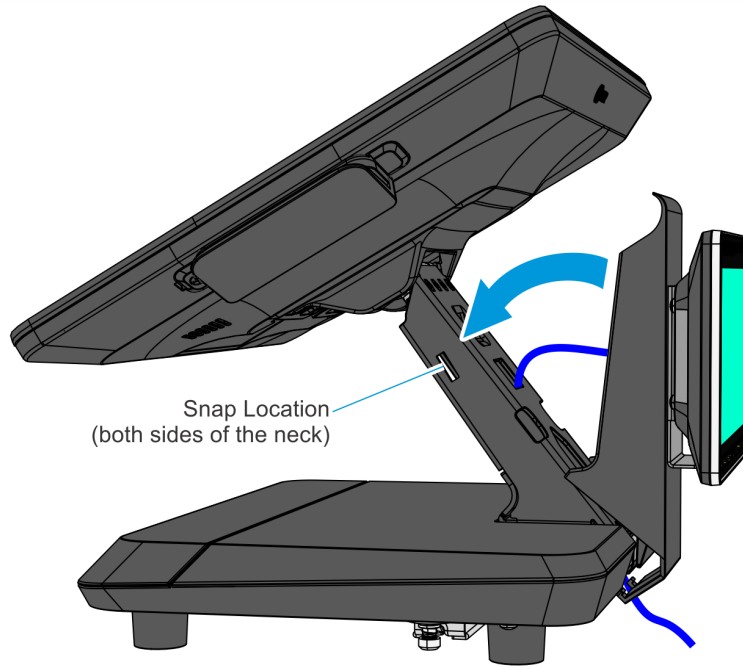

Cable

Neck Cover

CCP-72945

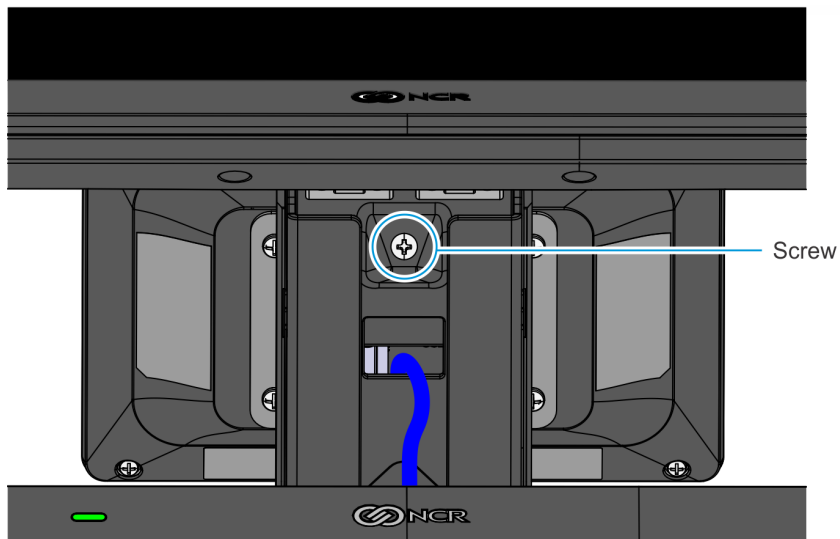4. Route the cable through the Neck and then under the housing edge.

Neck

Housing Edge

CCP-72948

5. Hook the Neck Cover onto the base housing then rotate the Neck Cover until it latches onto the Neck.

Snap Location
(both sides of the neck)

CCP-72946

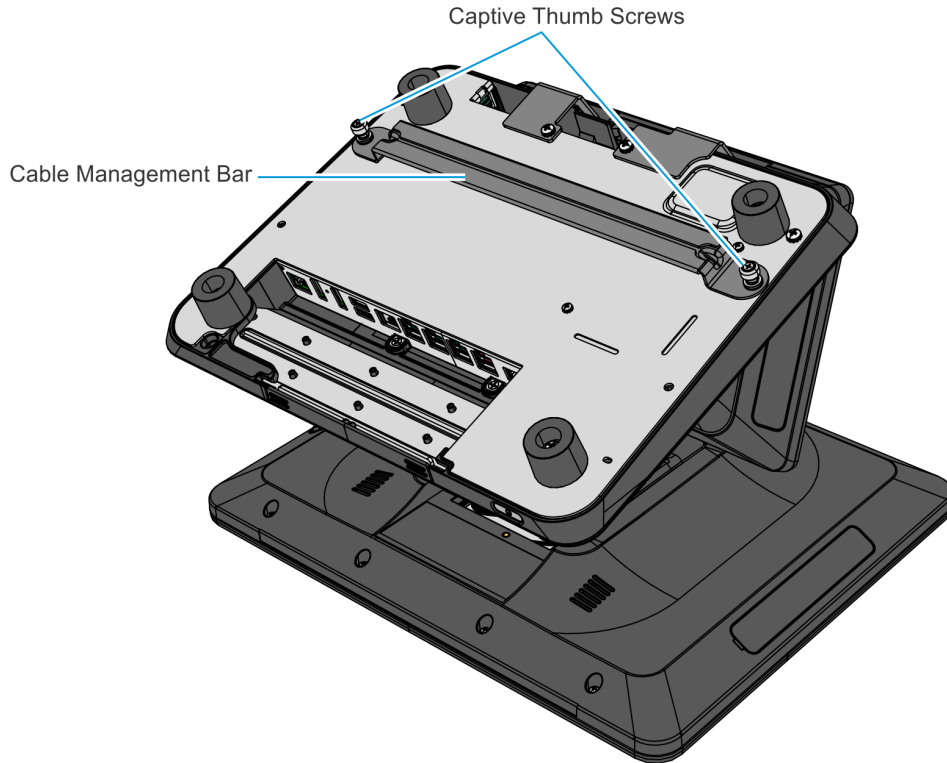6. Secure the Neck Cover from the inside of the Neck with (1) screw.

Screw

CCP-72947

7. If a Cable Management Bar is present, lay the terminal face down on a flat surface, then loosen the (2) thumbscrews to remove the Bar.
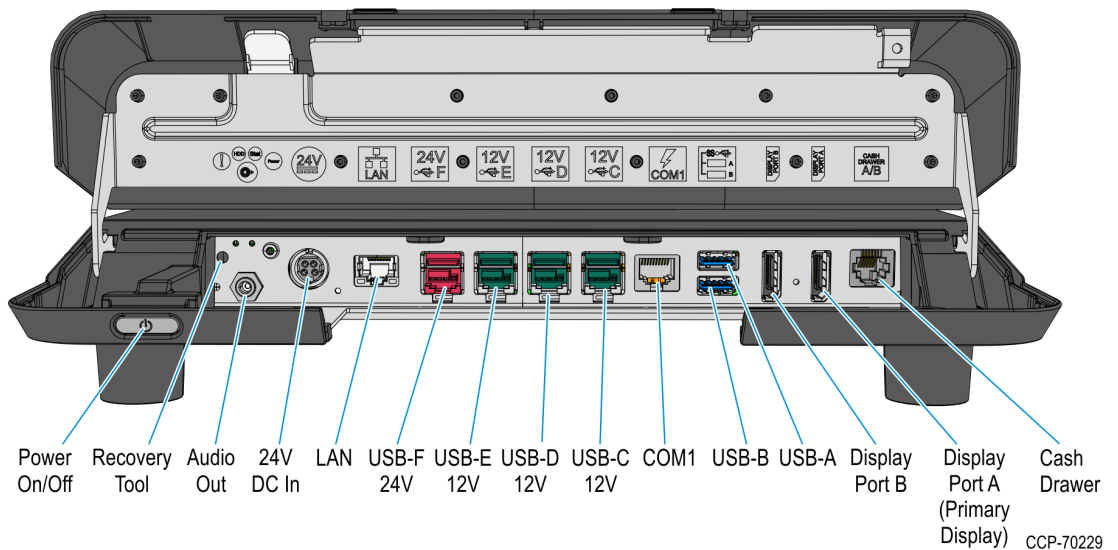
⚠️ **Caution:** Always use a soft material (cloth, foam) to protect the display screen when placing the terminal face down.

CCP-72396

8. Route and connect the Display Port and USB 12V connectors of the cable to the host terminal.

Power On/Off · Recovery Tool · Audio Out · 24V DC In · LAN · USB-F 24V · USB-E 12V · USB-D 12V · USB-C 12V · COM1 · USB-B · USB-A · Display Port B · Display Port A (Primary Display) · Cash Drawer

CCP-70229

9. If a Cable Management Bar is present, reinstall the Cable Management Bar with (2) thumbscrews.

Captive Thumb Screws

Cable Management Bar

CCP-72949