KIT INSTRUCTIONS

Rubber Feet Height Extension

Release 1.0





The product described in this document is a licensed product of NCR Corporation.

NCR is a registered trademark of NCR Corporation. Product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Where creation of derivative works, modifications or copies of this NCR copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR, NCR's copyright notice must be included.

It is the policy of NCR Corporation (NCR) to improve products as new technology, components, software, and firmware become available. NCR, therefore, reserves the right to change specifications without prior notice.

All features, functions, and operations described herein may not be marketed by NCR in all parts of the world. In some instances, photographs are of equipment prototypes. Therefore, before using this document, consult with your NCR representative or NCR office for information that is applicable and current.

To maintain the quality of our publications, we need your comments on the accuracy, clarity, organization, and value of this book. Please use the link below to send your comments.

EMail: FD230036@ncr.com

Copyright © 2017 By NCR Corporation Duluth, GA U.S.A. All Rights Reserved

Revision Record


Issue	Date	Remarks
Α	Apr 2017	First Issue

Rubber Feet Height Extension

Introduction

This kit provides rubber feet height extension for a P-Series stand.

Kit Content

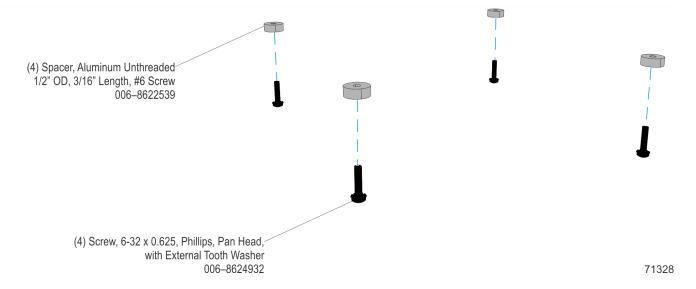


Installation Procedure

1. Lay the terminal face down on a flat surface.




Caution: Always use a soft material (cloth, foam) to protect the display screen when placing the terminal face down.

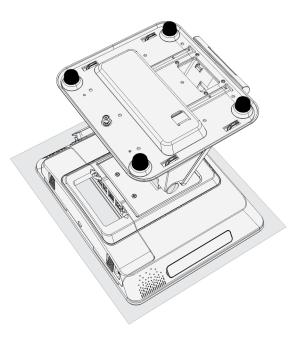


71327

2. Remove the screws (4) that secure the rubber feet (4). Remove the rubber feet.

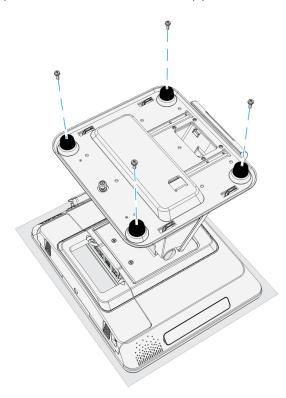

3. Mount the spacers (4).

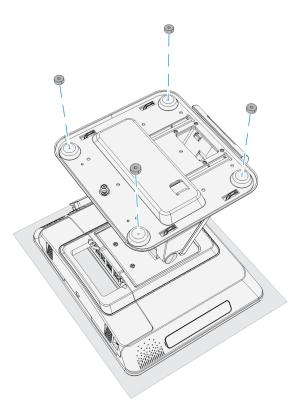

71331

4. Mount the rubber feet (4) and secure with $6-32 \times 0.625$ screws (4).

