



NCR Voyix SelfServ™ 90 (7709)

Kit Instructions

Japan MSR Filler Label

7709-K905

Issue B

Copyright and Trademark Information

The product described in this document is a copyrighted work of NCR Voyix Corporation.

NCR Voyix SelfServ™ 90 (7709) is a trademark of NCR Voyix Corporation.

It is the policy of NCR Voyix Corporation to improve products as technology, components, software and firmware become available. NCR Voyix therefore reserves the right to change specifications without prior notice.

All features, functions and operations described herein may not be marketed by NCR Voyix in all parts of the world. In some instances, photographs are of equipment prototypes.

Therefore, before using this document, consult with your NCR Voyix representative or NCR Voyix office for information that is applicable and current.

© 2020 – 2026

By NCR Voyix Corporation

Atlanta, Georgia, USA

All Rights Reserved

Table of Contents

7709-K905 Japan MSR Filler Label	5
Kit Contents	5
Installation Procedure	6


Revision Record

Publication issue	Date	Description of change
A	Aug 2020	First issue.
B	Jan 2026	Updated with NCR Voyix brand.

7709-K905 Japan MSR Filler Label

This publication provides procedures for installing the MSR Filler Label to disable the MSR device on the NCR Voyix SelfServ™ 90 (7709) Kiosk.

Kit Contents

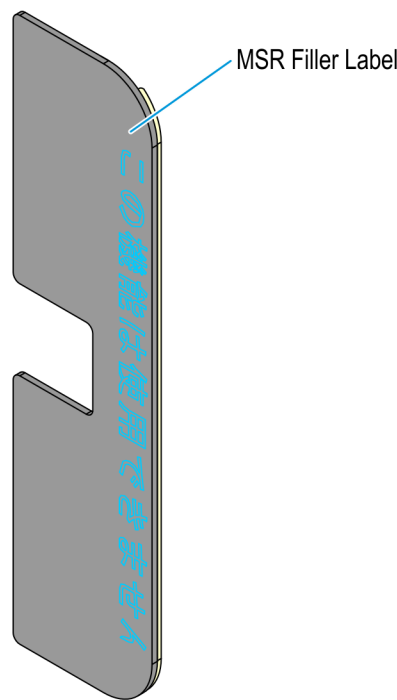

CCP-79196

Part Number	Description
497-0528550	7709-K905 Japan MSR Filler Label
* 497-0528441	Filler - 7709 MSR Label (This Device Is Disabled)
* 497-0423108	Instructions-Kit (Reference Sheet)

* Items marked with an asterisk are not called out on the image.


Installation Procedure

1. Remove the adhesive liner from the Poron Foam at the back of the MSR Filler Label.



Caution

Ensure that the Poron Foam is not damaged; otherwise, the MSR Filler Label may not properly adhere to the MSR device.

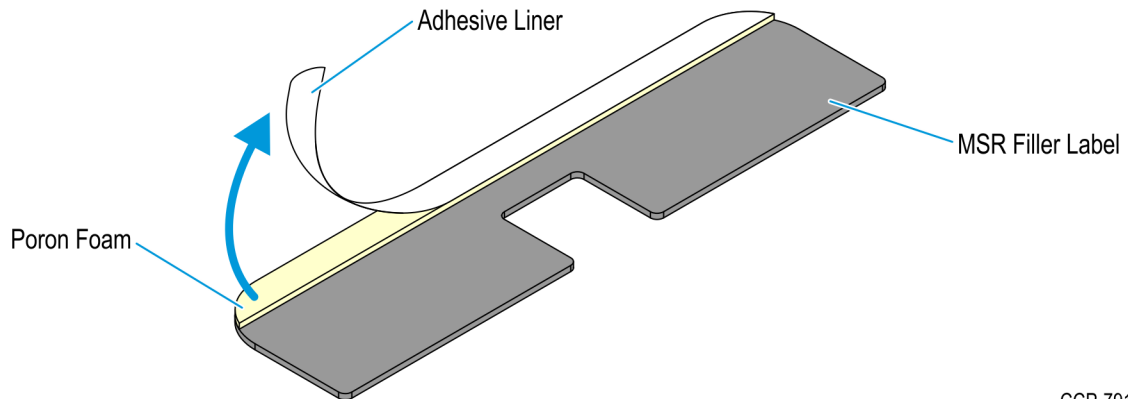

2. With the Poron Foam on the right-hand side, insert the Filler Label into the slot in the MSR device.




3. Align the edges of the Filler Label with the edges of the MSR device, and then apply pressure on the Filler Label to allow the adhesive to properly attach onto the MSR surface.



Note

Ensure that there is no gap between the Poron Foam and the MSR surface.

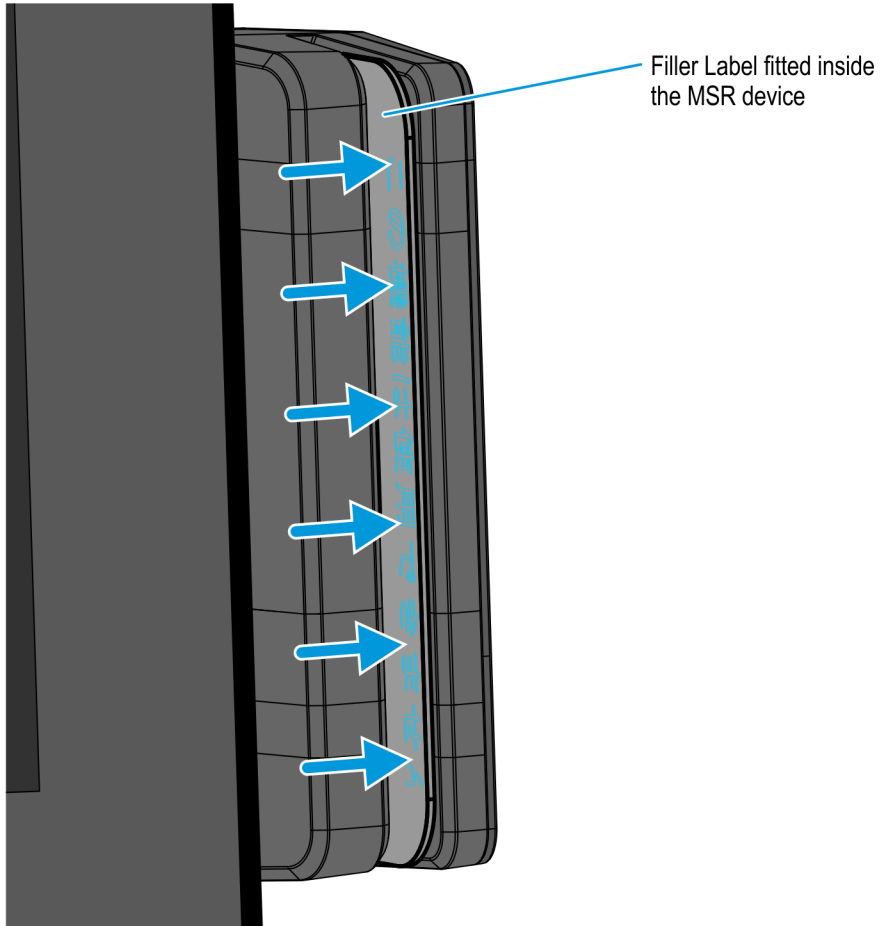

CCP-79199