




# Kit Instructions

## Metal Scale Pod Constraints

---

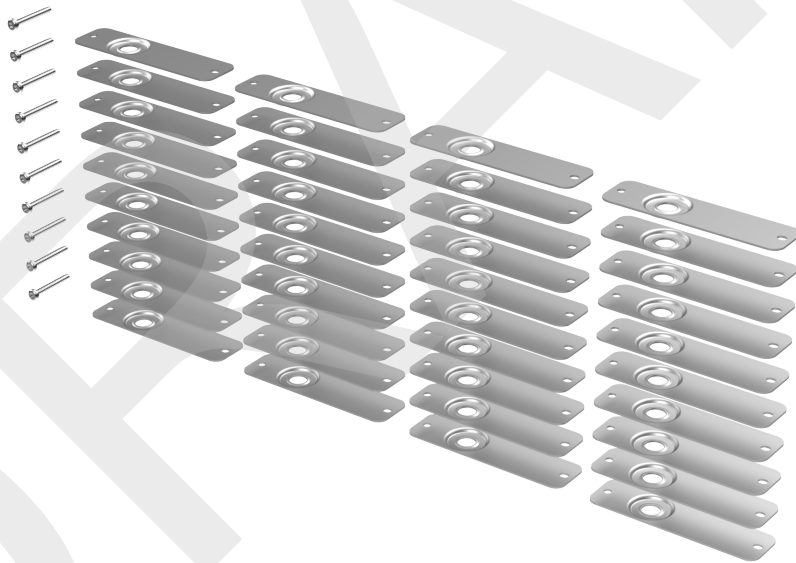

7371-K009

Issue A

# Copyright and Trademark Information

---

The product described in this document is a licensed product of NCR Voyix Corporation.

NCR Voyix SCO Hardware is a trademark of NCR Voyix Corporation in the United States and/or other countries. Other product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Where creation of derivative works, modifications or copies of this NCR Voyix copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR Voyix, NCR Voyix's copyright notice must be included.

Disclaimer:

It is the policy of NCR Voyix Corporation to improve products as technology, components, software and firmware become available. NCR Voyix therefore reserves the right to change specifications without prior notice.

All features, functions and operations described herein may not be marketed by NCR Voyix in all parts of the world. In some instances, photographs are of equipment prototypes.

Therefore, before using this document, consult with your NCR Voyix representative or NCR Voyix office for information that is applicable and current.

© 2025

By NCR Voyix Corporation

Atlanta, Georgia, USA

All Rights Reserved

# Table of Contents

---

<b>7371-K009 Metal Scale Pod Constraints</b>	<b>5</b>
Kit Contents	6
Required Tool	6
Installation Procedures	7
Removing the Plastic Scale Pod Constraints	10
Removing Scale Tray Fence and Backsplash	12

# Revision Record

---

Publication issue	Date	Description of change
A	Apr 2025	First issue.


# 7371-K009 Metal Scale Pod Constraints

---

This publication provides procedures for installing the 7371-K009 Metal Scale Pod Constraints to the Scale Tray of the Modular Bagwells below.

- 7371-K001 1 Bagwell (with Scale)
- 7371-K002 1 Bagwell (No Scale)
- 7371-K003 Bagwell Expansion

# Kit Contents

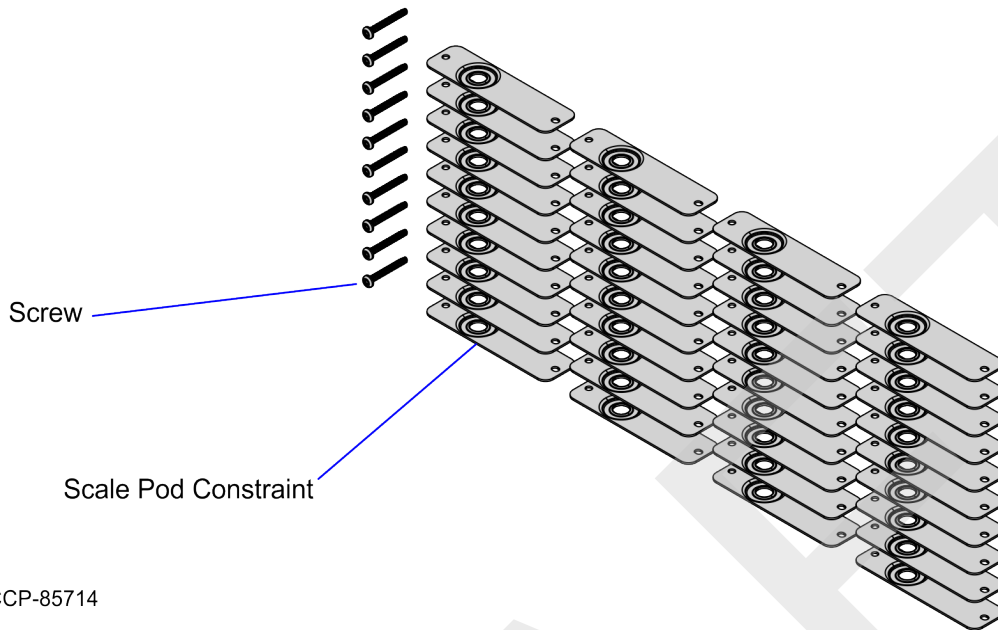

CCP-85714

Part Number	Description
497-0538680	7371-K009 Metal Scale Pod Constraints
497-0538675	Scale Pod Constraint (40 pcs)
006-8628550	Screw - Torx Pan Head Thread-Forming, #10 X 1.5" Long (10 pcs)

## Required Tool

- T20 Torx bit

# Installation Procedures

To install the 7371-K009 Metal Scale Pod Constraints, follow these steps:

1. Turn off the NCR Voyix Self-Checkout software and hardware systems.
2. Remove the plastic Scale Pod Constraints. For more information, refer to "[Removing the Plastic Scale Pod Constraints](#)" on page 10.


3. Under the Scale Tray, use a T20 Torx bit to remove screws from the Scale Tray Tubes. Depending on the Scale Tray, refer to the images below for the locations of each screw.




#### Note

Set the screws aside to attach the metal Scale Pod Constraints on the Scale Tray Tubes.

### 1-Bag Modular Bagwell Scale Tray

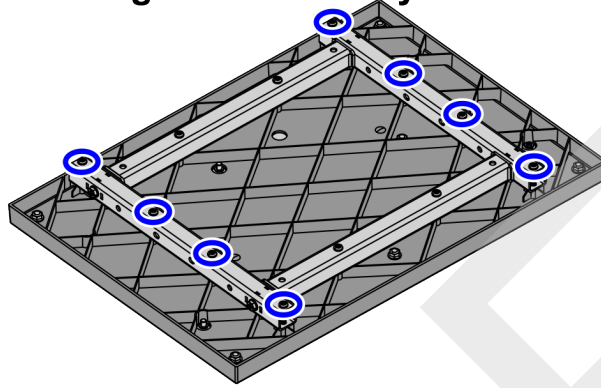

### Expanded Modular Bagwell Scale Tray

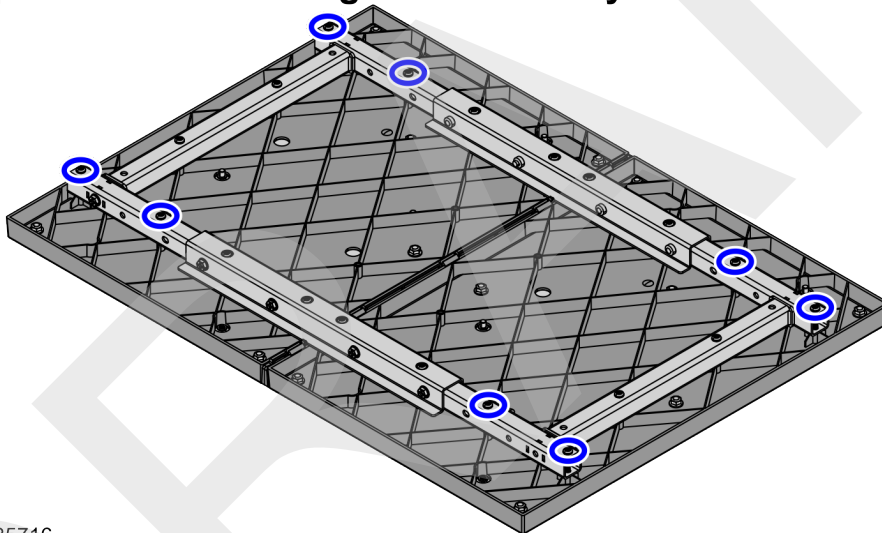


CCP-85716




4. Using two (2) screws, attach a metal Scale Pod Constraint on each corner of the Scale Tray Tubes. Depending on the Scale Tray, refer to the images below.

### 1-Bag Modular Bagwell Scale Tray

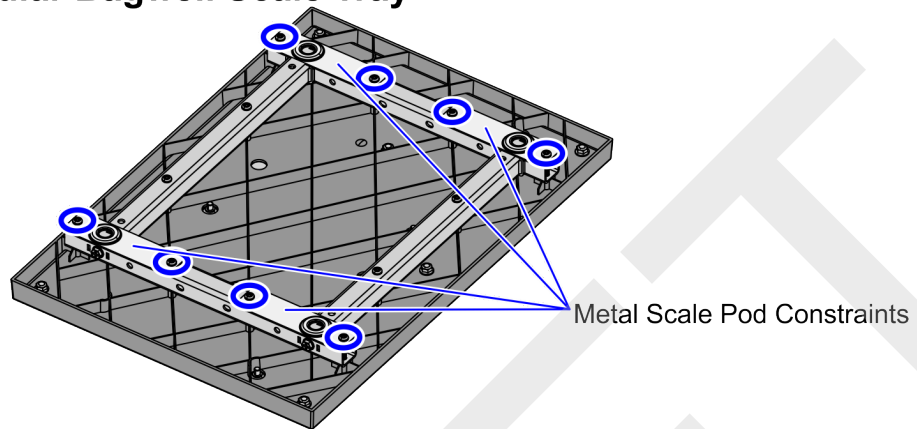

### Expanded Modular Bagwell Scale Tray

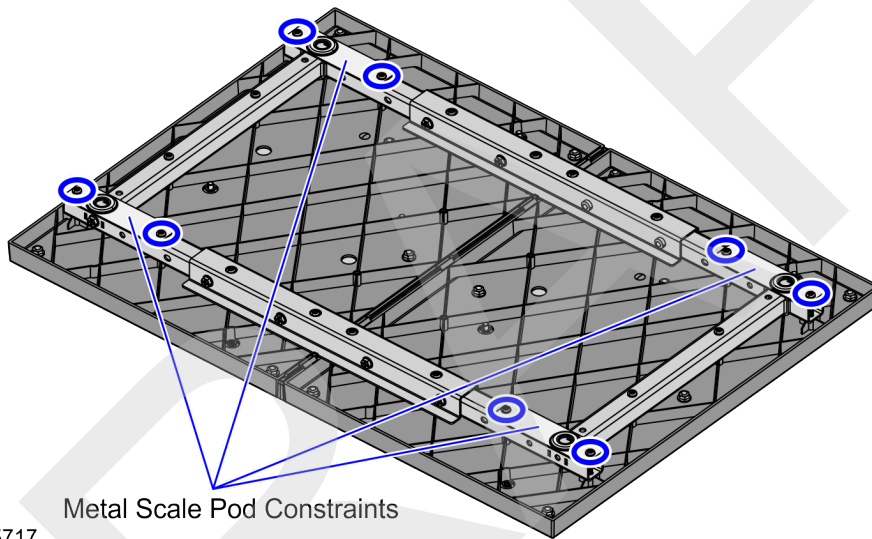

CCP-85717

# Removing the Plastic Scale Pod Constraints


To remove the plastic Scale Pod Constraints, follow these steps:

1. If necessary, remove the Scale Tray Fence and Backsplash. For more information, refer to ["Removing Scale Tray Fence and Backsplash"](#) on page 12.
2. Lift and remove the Scale Tray from the Bagwell.



## Example


The image below shows a 1-Bag Bagwell Scale Tray for reference only.

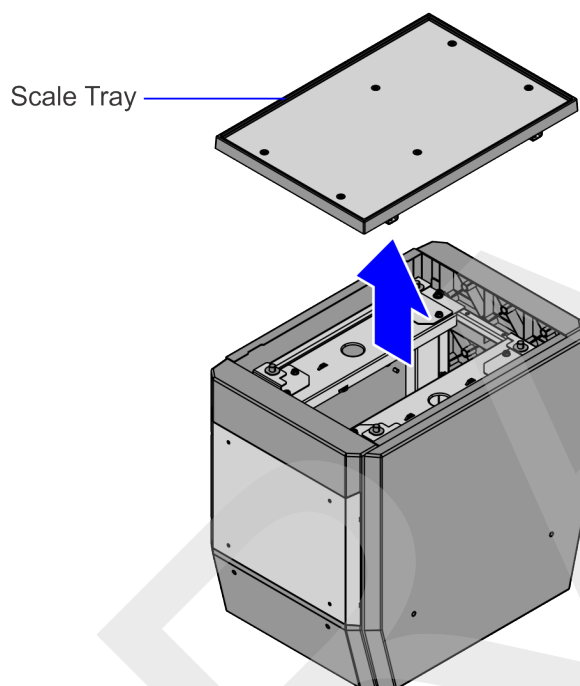


CCP-82958

3. Under the existing Scale Tray, use your fingers to pull and detach each Plastic Scale Pod Constraint, as shown in the images below.

### 1-Bag Modular Bagwell Scale Tray

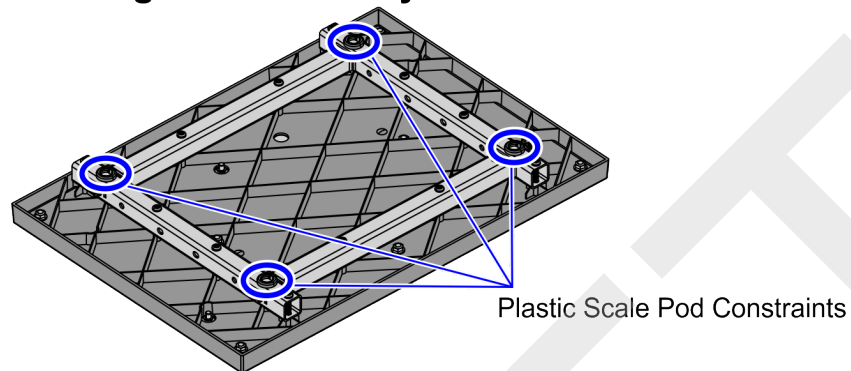

### Expanded Modular Bagwell Scale Tray

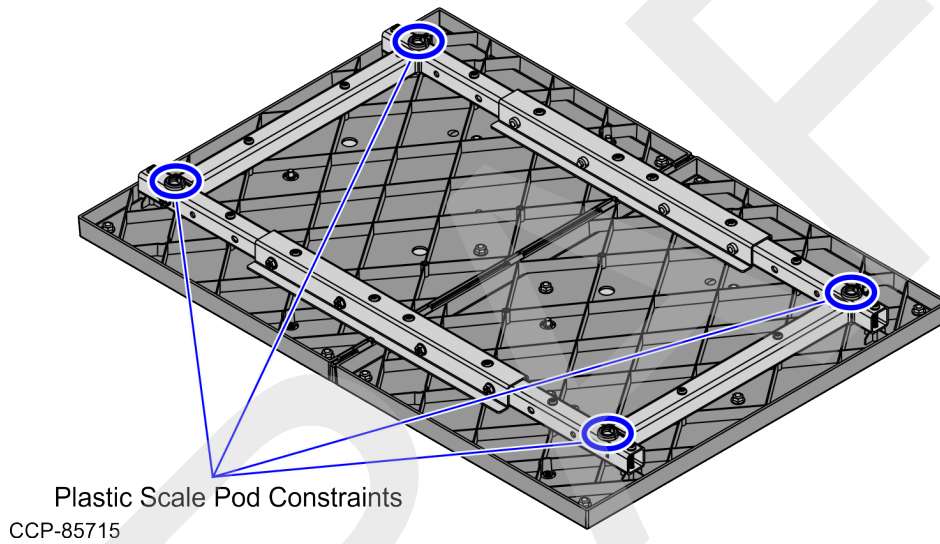

# Removing Scale Tray Fence and Backsplash


To remove the with Fence and Backsplash from the Scale Tray, follow these steps:



## Note

A Scale Tray may only have a Backsplash.

1. Remove two (2) nuts to detach each Fence from the Backsplash, as shown in the image below.

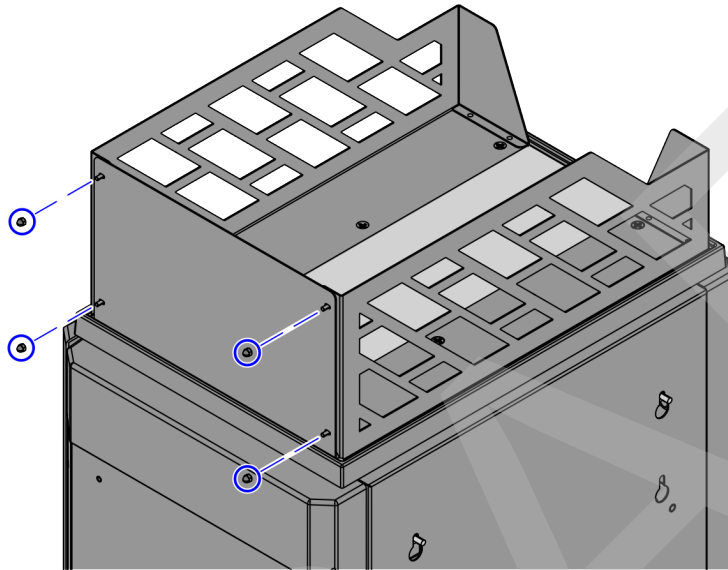


CCP-82881

2. Remove four (4) screws to detach each Fence from the Scale Tray.


**Note**

Set aside the four (4) screws for reinstallation.

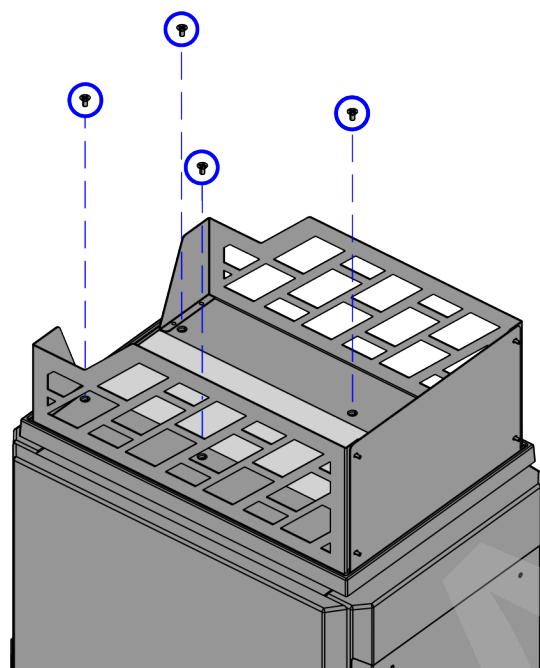

CCP-82880

3. Remove two (2) screws to detach the Backsplash from the Scale Tray.

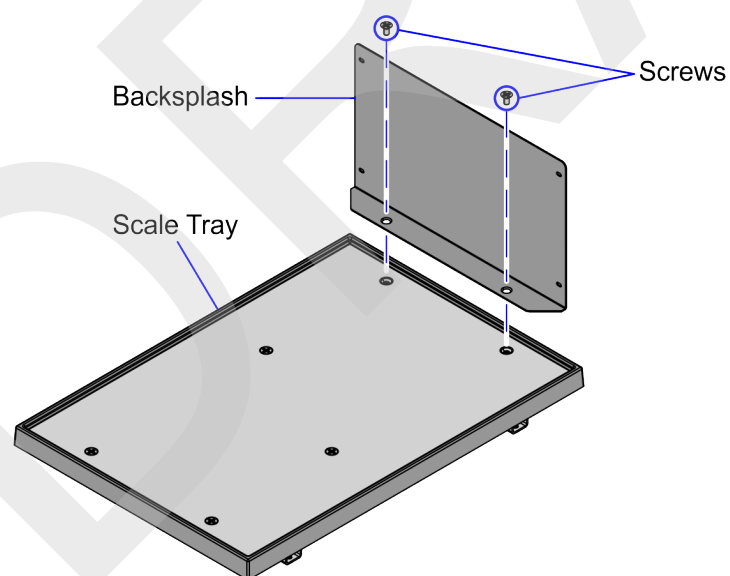

CCP-82909