



NCR Voyix 9700

Biometrics with UV Light for
7761/7745

9700-0009-7761



BCC5-0000-5785

Issue B

Copyright and Trademark Information

The product described in this document is a licensed product of NCR Voyix Corporation.

NCR Voyix Configurable Assemblies is a trademark of NCR Voyix Corporation in the United States and/or other countries. Other product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Where creation of derivative works, modifications or copies of this NCR Voyix copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR Voyix, NCR Voyix's copyright notice must be included.

Disclaimer:

It is the policy of NCR Voyix Corporation to improve products as technology, components, software and firmware become available. NCR Voyix therefore reserves the right to change specifications without prior notice.

All features, functions and operations described herein may not be marketed by NCR Voyix in all parts of the world. In some instances, photographs are of equipment prototypes.

Therefore, before using this document, consult with your NCR Voyix representative or NCR Voyix office for information that is applicable and current.

© 2016–2025

By NCR Voyix Corporation

Atlanta, Georgia, USA

All Rights Reserved

Preface

Audience

This publication is written for hardware installer/service personnel, system integrators, and field engineers.



Note

This document is NCR Voyix proprietary information and is not to be disclosed or reproduced without consent.

Table of Contents

9700-0009-7761 Biometrics with UV Light for 7761/7745 6

Installation Procedure 7

Revision Record

Publication issue	Date	Description of change
A	Aug 2016	First issue
B	Jul 2025	<ul style="list-style-type: none">• Updated to NCR Voyix brand.• Added IP book number.

9700-0009-7761 Biometrics with UV Light for 7761/7745


This kit provides the components to add a Biometrics with Biokey with UV Light.

NOTICE:
UV emitted from this product




Caution

Avoid looking directly at UV lights.

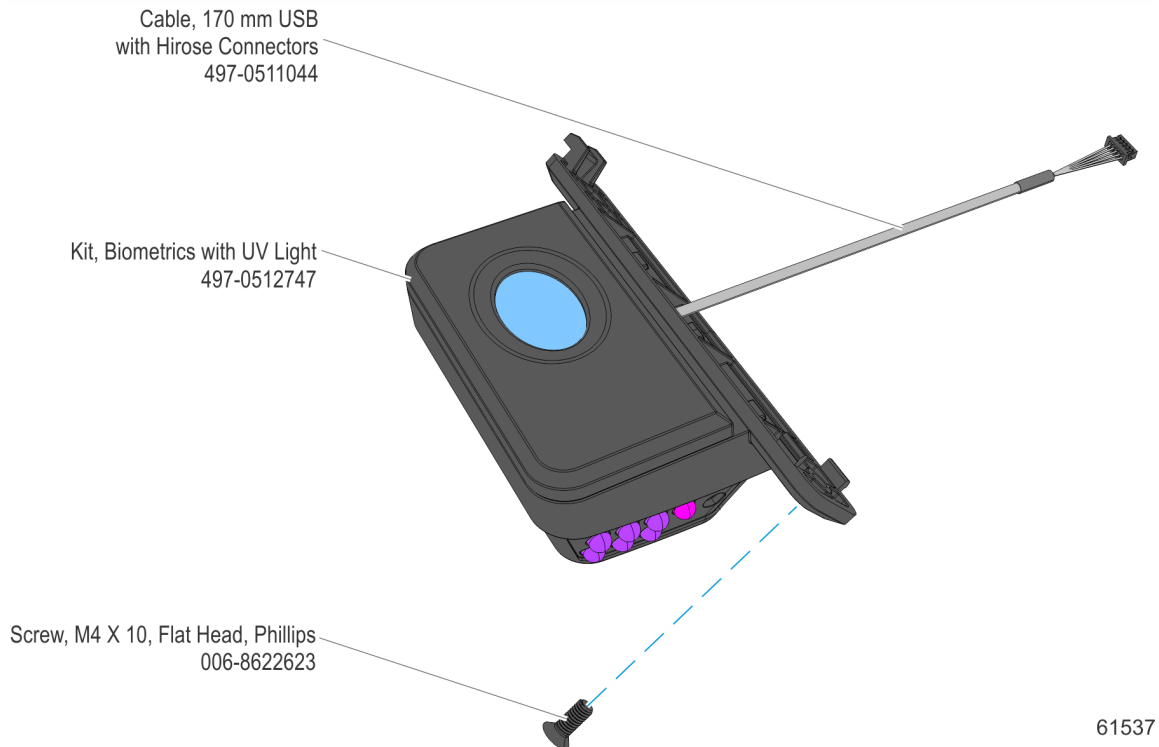


Installation Procedure

1. Remove the Blank Plate, if any, from the rear housing.

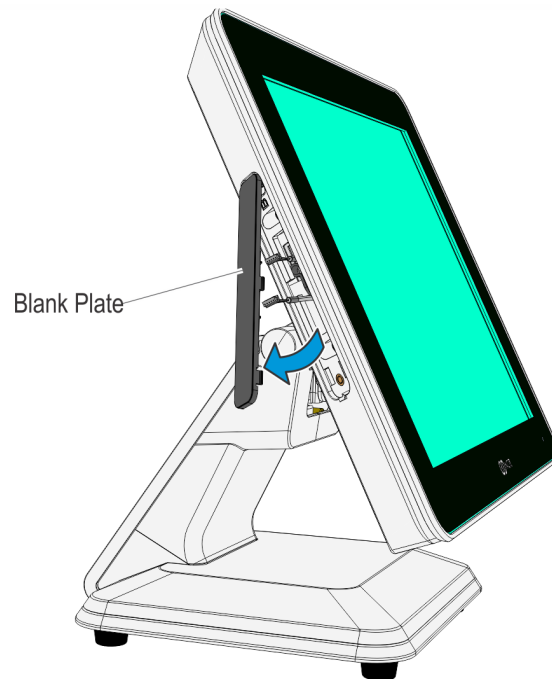


60429

2. Disengage the UV Light from the biometrics.
 - a. Remove the screws (2) that secure the UV Light.

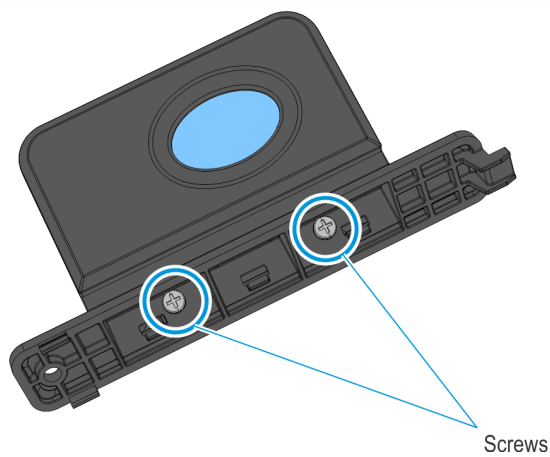


61531

- b. Rotate the UV Light module until it is detached.

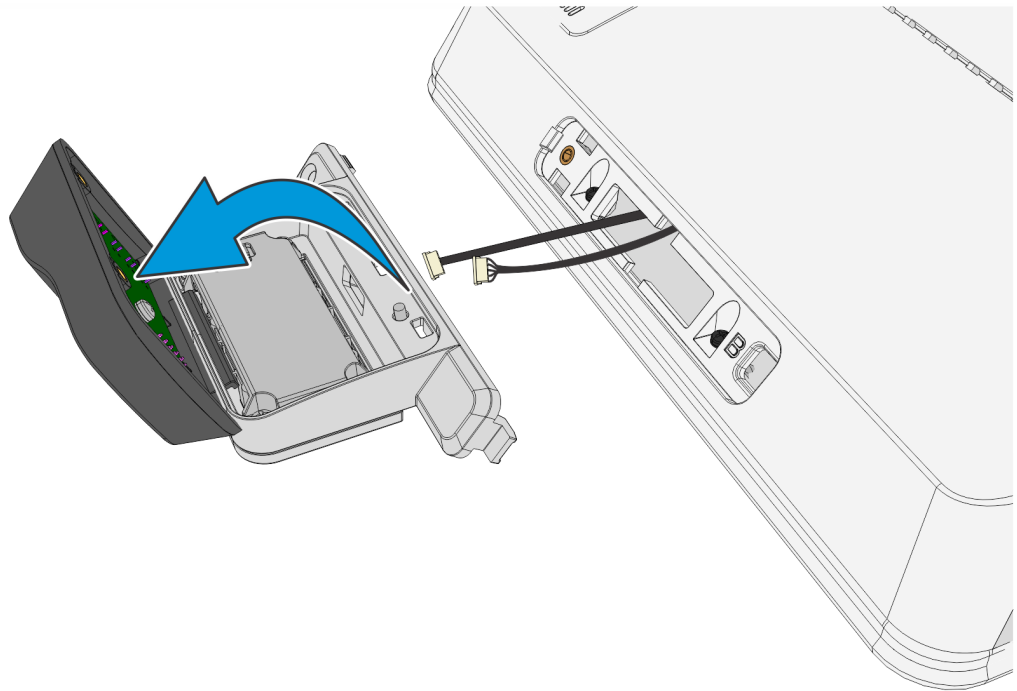


61533

3. Route and connect the Biometrics and UV Light cables to the corresponding connectors through the opening in the bracket.

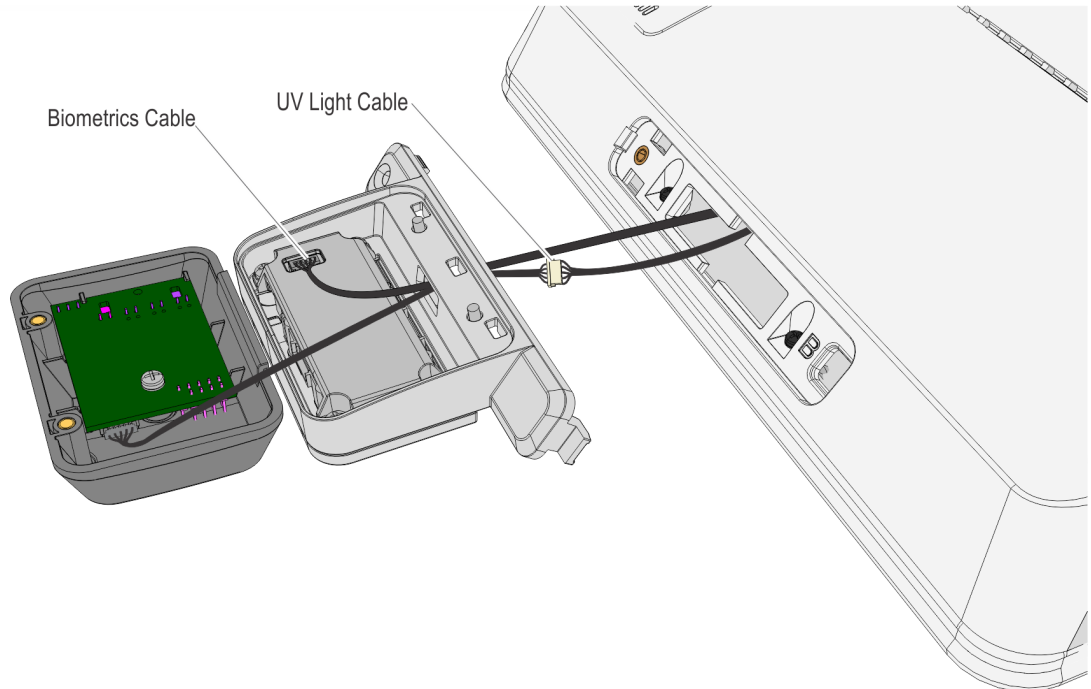


61106

4. Snap the UV Light into the bracket. Ensure the snaps are fully engaged.

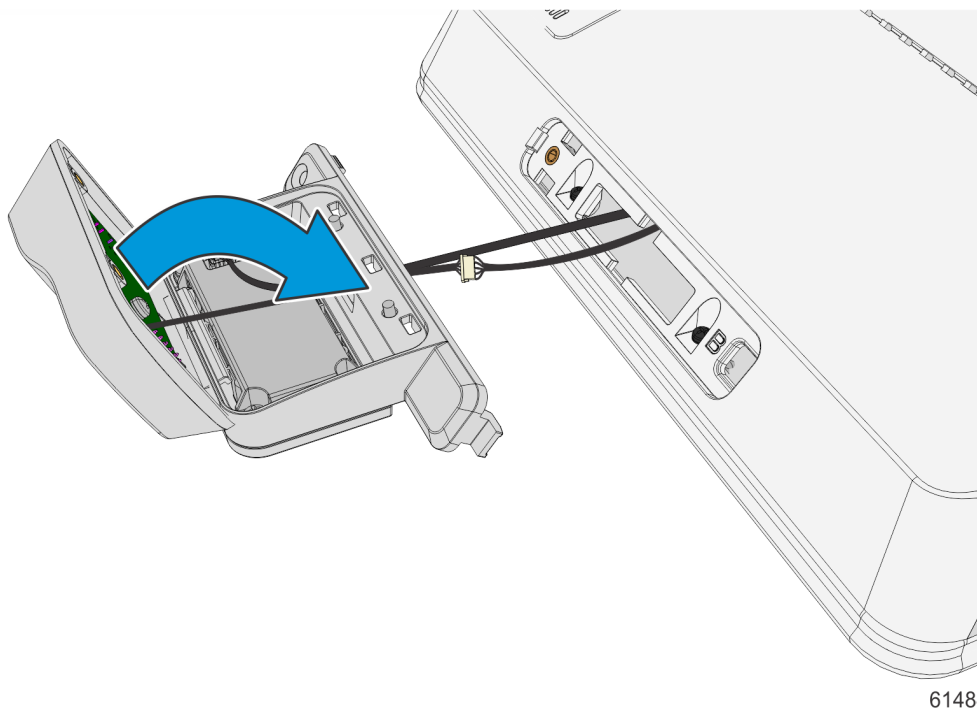

5. Secure with screws (2).

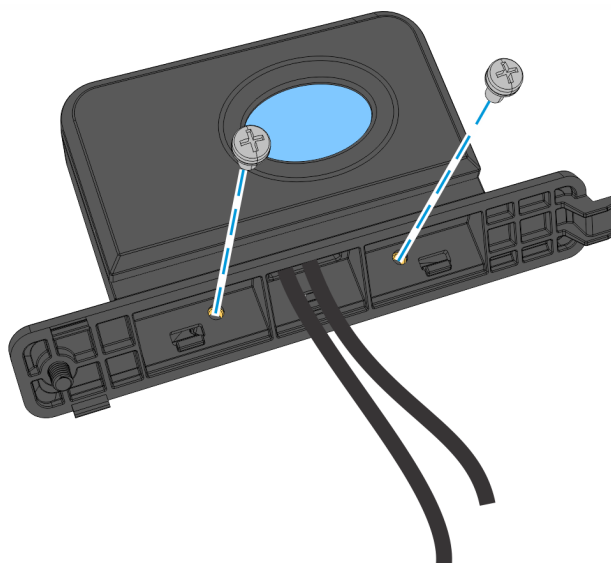


6. Gently push the biometrics and UV light cables into the rear housing.

7. Hook the biometrics and UV Light assembly into rear housing and snap into place.



60439

8. Secure with screw (1).

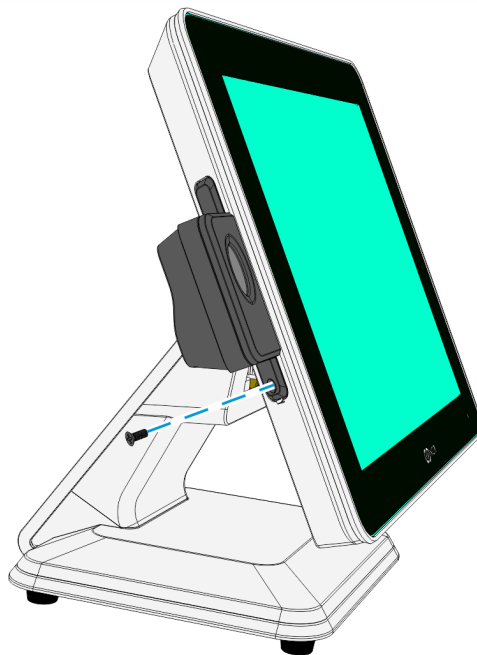

60440